
DIMENSIONS

MODEL #	PIPE SIZE	Cv*	WEIGHT (STANDARD VALVE)	WEIGHT (FAIL SAFE VALVE)	DIMENSIONS (APPROXIMATE)					
					A**	AW	B	B1	C	D
K531	0.75", 1.00" (20,25mm)	18.0 (15.6 Kv)	1.7 lbs (0.8 kg)	3.0 lbs (1.4 kg)	5.75" (146 mm)	8.12" (206 mm)	6.00" (152 mm)	8.62" (220 mm)	2.04" (52 mm)	1.38" (35 mm)
K534	1.5" (40 mm)	46.0 (39.8 Kv)	4.0 lbs (1.8 kg)	7.5 lbs (3.4 kg)	8.38" (213 mm)	11.00" (279 mm)	8.07" (205 mm)	13.46" (342 mm)	2.62" (67 mm)	1.96" (50 mm)
K535	2.0" (50 mm)	84.0 (72.6 Kv)	8.0 lbs (3.6 kg)	15.0 lbs (6.8 kg)	9.88" (251 mm)	12.88" (333 mm)	9.12" (232 mm)	14.28" (363 mm)	3.18" (81 mm)	2.18" (51 mm)
K537	3.0" (75 mm)	2000 (173.0 Kv)	11.5 lbs (5.2 kg)	27.0 lbs (12.3 kg)	11.13" (283 mm)	15.25" (387 mm)	11.41" (290 mm)	17.06" (433 mm)	3.79" (96 mm)	2.68" (68 mm)

*Cv is the flowrate in gallons per minute of water at 60°F at 1 psi pressure drop or (Kv) (flowrate in cubic meters per hour of water at (15.5°C) at 1 bar pressure drop).
**The "A" dimension is the distance between face to face seal surfaces.

(Models K531 - K537)

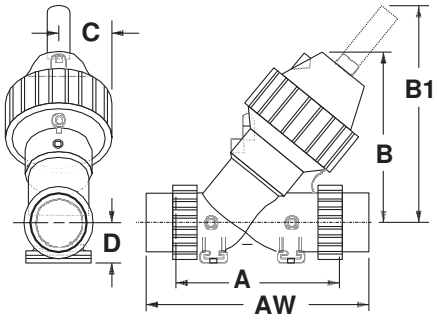


OPERATING SPECIFICATIONS

MaxPressure 125 psi (8.6 bar)
MaxTemperature† 140°F (60°C)

†IAPMO R&T NSF/ANSI 61 and NSF/ANSI 372 certifications are limited to restrictions below. Other options were not tested for certification:
Cold water applications below 73°F (23°C).
Normally Open valves.
EPDM seal material (seal option #1).

PERFORMANCE DATA

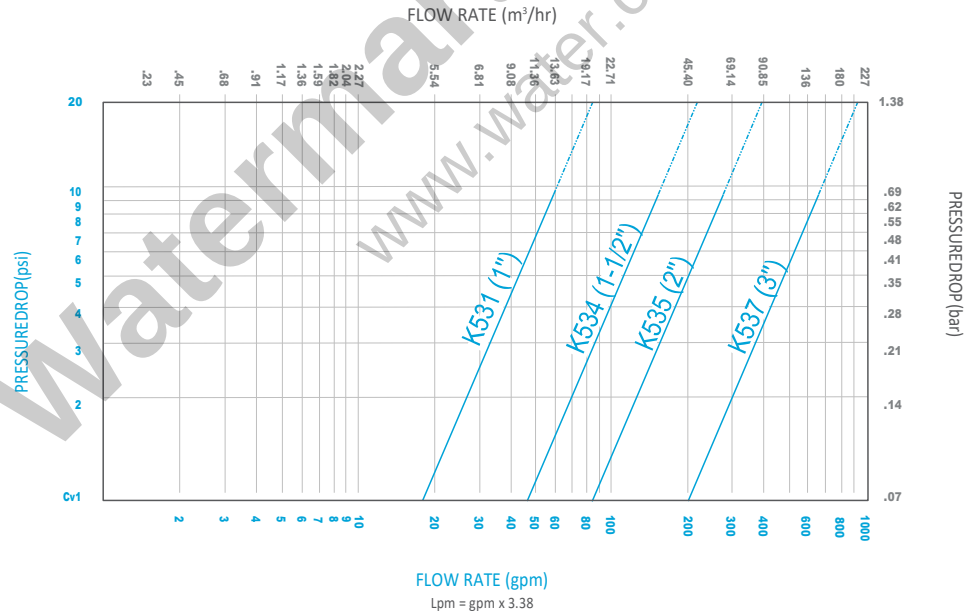

16605 West Victor Rd. New Berlin, WI 53151

P: 262-326-0100 | www.aq-matic.com | techsupport@aq-matic.com

© 2016 AQ Matic Valve and Controls Company, Inc. All rights reserved.

All AQ Matic trademarks and logos are owned by AQ Matic or its affiliates. All other registered and unregistered trademarks and logos are the property of their respective owners. Because we are continuously improving our products and services, AQ Matic reserves the right to change specifications without prior notice. AQ Matic is an equal opportunity employer.

Watermart Perkasa
www.water.co.id
PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

K53 SERIES DIAPHRAGM VALVE MASTER CHART

*** FILL IN PROPER DESIGNATIONS TO DETERMINE PRODUCT NUMBER:** K 5 3 _ - X 2 _ _ - _ 4 _ _ _

BODY SIZE (std)
1 = 1"
4 = 1-1/2"
5 = 2"
7 = 3"

END CONNECTIONS (X std)
X = None

BODY & CAP MATERIAL (2 std)
2 = Noryl

VALVE OPTIONS (00 std) [XNC not valid with solenoid configurations]

00 = NO	05 = Spring Closed 100#	A2 = LS, PI, SAC
01 = NO, SAO	10 = NO, LS	B2 = XNC, SAC
02 = NO, SAC	11 = NO, LS, SAO	C2 = XNC, LS, SAC
03 = Spring Closed 30#	12 = NO, LS, SAC	D2 = XNC, LS, PI, SAC
04 = Spring Closed 60#	A1 = LS, PI, SAO	SX = Special Valve **

SEAL MATERIALS (1 std) (Option 6 not available on series 535 & 537 valves)
(Option 5 not available on XNC or solenoid EO or EC valves)

OPT.	OPERATING DIAPHRAGM	SEALING DISK	DYNAMIC SEALS	STATIC SEALS	KIT SERIES	TYPICAL USE
1	Buna-N	EP	EP	EP	RAE	Water
5	Buna-N	Fluoroelast.	Fluoroelast.	Fluoroelast.	RAVFB	Acid
6	Buna-N	Butyl	Butyl	Butyl	RAJ	Caustic

INTERNAL PARTS (4 std)
4 = Noryl/PVC (140°F (60°C) Valve Rating)

DRILL & TAP BOSSES (0 std [1/8" NPT std for K531/K534; 1/4" NPT std for K535/K537])

0 = None	3 = Boss #3	6 = Bosses #1,2
1 = Boss #1	4 = Boss #4	
2 = Boss #2	5 = Bosses #1,2,3,4	

SOLENOID OPTIONS (0 std)

0 = None	2 = Energize to Close (EC)	4 = EO w/ Dry Drain
1 = Energize to Open (EO)	3 = Independent pressure (IP)	5 = EC w/ Dry Drain

SOLENOID FEATURES (0 std) not valid with Independent Pressure (Option A)

0 = None	D = 115V/60HZ, NEMA 4	F= 24V/60HZ,NEMA 4
A = 24VDC	E = 220V/50HZ, NEMA 4	

* To create a valve number replace each "_" with the proper number or letter for the feature you desire. For example, a 2" Plastic Valve Model K535 with Externally Normally Closed and Spring Assist Closed Options is designated as a K535-X2B2-14000.

** A special valve will have a custom drawing number (_ _ _ _ _ _ _)
and the item number format is (K53?-X2SX-_ _ _ _ _)
where the last 5 numbers (Far Right) are the last five digits of the drawing number.

Valve Option Notes:

1. **Limit Stop &/or Position Indicator options can not be combined with 30#, 60#, or 100# Spring Closed Options.**
2. **Solenoid Option cannot be combined with NC valves.**

REV.	ECO NO.	DESCRIPTION	BY/DATE	
H	21190	Revised for Pentair ECN release	JJJ	17-Nov-09
J	21813	Revised line 27.	JJJ	5-Jan-10
K	1778	Removed Seal Material 2 & 4; Tap 7	JJJ	1-Oct-20
L	1789	ADDED 24VDC TO SOLENIOD	MM	15-Oct-20

42984

Watermart Perkasa www.water.co.id


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Watermart Perkasa
www.water.co.id

16605 West Victor Rd. New Berlin, WI 53151
P: 262-326-0100 | www.aq-matic.com | techsupport@aq-matic.com
© 2016 AQ Matic Valve and Controls Company, Inc. All rights reserved.
All AQ Matic trademarks and logos are owned by AQ Matic or its affiliates. All other registered and unregistered trademarks and logos are the property of their respective owners. Because we are continuously improving our products and services, AQ Matic reserves the right to change specifications without prior notice. AQ Matic is an equal opportunity employer.
42984 REV L OCT 20


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

DIAPHRAGM VALVE CONFIGURATIONS - STANDARD M

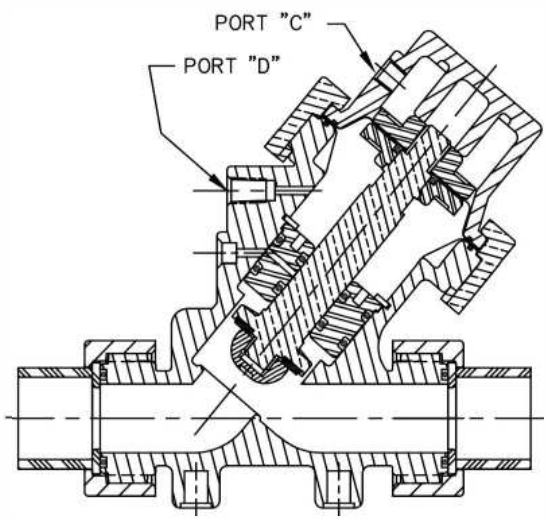

NORMALLY OPEN

LINE PRESSURE/FLOW AGAINST THE VALVE SEATING DISC WILL OPEN THE VALVE. CONTROL PRESSURE APPLIED TO THE TOP OF THE DIAPHRAGM (PORT "C") WILL CLOSE THE VALVE.

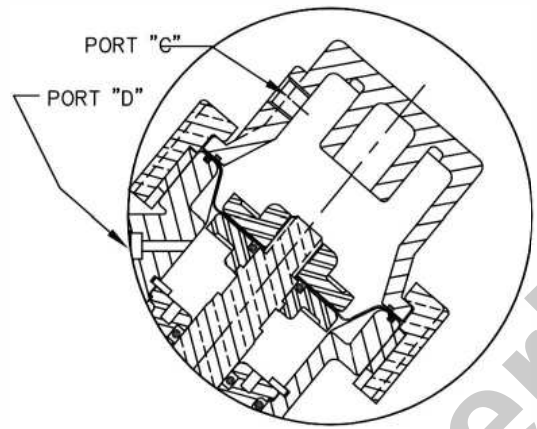


NORMALLY CLOSED

LINE PRESSURE AGAINST THE DISC, TRANSFERRED THRU AN EXTERNAL LINE TO PORT "C" AT THE TOP OF THE DIAPHRAGM, WILL CLOSE THE VALVE. CONTROL PRESSURE AT PORT "D" WILL OPEN THE VALVE. ADDITION OF "SPRING ASSIST CLOSED" FEATURE IS RECOMMENDED FOR THE FOLLOWING CONDITIONS:


1. LOW PRESSURE AND/OR FLOW.
2. VALVE DISCHARGES TO ATMOSPHERE.

NORMALLY CLOSED FEATURE NOT RECOMMENDED FOR LINE MEDIA CONTAINING SOLIDS, HIGH TEMPERATURES OR OTHER MEDIA CONDITIONS WHICH MAY DAMAGE THE DIAPHRAGM.

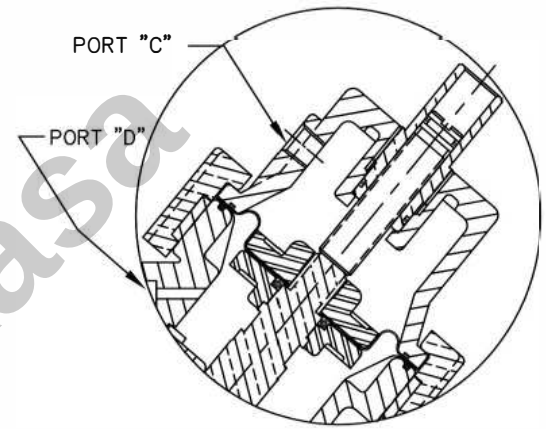


LIMIT STOP

INCLUDES AN ADJUSTMENT SCREW WHICH LIMITS THE VALVE STROKE. MAY BE USED TO CONTROL FLOW RATE, HOWEVER, FLOW RATE WILL VARY WITH CHANGES IN PRESSURE.

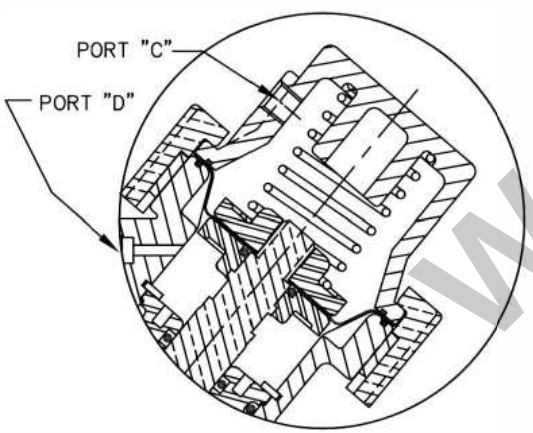


SPRING ASSIST CLOSED

SPRING SERVES AS AN ASSIST TO ASSURE FULL VALVE CLOSURE IN THE ABSENCE OF LINE AND CONTROL PRESSURES.

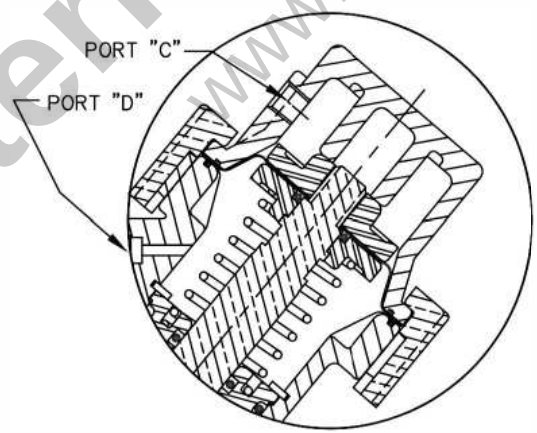

SPRING ASSIST OPEN

SPRING SERVES AS AN ASSIST TO ASSURE FULL VALVE OPENING IN THE ABSENCE OF LINE AND CONTROL PRESSURES.

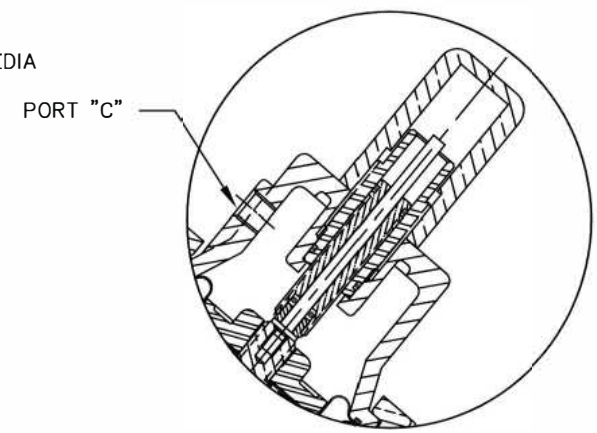

POSITION INDICATOR

INDICATOR ROD IS ATTACHED TO MAIN VALVE STEM TO SHOW POSITION OF VALVE. ONLY AVAILABLE WITH COMBINATION OF SPRING ASSIST AND LIMIT STOP OPTIONS.

FORM NO. 1078

C	NUMBER	CONVERSION	1588	MSM	27NOV
REV		DESCRIPTION	ECO	DWN	DAT

PRINTED IN U.S.A.

AQ Matic
Valve & Controls Company Inc

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Watermart Perkasa
www.water.co.id

PLASTIC DIAPHRAGM VALVES (531 THRU 537)


SERIES	PIPE SIZE	SEAT DIAMETER IN. / CM.	SEAT AREA SQ. IN. / SQ. CM.	DIAPHRAGM AREA SQ. IN. / SQ. CM.	TOTAL STROKE IN. / CM.	DIAPHRAGM CHAMBER (VOLUME) CUBIC IN. / CUBIC CM.	* Cv	** Kv	FLOW RATE @ 10 FT./SEC. (3 M./SEC.) NOTE 1 GAL./MIN. / CU.M/HR	FLOW RATE @ 20 FT./SEC. (6 M./SEC.) NOTE 2 GAL./MIN. / CU.M/HR	PRESSURE DROP @ 10 FT./SEC. (3 M./SEC.) NOTE 1 P.S.I. / bar	PRESSURE DROP @ 20 FT./SEC. (6 M./SEC.) NOTE 2 P.S.I. / bar
531	3/4",1"	1.062 / 2.70	.89 / 5.73	3.43 / 22.1	.86 / 2.18	6.21 / 102.0	18.0	16.0	27.7 / 6.3	55.3 / 12.6	2.3 / 0.16	9.4 / 0.65
534	1-1/2"	1.562 / 3.97	1.92 / 12.4	6.06 / 39.1	1.33 / 3.38	10.4 / 170.0	42.0	36.0	60 / 13.6	120 / 27.2	2.04 / 0.14	8.16 / 0.56
535	2"	2.062 / 5.24	3.34 / 21.5	8.82 / 56.9	1.75 / 4.45	25.3 / 414.0	84.0	72.0	104 / 23.4	208 / 46.8	1.53 / 0.11	6.13 / 0.42
537	3"	3.062 / 7.78	7.36 / 47.5	15.6 / 101.0	2.50 / 6.35	65.3 / 1070	200.0	172.0	230 / 52.2	460 / 104.4	1.32 / 0.09	5.3 / 0.36

* Cv – FLOWRATE (GAL./MIN.) OF WATER AT 60° F. AT 1 P.S.I. PRESSURE DROP

** Kv – FLOWRATE (CU. M./HR) OF WATER AT 15.5° C. AT 1 BAR PRESSURE DROP

NOTE 1: MAXIMUM CONTINUOUS VELOCITY THROUGH THE VALVE.

NOTE 2: MAXIMUM CONTINUOUS VELOCITY. EXTENDED SERVICE AT THIS VELOCITY MAY CAUSE CAVITATION.

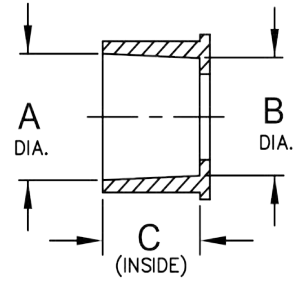

TO DETERMINE FLOWRATE AT ANY GIVEN PRESSURE DROP, THE FOLLOWING FORMULAS CAN BE USED.

FOR WATER AND LIQUIDS:

$$Q = \frac{Cv\sqrt{\Delta P}}{\sqrt{e}}$$

FOR AIR AND GAS:

WHEN P2 < .5P1

$$Cv = \frac{CFM\sqrt{e}}{.5P1}$$

WHEN P2 > .5P1

$$Cv = \frac{CFM\sqrt{e}}{\sqrt{\Delta P\ P2}}$$

Q – FLOWRATE IN GAL./MIN.
ΔP – PRESSURE DROP (LB./SQ. IN.)
e – SPECIFIC GRAVITY (WATER = 1.00)

CFM – CU. FT./MIN. FLOW
e – SPECIFIC GRAVITY (AIR = 1.00)
P1 – INLET PRESSURE (LB./SQ. IN.)
P2 – OUTLET PRESSURE (LB./SQ. IN.)

FEMALE SOCKET WELD END CONNECTOR KITS

VALVE SERIES	STANDARD	PART NO.	DIAMETER A	DIAMETER B	DEPTH C
531	A.S.T.M. 3/4"	1070411 (K531-577)	1.062"	1.050"	1.18"
	A.S.T.M. 1"	1070412 (K531-060)	1.330"	1.312"	1.18"
	J.I.S. 25MM	1070413 (K531-061)	1.282"	1.234"	1.18"
	I.S.O. 25MM	1070414 (K531-062)	1.269"	1.269"	1.18"
534	A.S.T.M. 1-1/2"	1070419 (K534-060)	1.920"	1.81"	1.37"
	J.I.S. 40MM	1070420 (K534-061)	1.895"	1.829"	1.36"
	I.S.O. 40MM	1070421 (K534-062)	1.978"	1.955"	1.36"
535	A.S.T.M. 2"	1070425 (K535-060)	2.393"	2.341"	1.50"
	J.I.S. 50MM	1070426 (K535-061)	2.392"	2.274"	1.50"
	I.S.O. 50MM	1070427 (K535-062)	2.493"	1.931"	1.50"
537	A.S.T.M. 3"	1070431 (K537-060)	3.522"	3.492"	1.95"
	J.I.S. 80MM	1070432 (K537-061)	3.537"	3.470"	1.95"
	I.S.O. 75MM	1070433 (K537-062)	3.557"	3.535"	1.95"

NOTE: ALL CONNECTOR KITS CONTAIN (2) CONNECTORS, (ONE KIT REQ'D PER VALVE)

THE DATA PRESENTED HERE IS BELIEVED TO BE RELIABLE AND OFFERED AS SUGGESTION ONLY. ACTUAL RESULTS MAY VARY DEPENDING UPON APPLICATION.

FORM NO. 1078165

C	NUMBER CONVERSION	1588	MSM	27NOV02
REV	DESCRIPTION	ECO	DWN	DATE

AQ Matic
Valve & Controls Company Inc.


SERIES 530 DIAPHRAGM VALVES


DIAPHRAGM VALVE INFORMATION - STANDARD MODE

Watermart Perkasa
www.water.co.id


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

REVISIONS				
REV	ECN	DESCRIPTION	DATE	APP'D
K	1001	AQ-MATIC UPDATE & VERIFIED PART NUMBERS	1/16/2017	MGS
L	1286	PUT LOGO ON VALVE BODY, CORRECT MINOR ERRORS	8/16/2018	KJB
M	1334	REMOVE 1073557 FROM ASSEMBLY TOOLS TABLE	9/14/2018	KJB
N	1716	1-PAPER SIZE B TO C, 2-REM'D: 1071796 1071787 1071789, 3-ITEMS RENUMBERED, 4- HATCHING PATTERNS CHANGED & CONSOLIDATED, 5-ADD'D MODEL NO'S	7/24/2020	PMJ

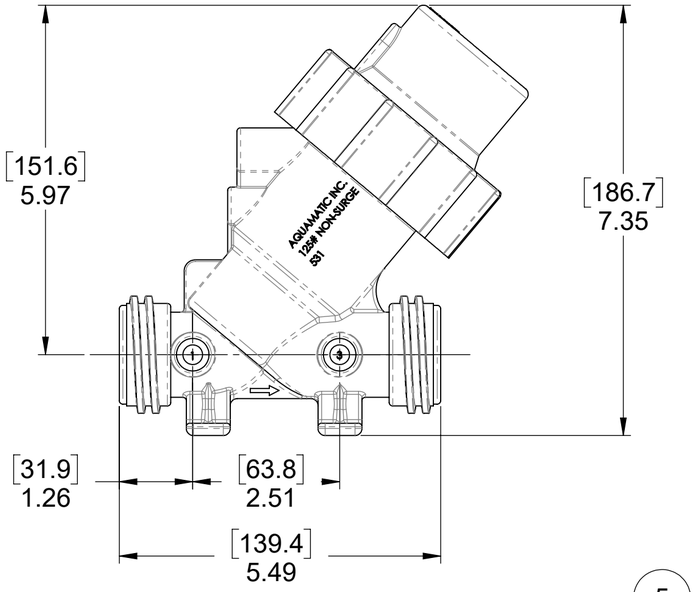

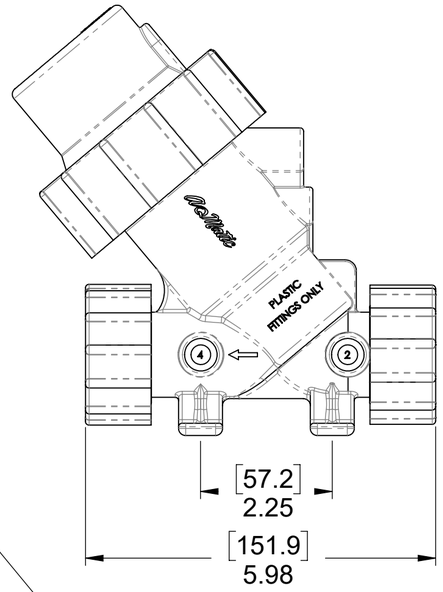

ASSEMBLY TOOLS	
DESCRIPTION	PART NO.
LIMIT STOP TOOL TOOL NOT SHOWN	1073556 (V560-579)

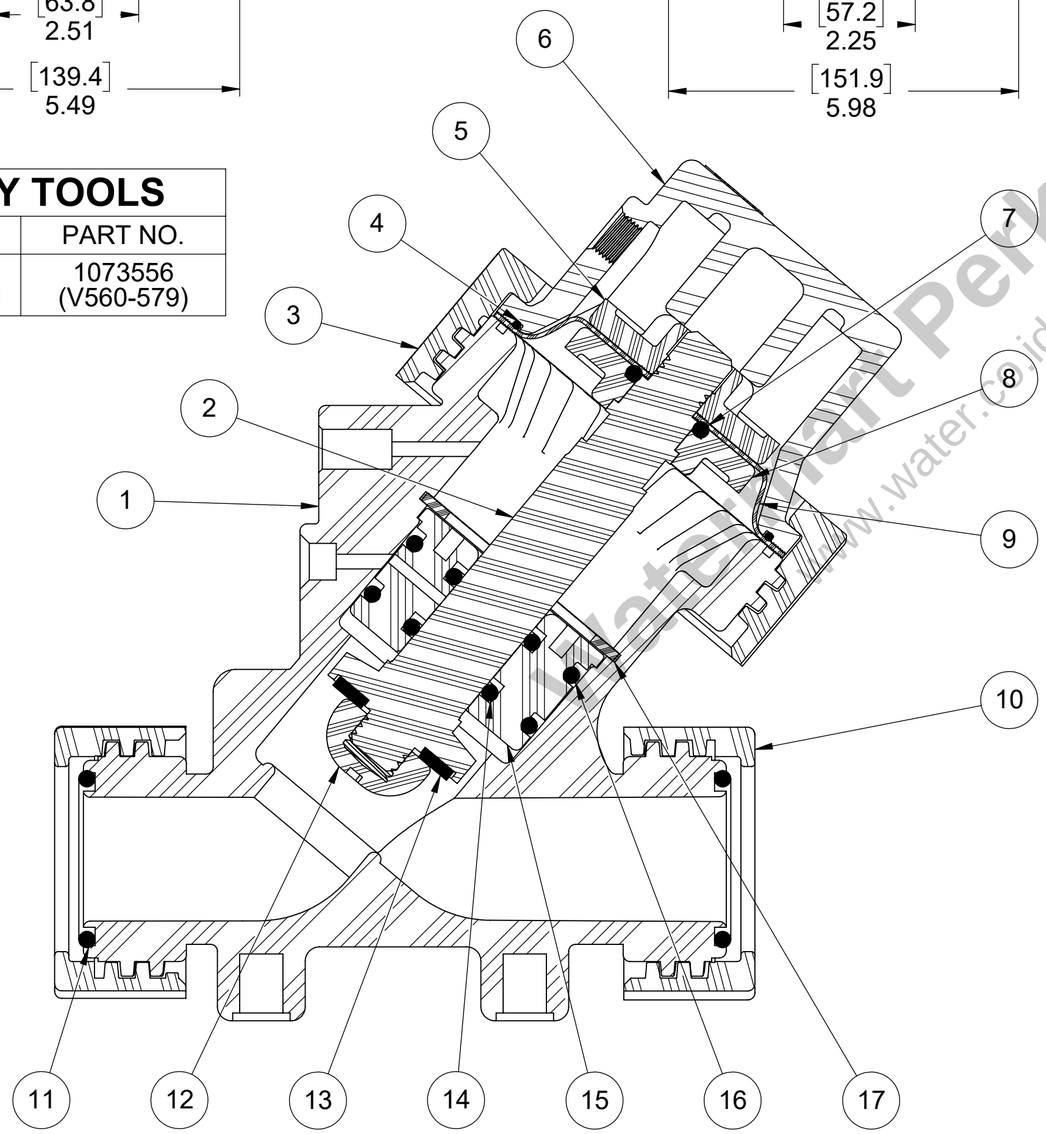

1070304 (K531-X200-14000)
NORMALLY OPEN (STANDARD)

SEE REVERSE SIDE FOR CONFIGURATION OPTIONS.

BOM TABLE

ITEM	DESCRIPTION		PART NO.	MODEL	QTY
1	BODY, 531, VALVE		1073287	V531-410K	1
2	SHAFT,531,NORYL,MCHD,RF		1073294	V531-530	1
3	NUT, SOCKET RETAINING, 535 PIPE		1073395	V535-080K	1
4	O-RING, 2-039	E.P.D.M.	1071685	ORB-039	1
5	PLATE, DIAPHRAGM, 531, UPPER		1073264	V531-040K	1
6	CAP, VALVE, 531		1073263	M531-021K	1
7	O-RING, 2-208	E.P.D.M.	1071700	ORB-208	1
		FKM	1071814	ORV-208	
8	PLATE, DIAPHRAGM, LWR, 531		1073265	V531-045K	1
9	DIAPHRAGM, K531	BUNA N	1073277	V531-100	1
10	NUT, RETAINING, 531		1073273	V531-080K	2
11	O-RING, 2-218	E.P.D.M.	1071748	ORE-218	2
		BUTYL	1071779	ORJ-218	
		FKM	1071819	ORV-218	
12	NUT, DISC RETAINING, 531		1073274	V531-093K	1
13	DISC	E.P.D.M.	1073279	V531-110	1
		BUTYL	1073280	V531-111	
		FKM	1073281	V531-112	
14	O-RING, 2-210	E.P.D.M.	1071744	ORE-210	2
		BUTYL	1071776	ORJ-210	
		FKM	1071815	ORV-210	
15	SHAFT GUIDE, 531		1073292	V531-491	1
16	O-RING, 2-223	E.P.D.M.	1071749	ORE-223	2
		BUTYL	1071780	ORJ-223	
		FKM	1071820	ORV-223	
17	RING, RETAINING, SERIES 531		1073312	V531-593	1

REPAIR PARTS KITS

DESCRIPTION	PART NO.		
DIAPHRAGM & SEALS KIT CONSISTS OF ITEM NO'S 4, 7, 9, 13, 14 (2), 16 (2)	**EPDM** 1070318 (531-RAE) INCLUDES DIAPHRAGM 1073277	**BUTYL** 1070326 (531-RAJ) INCLUDES DIAPHRAGM 1073277	**FKM** 1075228 (531-RAVFB) INCLUDES DIAPHRAGM 1073277
INTERNAL PARTS KIT CONSISTS OF ITEM NO'S 2, 5, 8, 12, 15, 17	1070342 (K531-RF)		

THE COMPONENT OR PRODUCT DESCRIBED IN THIS DOCUMENT MUST COMPLY WITH RoHS 3 EU (EUROPEAN UNION) DIRECTIVE 2015/863

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ-MATIC REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ-MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ-MATIC UPON WRITTEN REQUEST.

INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5M -1994

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES [mm]
CORNER FILLETS R.005-.020 [.127-.508]
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .100 [2.54]
2 PLACE .XX: ± .010 [0.25]
3 PLACE .XXX: ± .005 [0.13]

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN PMJ	6/12/2020
CHECKED BY	
APPROVED	

AQ-MATIC
VALVES AND CONTROLS

DESCRIPTION
CATALOG SHEET, 531


SIZE C | DWG NO. 1077688 | REV. N

SCALE 1:1

WaterMart Perkasa
www.water.co.id


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

REVISIONS				
REV	ECN	DESCRIPTION	DATE	APP'D
		SEE SHEET 1 FOR LIST OF CHANGES		

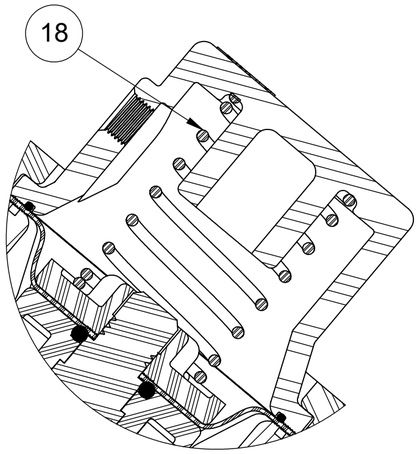

1071286 (K531-X202-14000)

SPRING ASSIST CLOSED

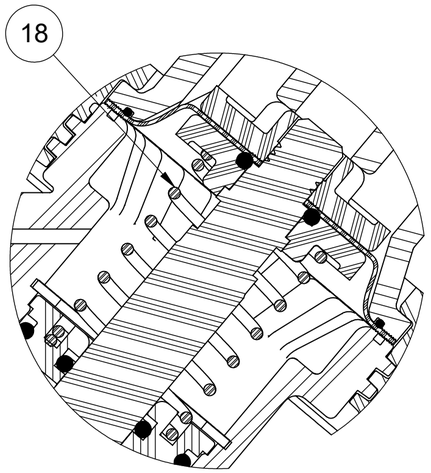


1071282 (K531-X201-14000)

SPRING ASSIST OPEN


SPRING ASSIST CLOSED & SPRING ASSIST OPEN MODELS

ITEM	DESCRIPTION	PART NO.	MODEL	QTY
18	SPRING, COMPRESSION	1073283	V531-170	1

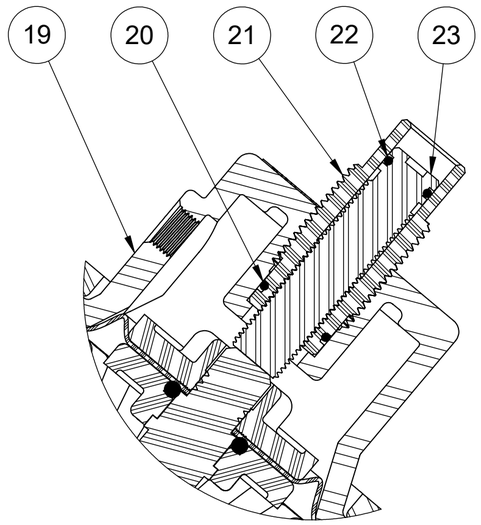

1070305 (K531-X210-14000)

LIMIT STOP

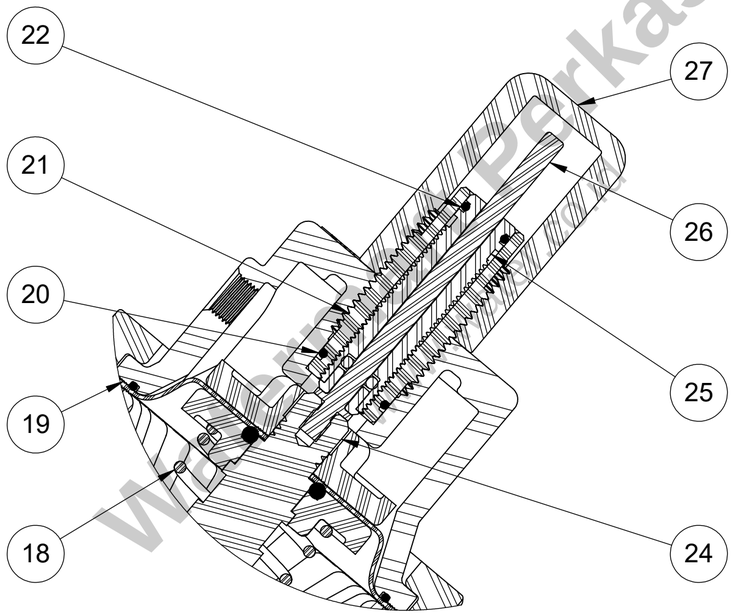

1071268 (K531-X2A1-14000)

LIMIT STOP / POSITION INDICATOR

(SPRING ASSIST OPEN SHOWN HERE)

LIMIT STOP MODEL

ITEM	DESCRIPTION		PART NO.	MODEL	QTY
19	CAP, LIMIT STOP / POS. IND.		1073288	V531-421K	1
20	O-RING, 2-016	BUNA N	1071671	ORB-016	1
21	GUIDE, LS/PI, 531		1073303	V531-570	1
22	O-RING, 2-012	BUNA N	1071668	ORB-012	1
23	SCREW, LIMIT STOP, 531		1073308	V531-576	1

LIMIT STOP / POSITION INDICATOR MODEL

ITEM	DESCRIPTION		PART NO.	MODEL	QTY
18	SPRING, COMPRESSION		1073283	V531-170	1
19	CAP, LIMIT STOP / POS. IND.		1073288	V531-421K	1
20	O-RING, 2-016	BUNA N	1071671	ORB-016	1
21	GUIDE, LS/PI, 531		1073303	V531-570	1
22	O-RING, 2-012	BUNA N	1071668	ORB-012	1
24	SHAFT,531,NORYL,PI,MCHD		1073295	V531-531	1
25	SCREW, LIMIT STOP, ASSY., 537		1073315	V531-700	1
26	ROD, PI, 531		1073298	V531-555	1
27	SIGHT GLASS, POS INDICATOR, 531		1073297	V531-550	1

REPAIR PARTS KITS

DESCRIPTION	PART NO.
INT. PARTS KIT (SPRING ASSIST CLOSED) CONSISTS OF ITEM NO. 18	1075229 (531-S)
INT. PARTS KIT (SPRING ASSIST OPEN) CONSISTS OF ITEM NO. 18	
INT. PARTS KIT (LIMIT STOP) CONSISTS OF ITEM NO'S 20 THRU 23	1075226 (531-LS)
INT. PARTS KIT (LIMIT STOP / POS INDICATOR) CONSISTS OF ITEM NO'S 22, 24, 25, 26, 27	1075227 (531-PI)

CONVERSION KITS

DESCRIPTION	PART NO.
CONVERSION KIT (SPRING ASSIST CLOSED) CONSISTS OF ITEM NO. 18	1075229 (531-S)
CONVERSION KIT (SPRING ASSIST OPEN) CONSISTS OF ITEM NO. 18	
CONVERSION KIT (LIMIT STOP) CONSISTS OF ITEM NO'S 19 THRU 23	1071265 (K531-LSC)
CONVERSION KIT (LIMIT STOP / POS INDICATOR) CONSISTS OF ITEM NO'S 19 THRU 22 AND 24 THRU 27	1071266 (K531-PIC)

SEE SHEET 1 FOR STANDARD NORMALLY OPEN MODEL

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ-MATIC REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ-MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ-MATIC UPON WRITTEN REQUEST.

INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5M -1994

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES [mm]
CORNER FILLETS R.005-.020 [.127-.508]
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .100 [2.54]
2 PLACE .XX: ± .010 [0.25]
3 PLACE .XXX: ± .005 [0.13]

THE COMPONENT OR PRODUCT DESCRIBED IN THIS DOCUMENT MUST COMPLY WITH RoHS 3 EU (EUROPEAN UNION) DIRECTIVE 2015/863

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN PMJ	6/12/2020
CHECKED BY	
APPROVED	

AQ-MATIC
VALVES AND CONTROLS

DESCRIPTION
CATALOG SHEET, 531


SIZE C | DWG NO. 1077688 | REV. N

SCALE 1:2

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Watermart Perkasa

REVISIONS				
REV	ECN	DESCRIPTION	DATE	APP'D
K		1-ITEM#11-REM'D; 1073334, 2-KIT#1070335 WAS: 1073334 DIAPHRAGM	11/11/2015	TJM
M		AQ-MATIC UPDATE & VERIFIED PART NUMBERS	1/20/2017	MGS
N		PUT LOGO ON VALVE BODY, CORRECT MINOR ERRORS	8/16/2018	KJB
P	1716	EXTERNAL REFERENCE REDRAW, REM'D 1073557 & 1071827, SECTION HATCHING UPDATE, BOM REORDERED	7/21/2020	PMJ

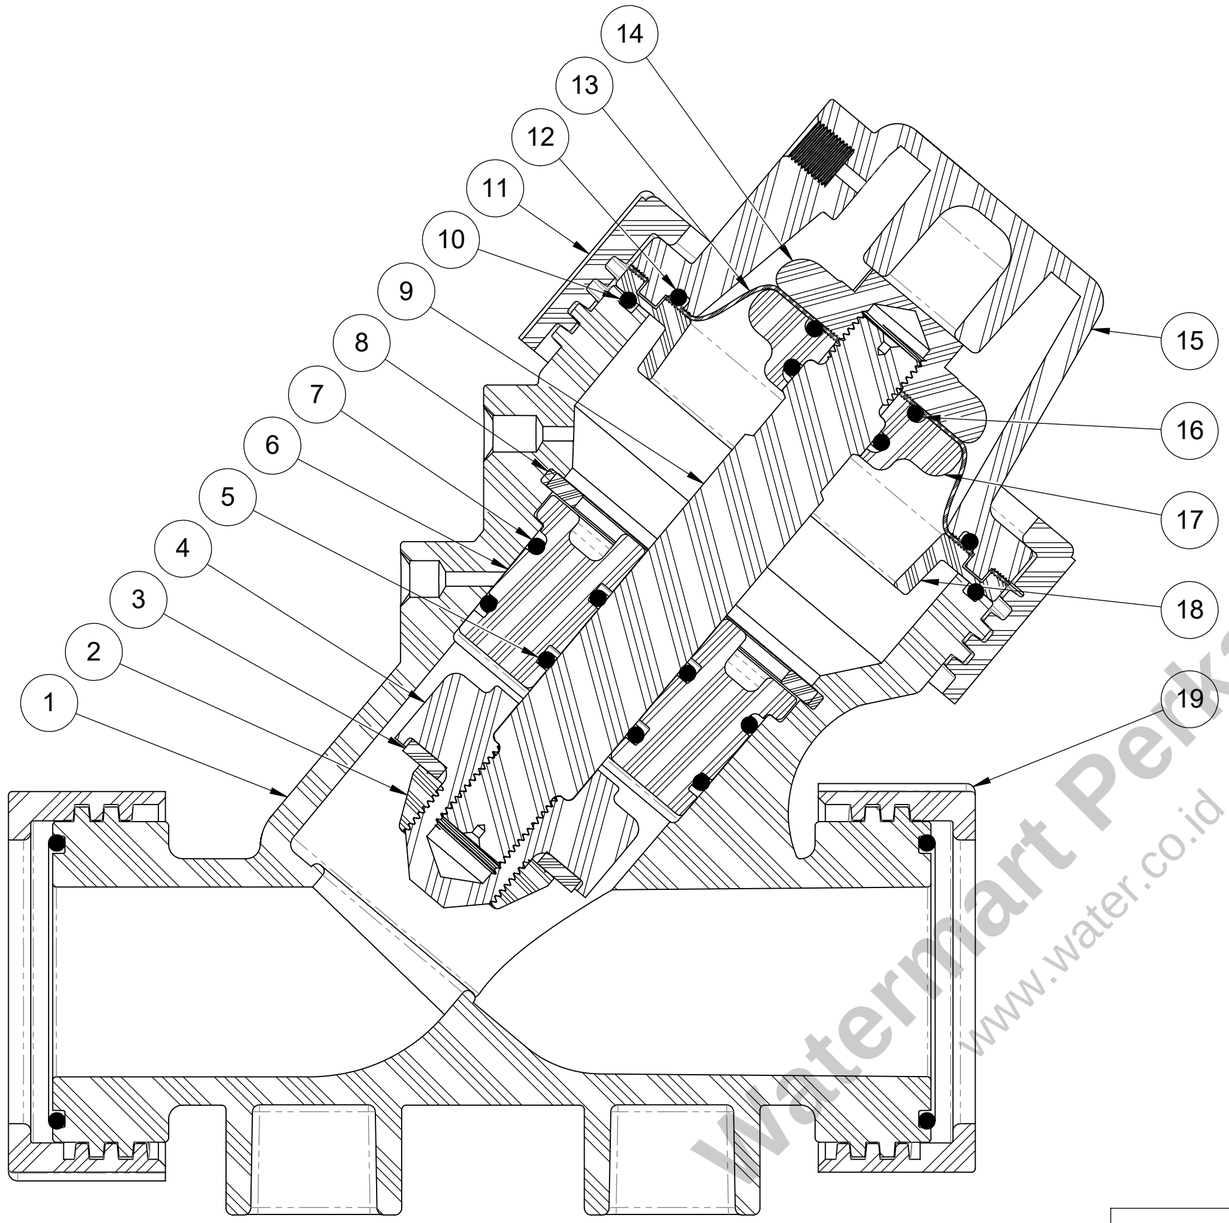

1070308 (K534-X200-14000)

NORMALLY OPEN (STANDARD)


BILL OF MATERIALS

ITEM	PART NO	MODEL	DESCRIPTION		QTY
1	1073344	V534-410K	VALVE BODY		1
2	1073330	V534-093	PLATE, DISC, 534, PVC, MCHD		1
3	1073337	V534-110	DISC, 534	EPDM	1
	1073339	V534-112		FKM	
	1073338	V534-111		BUTYL	
4	1073353	V534-500	DISC HOLDER, 534		1
5	1071745	ORE-212	O-RING, 2-212	EPDM	3
	1071816	ORV-212		FKM	
	1071777	ORJ-212		BUTYL	
6	1073350	V534-491	GUIDE, SHAFT, 534		1
7	1071751	ORE-228	O-RING, 2-228	EPDM	4
	1071822	ORV-228		FKM	
	1071781	ORJ-228		BUTYL	
8	1073375	V534-593	RING, RETAINING, 534		1
9	1073360	V534-533	SHAFT, 534		1
10	1071709	ORB-240	O-RING, 2-240	BUNA N	1
11	1073458	V537-080K	NUT, RETAINING, 537		1
12	1071707	ORB-235	O-RING, 2-235	BUNA N	1
13	1073333	V534-100	DIAPHRAGM, SERIES 534		1
14	1073318	V534-040	PLATE, DIAPHRAGM, UPR, 534		1
15	1073317	V534-020K	CAP, VALVE, 534		1
16	1076766	ORB-214	O-RING, 2-214	BUNA N	1
17	1073320	V534-045	PLATE, DIAPHRAGM, LWR, 534		1
18	1073366	V534-551K	SUPPORT, DIAPHRAGM, 534		1
19	1073329	V534-080K	NUT, RETAINING, 534		2


REPAIR PARTS KITS

DESCRIPTION	PART NO.		
	EPDM	**FKM**	**BUTYL**
DIAPHRAGM & SEALS KIT CONSISTS OF ITEM NO'S 3, 5, 7, 10, 12, 13, 16	1070319 (534-RAF) INCLUDES DIAPHRAGM 1073333	3003017 (534-RAVBF) INCLUDES DIAPHRAGM 1073333	1070327 (534-RAJ) INCLUDES DIAPHRAGM 1073333
INT. PARTS KIT CONSISTS OF ITEM NOS'S 2, 4, 6, 8, 9, 14, 17, 18	1070343 (K534-RF)		

SEE PAGE 2 FOR CONFIGURATION OPTIONS

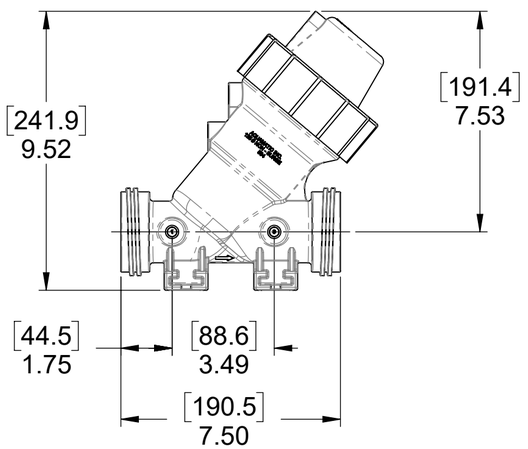

CONNECTORS NOT FURNISHED WITH VALVE.
SEE DRAWING 1084006 FOR FEMALE SOCKET WELD CONNECTORS.

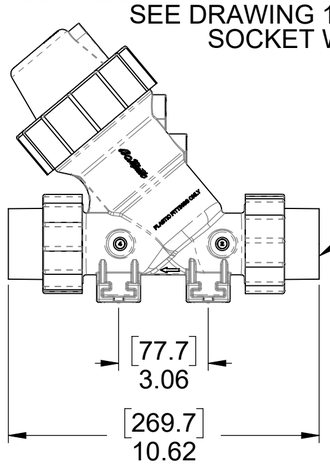

ASSEMBLY TOOLS	
DESCRIPTION	PART NO.
LIMIT STOP TOOL (NOT SHOWN)	1073556 (V560-579)

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ-MATIC REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ-MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ-MATIC UPON WRITTEN REQUEST.

INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5M -1994

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES [mm]
CORNER FILLETS R.005-.020 [.127-.508]
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .100 [2.54]
2 PLACE .XX: ± .010 [0.25]
3 PLACE .XXX: ± .005 [0.13]

THE COMPONENT OR PRODUCT DESCRIBED IN THIS DOCUMENT MUST COMPLY WITH RoHS 3 EU (EUROPEAN UNION) DIRECTIVE 2015/863

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN PMJ	7/21/2020
CHECKED BY	
APPROVED	

AQ-MATIC
VALVES AND CONTROLS


DESCRIPTION
CATALOG SHEET, 534

SIZE C | DWG NO. 1077680 | REV. P
SCALE 1:1

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


Watermart Perkasa
www.water.co.id

REVISIONS				
REV	ECN	DESCRIPTION	DATE	APP'D
		SEE SHEET 1 FOR LIST OF CHANGES		

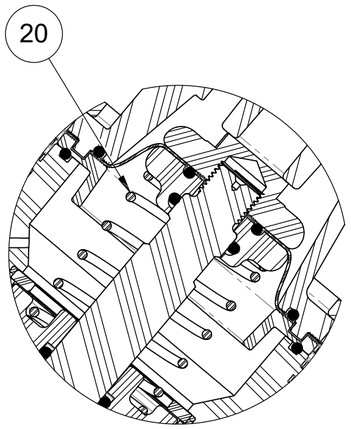

1071329 (K534-X201-14000)

SPRING ASSIST OPEN

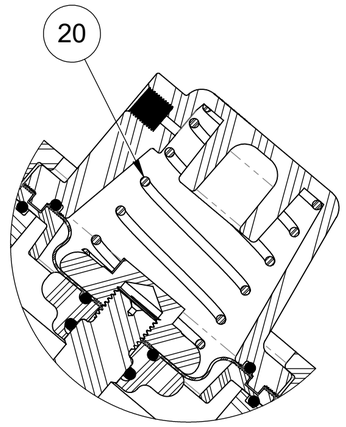


1071332 (K534-X202-14000)

SPRING ASSIST CLOSED


SPRING ASSIST CLOSED MODEL & SPRING ASSIST OPEN MODEL

ITEM	PART NO.	MODEL	DESCRIPTION	QTY
20	1073340	V534-170	SPRING, COMPRESSION, 534	1

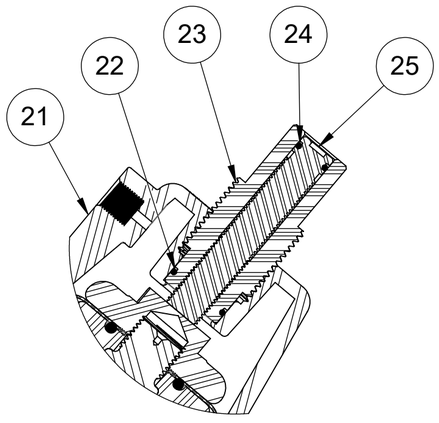

1070309 (K534-X210-14000)

LIMIT STOP

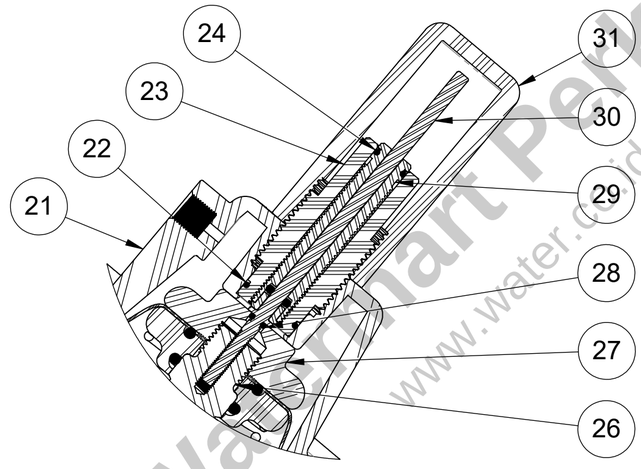

1071313 (K534-X2A1-14000)

LIMIT STOP/ POSITION INDICATOR

LIMIT STOP MODEL

ITEM	PART NO.	MODEL	DESCRIPTION		QTY
21	1073345	V534-420K	CAP, 1-12 VALVE LS/PI, V534		1
22	1071673	ORB-018	O-RING, 2-018	BUNA N	1
23	1073368	V534-570	GUIDE, LS/PI, 534		1
24	1071668	ORB-012	O-RING, 2-012	BUNA N	1
25	1073373	V534-576	SCREW, LIMIT STOP, 534		1

LIMIT STOP POSITION INDICATOR MODEL

ITEM	PART NO.	MODEL	DESCRIPTION		QTY
21	1073345	V534-420K	CAP, 1-12 VALVE LS/PI, V534		1
22	1071673	ORB-018	O-RING, 2-018	BUNA N	1
23	1073368	V534-570	GUIDE, LS/PI, 534		1
24	1071668	ORB-012	O-RING, 2-012	BUNA N	1
26	1073362	V534-535	SHAFT, PI, 534		1
27	1073346	V534-442	PLATE, DIAPHRAGM, UPR, 534		1
28	1071666	ORB-006	O-RING, 2-006	BUNA N	1
29	1081128	V534-700	SCREW, LIMIT STOP, ASSY., 534		1
30	1073367	V534-555	ROD, PI, 534		1
31	1073365	V534-550	PI SIGHT GLASS, 534		1

REPAIR PARTS KITS

DESCRIPTION	PART NO.
INT. PARTS KIT (SPRING ASSIST CLOSED) CONSISTS OF ITEM NO. 20	1075233 (534-S)
INT. PARTS KIT (SPRING ASSIST OPEN) CONSISTS OF ITEM NO. 20	
INT. PARTS KIT (LIMIT STOP) CONSISTS OF ITEM NO.'S 22 THRU 25	1075230 (534-LS)
INT. PARTS KIT (LIMIT STOP / POS. INDICATOR) CONSISTS OF ITEM NO.'S 22 THRU 24 & 26 THRU 31	1075231 (534-PI)

CONVERSION PARTS KITS

DESCRIPTION	PART NO.
CONVERSION KIT (SPRING ASSIST CLOSED) CONSISTS OF ITEM NO 20	1075233 (534-S)
CONVERSION KIT (SPRING ASSIST OPEN) CONSISTS OF ITEM NO 20	
CONVERSION KIT (LIMIT STOP) CONSISTS OF ITEM NO.'S 12 & 21 THRU 25	1071308 (K534-LSC)
CONVERSION KIT (POSITION INDICATOR) CONSISTS OF ITEM NO.'S 12, 21 THRU 24 & 26 THRU 31	1071309 (K534-PIC)

SEE SHEET 1 FOR STANDARD NORMALLY OPEN MODEL

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ-MATIC REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ-MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ-MATIC UPON WRITTEN REQUEST.

INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5M -1994

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES [mm]
CORNER FILLETS R.005-.020 [.127-.508]
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .100 [2.54]
2 PLACE .XX: ± .010 [0.25]
3 PLACE .XXX: ± .005 [0.13]

THE COMPONENT OR PRODUCT DESCRIBED IN THIS DOCUMENT MUST COMPLY WITH RoHS 3 EU (EUROPEAN UNION) DIRECTIVE 2015/863

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN PMJ	7/21/2020
CHECKED BY	
APPROVED	

AQ-MATIC
VALVES AND CONTROLS


DESCRIPTION
CATALOG SHEET, 534


SIZE C | DWG NO. 1077680 | REV. B

SCALE 1:2

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


Watermart Perkasa
www.water.co.id

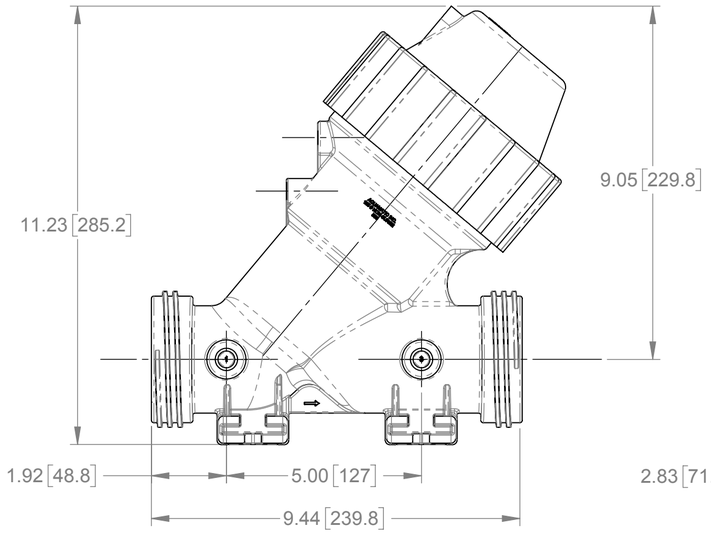

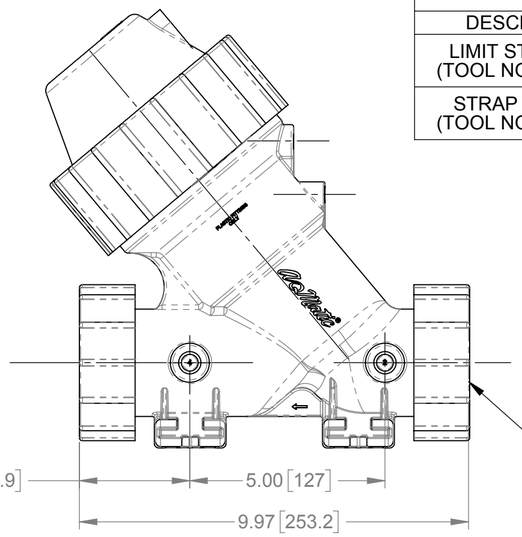

NOTE:
CONNECTORS NOT FURNISHED WITH VALVE.
SEE DWG. NO. 1078165 FOR FEMALE SOCKET WELD CONNECTORS.

ASSEMBLY TOOLS	
DESCRIPTION	PART NO.
LIMIT STOP TOOL (TOOL NOT SHOWN)	1073556
STRAP WRENCH (TOOL NOT SHOWN)	1073557

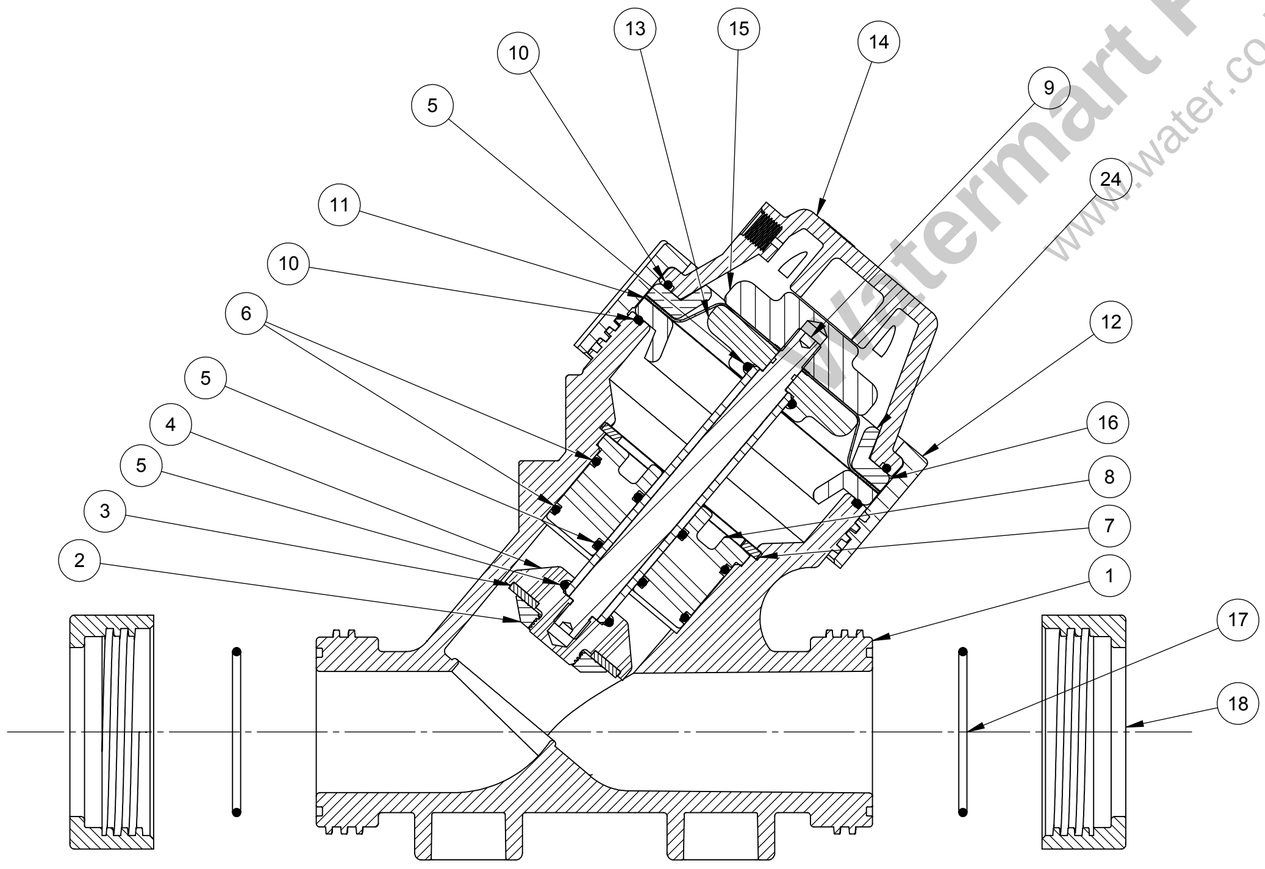

1070312 (K535-X200-14000)
NORMALLY OPEN (STANDARD)

REVISIONS					
ZONE	ECN	REV.	DESCRIPTION	DATE	APP'D
	102159	H	REDRAWN IN SOLIDWORKS, 1-REM'D: BUTYL O-RINGS, 2-REM'D: TEFON COATED O-RINGS	04/17/14	TJM
	105094	J	1-ITEM #11- REM'D: FKM-1073400	11/12/15	TJM
	1001	K	AQ MATIC UPDATE & VERIFIED PART NUMBERS	01/16/17	MGS
	1286	L	PUT LOGO ON VALVE BODY, CORRECT MINOR ERRORS	08/16/18	KJB

ITEM NO.	DESCRIPTION		PART NUMBER	QTY.
1	VALVE BODY, SERIES 535		1073407	1
2	NUT, DISC RETAINING	PVC	1073396	1
3	DISC, V535	EPDM	1073401	1
		FKM	1073403	
4	HOLDER, DISC, 535	PVC	1073416	1
5	O-RING,-212	EPDM	1071745	4
		FKM	1071816	
6	O-RING, -232	EPDM	1071753	2
		FKM	1071825	
7	RING, RETAINING, SERIES 535		1073434	1
8	GUIDE, SHAFT, V535	PVC	1073413	1
9	ASSEMBLY, SHAFT, V535 / 2" VLV		1073439	1
10	O-RING, 2-248	BUNA	1071712	2
		FKM	1071833	
11	DIAPHRAGM, SERIES 535	BUNA	1073399	1
12	NUT, RETAINING, 535, NORYL		1073383	1
13	PLATE, LOWER DIAPHRAGM	PVC	1073386	1
14	CAP, K535		1073382	1
15	PLATE, DIAPHRAGM,535,UPR,PI	PVC	1073384	1
16	DIAPHRAGM, SUPPORT, K535		1073425	2
17	O-RING, -231	EPDM	1071752	2
		FKM	1071824	
18	NUT, SOCKET RETAINING, 535		1073395	2

REPAIR PARTS KITS	
DESCRIPTION	PART NO.
DIAPHRAGM & SEALS KIT CONSISTS OF ITEM NO'S 3, 5, 6, 10, 11, 17	1070320 E.P.D.M. INCLUDES DIAPHRAGM 1073399
	1082191 FKM INCLUDES DIAPHRAGM 1073399
INT. PARTS KIT CONSISTS OF ITEM NO'S 2, 4, 7, 8, 9, 13, 15, 16	1070344

SEE REVERSE SIDE FOR CONFIGURATION OPTIONS

COMPONENTS / ASSEMBLIES TO BE COMPLIANT AND COMPATIBLE WITH EUROPEAN UNION DIRECTIVE 2011/65/EEC (RoHS2) & REGULATION (EC)1907/2006 (REACH) REQUIREMENTS

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ Matic VALVE & CONTROLS COMPANY INC. REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ MATIC UPON REQUEST.

DO NOT SCALE DRAWING. DIMS. ARE IN INCHES [mm]
INTERPRET DIMS AND TOLERANCES PER ASME Y14.5M -2009
UNLESS OTHERWISE SPECIFIED:
ALL FINISHED MACHINED SURFACES 125 ✓ OR BETTER.
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .015 [0.38]
2 PLACE .XX: ± .01 [0.3]
3 PLACE .XXX: ± .005 [0.13]

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN MWL	07-01-13
APPROVED	
CHECKED	

AQ Matic
Valve & Controls Company Inc.


TITLE
CATALOG SHEET, 535

SIZE B | DWG NO. | REV
SCALE 1:4


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Watermart Perkasa
www.water.co.id


REVISIONS					
ZONE	ECN	REV.	DESCRIPTION	DATE	APP'D
			SEE SHEET 1 FOR LIST OF CHANGES		

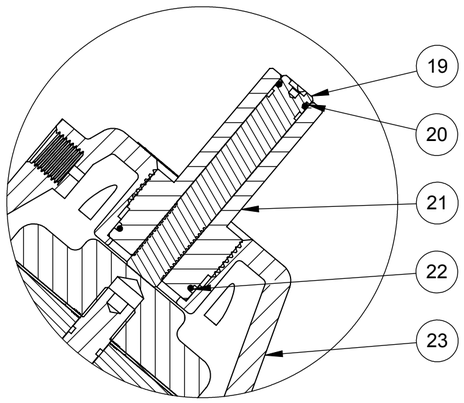

1070313 (K535-X210-14000)
LIMIT STOP

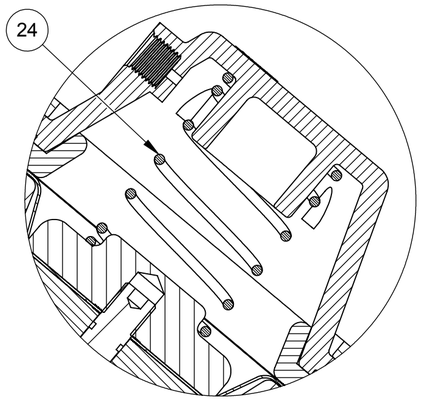

1071367 (K535-X202-14000)
SPRING ASSIST CLOSED

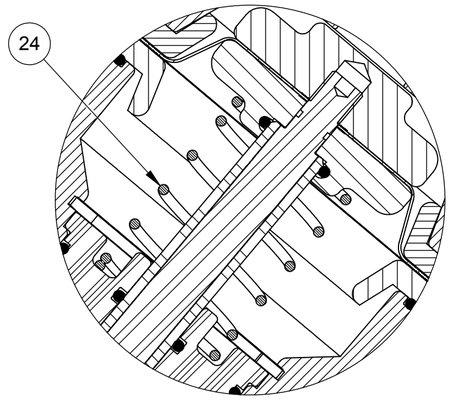

1071365 (K535-X201-14000)
SPRING ASSIST OPEN

REPAIR PARTS KITS	
DESCRIPTION	PART NO.
INT. PARTS KIT (LIMIT STOP) CONSISTS OF ITEM NO'S 19 THRU 22	1075234
INT. PARTS KIT (SPRING ASSIST CLOSED) CONSISTS OF ITEM NO 24	1075236
INT. PARTS KIT (SPRING ASSIST OPEN) CONSISTS OF ITEM NO 24	1075236
INT. PARTS KIT (POSITION INDICATOR) CONSISTS OF ITEM NO'S 25 THRU 32	1075235

CONVERSION KITS	
DESCRIPTION	PART NO
CONVERSION KIT (LIMIT STOP) CONSISTS OF ITEM NO'S 19 THRU 23	1071343
CONVERSION KIT (SPRING ASSIST CLOSED) CONSISTS OF ITEM NO 24	1075236
CONVERSION KIT (SPRING ASSIST OPEN) CONSISTS OF ITEM NO 24	1075236
CONVERSION KIT (POSITION INDICATOR) CONSISTS OF ITEM NO'S 25 THRU 33	1071344

LIMIT STOP MODEL


ITEM NO.	DESCRIPTION		PART NUMBER	QTY.
19	SCREW, LIMIT STOP		1073432	1
20	O-RING,2-012,	BUNA	1071668	1
		FKM	1071787	1
21	GUIDE, LIMIT STOP , K535	PVC	1073428	1
22	O-RING,2-024,	BUNA	1071676	1
		FKM	1071791	1
23	CAP, 2" VALVE, LS/PI,V535		1073408	1

SPRING ASSIST CLOSED & SPRING ASSIST OPEN MODELS

ITEM NO.	DESCRIPTION	PART NUMBER	QTY.
24	SPRING, COMPRESSION	1073404	1

LIMIT STOP/POSITION INDICATOR MODEL

ITEM NO.	DESCRIPTION		PART NUMBER	QTY.
25	LS/PI SCREW, ASSY		1073437	1
26	O-RING,2-012,	BUNA	1071668	1
		FKM	1071787	
27	O-RING,2-024,	BUNA	1071676	1
		FKM	1071791	
28	GUIDE, LIMIT STOP , K535	PVC	1073427	1
29	INDICATOR, POSITION, K535		1073426	1
30	SIGHT GLASS, POS INDICATOR 535		1073424	1
31	SUB-ASSY, SHAFT, 535, PI / LS		1073438	1
32	PLATE,DIAPHRAGM,535,UPR,PI	PVC	1073409	1
33	CAP, 2" VALVE, LS/PI,V535		1073408	1

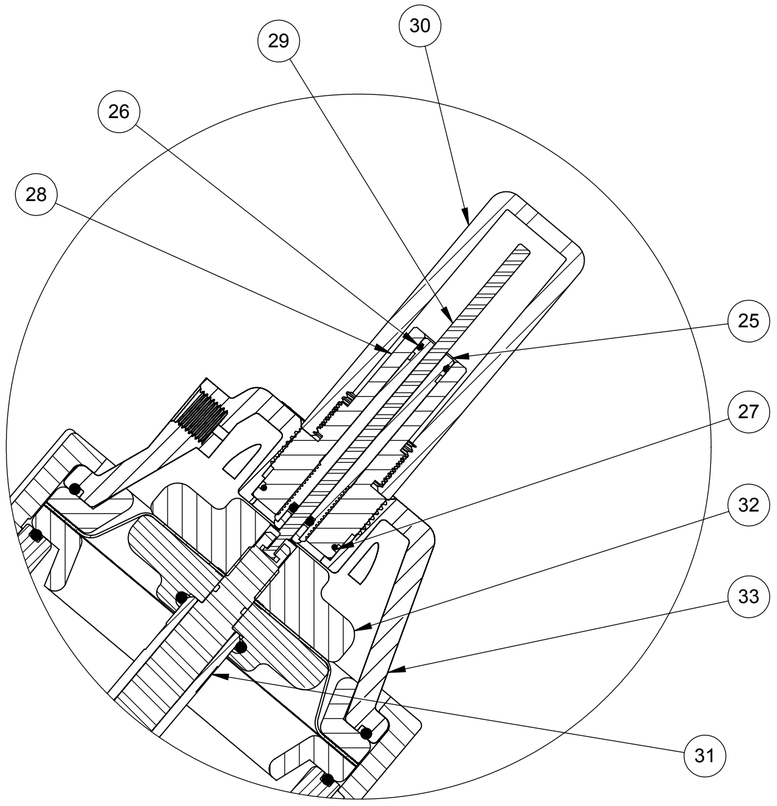

1071347 (K535-X221-14000)
LIMIT STOP/POSITION INDICATOR

SEE REVERSE SIDE FOR STANDARD NORMALLY OPEN MODEL

Watermart Perkasa
www.water.co.id

COMPONENTS / ASSEMBLIES TO BE COMPLIANT AND COMPATIBLE WITH EUROPEAN UNION DIRECTIVE 2011/65/EEC (RoHS2) & REGULATION (EC)1907/2006 (REACH) REQUIREMENTS

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ Matic VALVE & CONTROLS COMPANY INC. REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ MATIC UPON REQUEST.

DO NOT SCALE DRAWING. DIMS. ARE IN INCHES [mm]
INTERPRET DIMS AND TOLERANCES PER ASME Y14.5M -2009
UNLESS OTHERWISE SPECIFIED:
ALL FINISHED MACHINED SURFACES 125 ✓ OR BETTER.
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X ± .015 [0.38]
2 PLACE .XX: ± .01 [0.3]
3 PLACE .XXX: ± .005 [0.13]

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN MWL	07-01-13
APPROVED	
CHECKED	

AQ Matic
Valve & Controls Company Inc.


TITLE
CATALOG SHEET, 535

SIZE B | DWG NO | REV


SCALE 1:4


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

REVISIONS				
REV	ECN	DESCRIPTION	DATE	APP'D
K		1-WAS: INSTALL WASHER SO THAT MARKINGS ARE SEATED FACE DOWN ON THE SHAFT FLANGE AND MARKS ARE NOT VISIBLE WHEN SEATED.	6/28/2013	TJM
L		1-ITEM #4- WAS:1073482, 2-REM'D: BR FROM PART #'S, 3-UPDATED TITLE BLOCK	8/11/2015	TJM
M	1001	AQ MATIC UPDATE & VERIFIED PART NUMBERS	1/17/2017	MGS
N	1764	REDRAWN W/ MODEL UPDATE, REM'D DETAIL A, REPLACED DIAPHRAGM PLATES, REM'ED DIAPHRAGM PLATE WASHER, REM'D STRAP WRENCH	9/14/2020	PMJ

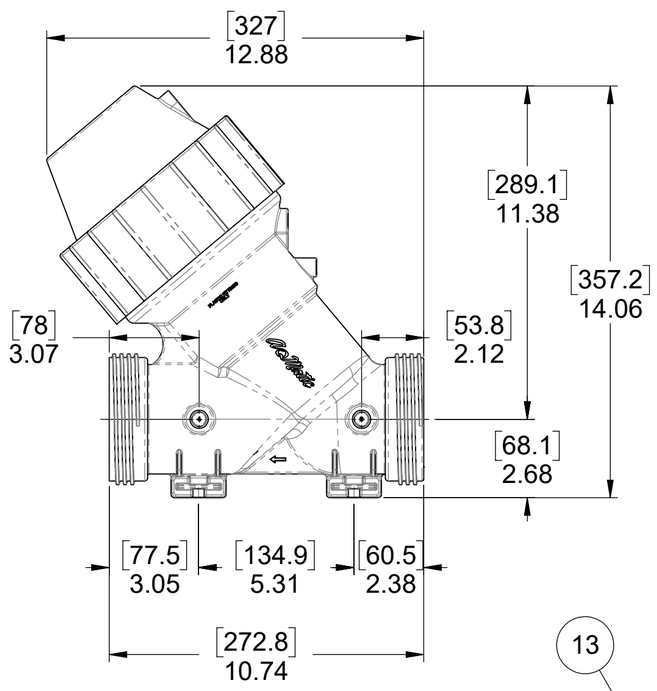

NOTE:
CONNECTORS NOT FURNISHED WITH VALVE.
SEE DWG. NO. 1078165 FOR FEMALE SOCKETED WELD CONNECTORS.

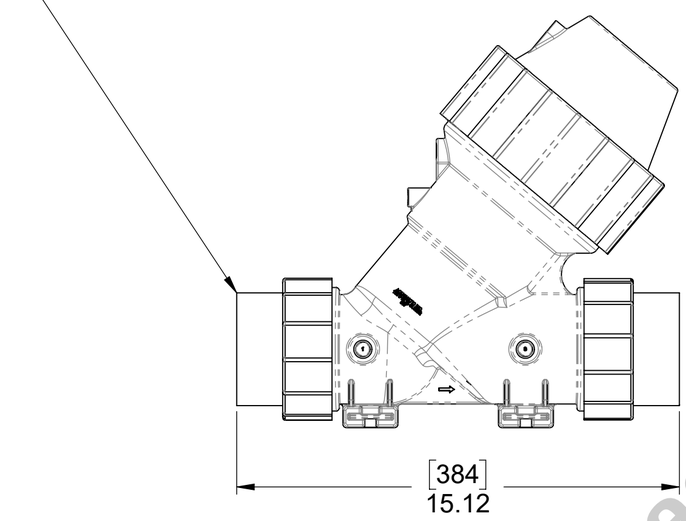

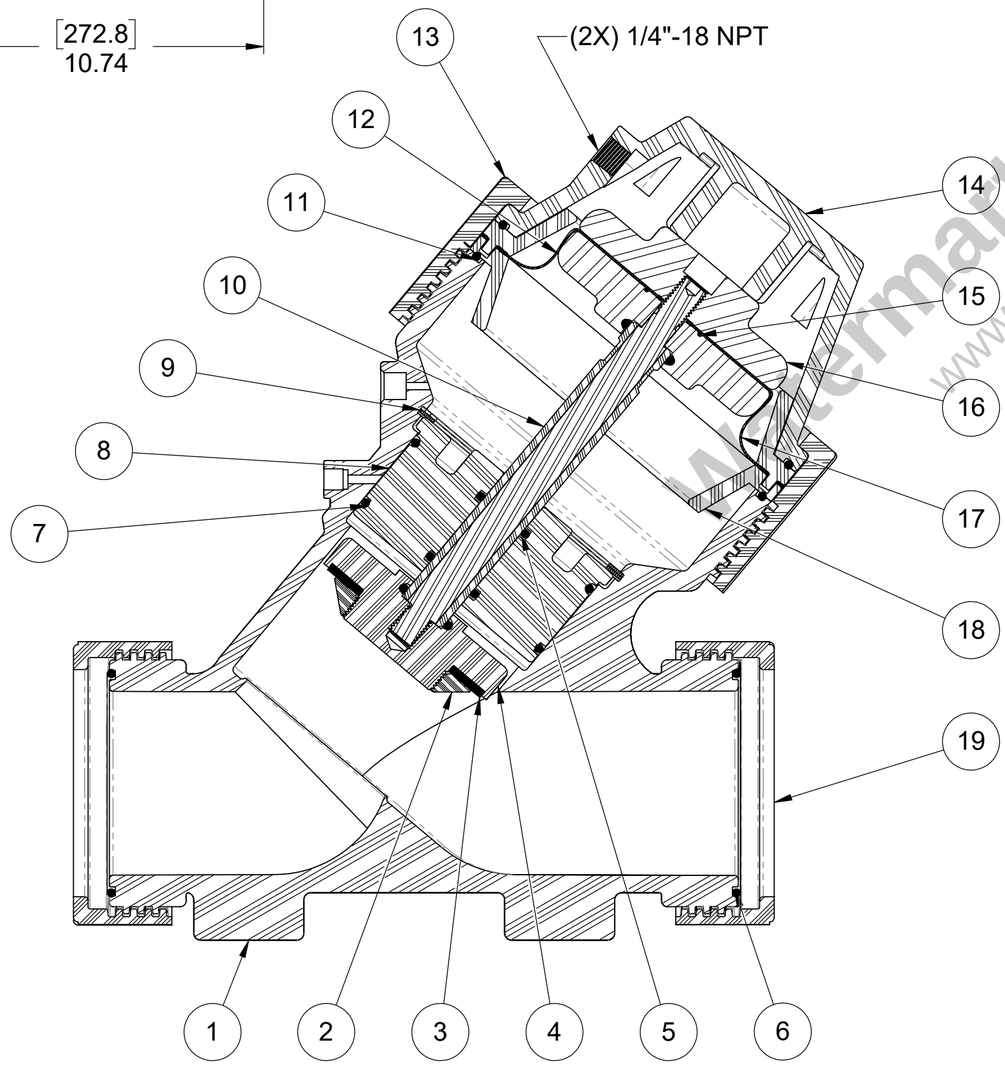

NORMALLY OPEN
1070316 (K537-X200-14000)

BOM TABLE

ITEM NO	PART NO		DESCRIPTION	MATERIAL	QTY
1	1073472	V537-410K	BODY, 537, VALVE		1
2	1073459	V537-093	NUT, DISC PLATE, 537, MCHD		1
3	1073463	V537-110	DISC, 537	EPDM	1
	1073465	V537-112		FKM	
4	43361	V537-502	DISC HOLDER, 537		1
5	1071745	ORE-212	O-RING, 2-212	EPDM	4
	1071816	ORV-212		FKM	
6	1071756	ORE-239	O-RING, 2-239	EPDM	2
	1071829	ORV-239		FKM	
7	1071757	ORE-240	O-RING, 2-240	EPDM	2
	1071830	ORV-240		FKM	
8	1073478	V537-491	GUIDE, SHAFT, 537		1
9	1073505	V537-598	RING, RETAINING, 537		1
10	1073508	V537-702	SHAFT ASSY,537,PVC		1
11	1071714	ORB-259	O-RING, 2-259	BUNA	2
12	4510494	V537-447	K537 LOWER DIAPHRAGM PLATE		1
13	1073446	V537-030K	NUT, CAP RETAINING, 537		1
14	1073445	V537-020K	CAP, VALVE, 537		1
15	1071676	ORB-024	O-RING, 2-024	BUNA	1
16	4510495	V537-444	K537 UPPER DIAPHRAGM PLATE		1
17	1073462	V537-100	DIAPHRAGM, 537	BUNA	1
18	1073491	V537-702	DIAPHRAGM SUPPORT, K537		2
19	1073458	V537-080K	NUT, RETAINING, 537		2

REPAIR KITS

DESCRIPTION	PART NO
DIAPHRAGM & SEALS KIT CONSISTS OF ITEM NO'S 3, 5(4), 6(2), 7(2), 11(2), 15 & 17 BUNA DIAPHRAGM 1073462 (V537-100)	**EPDM** 1070321 (537-RAE)
	FKM 1070337 (537-RAVFB)
INT. PARTS KIT CONSISTS OF ITEM NO'S 2, 4, 8, 9, 10, 12, 16, 18(2)	1070345 (K537-RF)

ASSEMBLY TOOLS

DESCRIPTION	PART NO
LIMIT STOP TOOL (NOT SHOWN)	1073556 (V560-579)

SEE SHEET 2 FOR CONFIGURATION OPTIONS

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ-MATIC REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ-MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ-MATIC UPON WRITTEN REQUEST.

INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5M -1994

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES [mm]
CORNER FILLETS R.005-.020 [.127-.508]
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .100 [2.54]
2 PLACE .XX: ± .010 [0.25]
3 PLACE .XXX: ± .005 [0.13]

THE COMPONENT OR PRODUCT DESCRIBED IN THIS DOCUMENT MUST COMPLY WITH RoHS 3 EU (EUROPEAN UNION) DIRECTIVE 2015/863

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN PMJ	9/14/2020
CHECKED BY	
APPROVED	

AQ-MATIC
VALVES AND CONTROLS

DESCRIPTION
CATALOG SHEET
537 DIAPHRAGM VALVE


SIZE C | DWG NO. 1077691 | REV. N

SCALE 1:2


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Watermart Perkasa
www.water.co.id


REVISIONS				
REV	ECN	DESCRIPTION	DATE	APP'D
		SEE SHEET 1 FOR REVISION HISTORY		

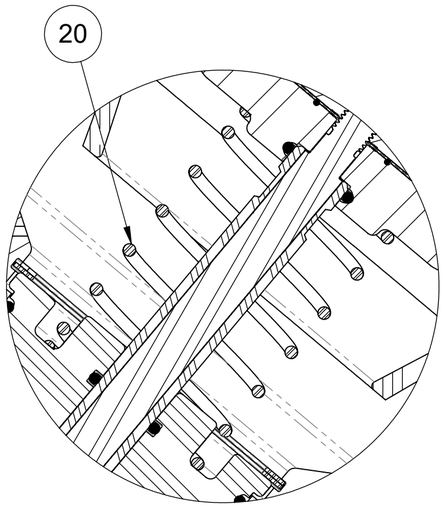


SPRING ASSIST OPEN
1071390 (K537-X201-14000)

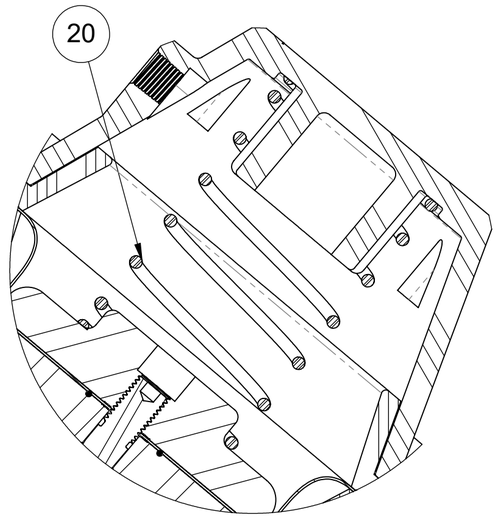

SPRING ASSIST CLOSED
1071391 (K537-X202-14000)

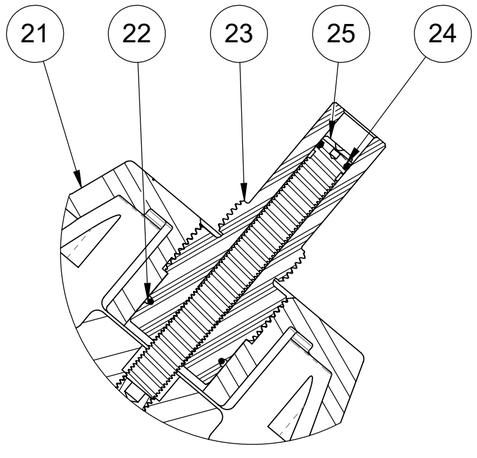

LIMIT STOP
1070317 (K537-X210-14000)

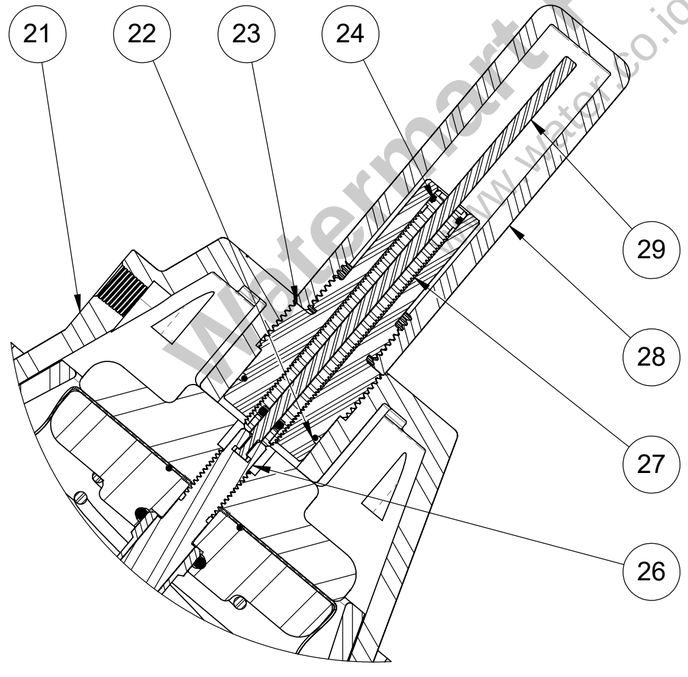

LIMIT STOP / POSITION INDICATOR
1071380 (K537-X2A1-14000) - SPRING ASSIST OPEN
1071381 (K537-X2A2-14000) - SPRING ASSIST CLOSED

SEE SHEET 1 FOR NORMALLY OPEN MODEL

SPRING ASSIST OPEN OR CLOSED

ITEM NO	PART NO		DESCRIPTION	MATERIAL	QTY
20	1073467	V537-170	SPRING, COMPRESSION, 537		1

LIMIT STOP OPTION

ITEM NO	PART NO		DESCRIPTION	MATERIAL	QTY
21	1073473	V537-420K	CAP, 537, LS/PI		1
22	1071676	ORB-024	O-RING, 2-024	BUNA	2
23	1073493	V537-570	GUIDE, LS/PI, 537		1
24	1071668	ORB-012	O-RING, 2-012	BUNA	1
25	1073498	V537-576	SCREW, LIMIT STOP, 537		1

LIMIT STOP WITH POSITION INDICATOR

ITEM NO	PART NO	MODEL	DESCRIPTION		QTY
21	1073473	V537-420K	CAP, 537, LS/PI		1
22	1071676	ORB-024	O-RING, 2-024	BUNA	2
23	1073493	V537-570	GUIDE, LS/PI, 537		1
24	1071668	ORB-012	O-RING, 2-012	BUNA	1
26	1073507	V537-701	SHAFT, 537, PVC, PI		1
27	1073506	V537-700	SCREW, LIMIT STOP, ASSY., 537		1
28	1073489	V534-550	PI SIGHT GLASS, 537		1
29	1073492	V537-555	ROD, PI, 537		1

REPAIR KITS

DESCRIPTION	KIT NUMBER	
INT. PARTS KIT (SPRING ASSIST CLOSED) CONSISTS OF ITEM NO 20	1075239	537-S
INT. PARTS KIT (SPRING ASSIST OPEN) CONSISTS OF ITEM NO 20		
INT. PARTS KIT (LIMIT STOP) CONSISTS OF ITEM NOS 22, 23, 24, 25	1075237	537-LS
INT. PARTS KIT (LIMIT STOP / POS. INDICATOR) CONSISTS OF ITEM NOS 16, 22, 23, 24, 26, 27, 28, 29	1081805	537-PI

CONVERSION KITS

DESCRIPTION	KIT NUMBER	
CONVERSION KIT (SPRING ASSIST CLOSED) CONSISTS OF ITEM NO 20	1075239	537-S
CONVERSION KIT (SPRING ASSIST OPEN) CONSISTS OF ITEM NO 20		
CONVERSION KIT (LIMIT STOP) CONSISTS OF ITEM NOS 11, 16, 21, 22, 23, 24, 25	1071377	537-LSC
CONVERSION KIT (LIMIT STOP / POS. INDICATOR) CONSISTS OF ITEM NOS 11, 16, 21, 22, 23, 24, 26, 27, 28, 29	1071378	537-PIC

Watermart Perkasa
www.water.co.id

THE COMPONENT OR PRODUCT DESCRIBED IN THIS DOCUMENT MUST COMPLY WITH RoHS 3 EU (EUROPEAN UNION) DIRECTIVE 2015/863

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ-MATIC REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ-MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ-MATIC UPON WRITTEN REQUEST.

INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5M -1994

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES [mm]
CORNER FILLETS R.005-.020 [.127-.508]
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .100 [2.54]
2 PLACE .XX: ± .010 [0.25]
3 PLACE .XXX: ± .005 [0.13]

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN PMJ	9/14/2020
CHECKED BY	
APPROVED	

AQ-MATIC
VALVES AND CONTROLS


DESCRIPTION: CATALOG SHEET
537 DIAPHRAGM VALVE

SIZE C | DWG NO. 1077691 | REV. N


SCALE 1:2

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

REVISIONS				
ECN	REV.	DESCRIPTION	DATE	APP'D
1280	M	CORRECTED REPAIR KIT-100# CALLOUT, UPDATE DW # TO 1084008	07/31/18	KJB
1499	N	UPDATED ITEM NO. 11 PART NO.: WAS 1242718 NOW 1071744	06/17/19	KJB
1628	P	CORRECT MINOR ERRORS, STANDARDIZE LAYOUT	01/15/20	PMJ
1846	R	MODEL NUMBERS ADDED, HATCHING UPDATED	2/22/2021	PMJ
1857	S	INSTRUCTIONS FOR REPAIR KITS ADDED	3/4/2021	PMJ

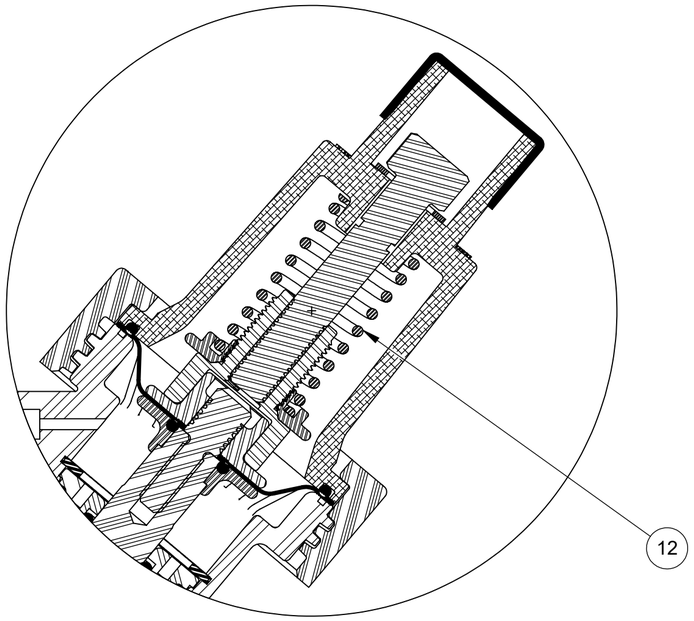

1079700 (K531-X203-14000) (30 PSI - 2 BAR)
FAILSAFE CLOSED

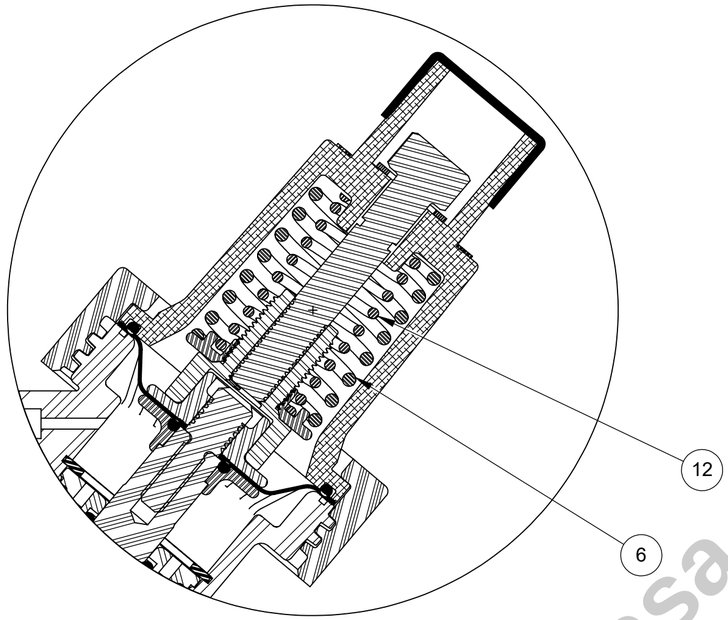

1071294 (K531-X205-14000) (100 PSI - 7 BAR)
FAILSAFE CLOSED

NOTE:
REPLACEMENT COMPONENTS UNIQUE TO FAILSAFE DESIGN ARE AVAILABLE AS A REPAIR KIT ONLY. SEE SHEET 2 FOR KIT DETAILS.

1071291 (K531-X204-14000) (60 PSI - 4 BAR)
FAILSAFE CLOSED

ITEM NO.	PART NUMBER	MODEL	DESCRIPTION		1079700 QTY.	1071291 QTY.	1071294 QTY.
1	1073287	V531-410K	BODY, 531, VALVE	NORYL	1		
2	1071700	ORB-208	O-RING, 2-208	BUNA	1		
3	1071705	ORB-232	O-RING, 2-232	BUNA	1		
4	1071748	ORE-218	O-RING, 2-218	EPDM	2		
5	1071749	ORE-223	O-RING, 2-223	EPDM	2		
6	1073284	V531-171	SPRING, COMPRESSION	SS	-	1	
7	1073274	V531-093K	NUT, DISC RETAINING, 531	NORYL	1		
8	1073277	V531-100	DIAPHRAGM, 531	BUNA	1		
9	1073279	V531-110	DISC	EPDM	1		
10	1073273	V531-080K	NUT, RETAINING, 531	NORYL	2		
11	1071744	ORE-210	O-RING, 2-210	EPDM	2		
12	1073285	V531-172	SPRING, 531 (FS30 & FS100)	SS	1		
13	1073289	V531-172	PLATE, UPPR DPHRGM (FAILSAFE)	SS	1		
14	1073312	V531-593	RING, RETAINING, SERIES 531	NORYL	1		
15	1073290	V531-446	PLATE, LWR DPHRGM (FAILSAFE)	SS	1		
16	1073311	V531-592	SCREW, FAILSAFE, 531	SS	1		
17	1073313	V531-596	BASE, SPRING SUPPORT	SS	1		
18	1073314	V531-597	RING, RETAINER (FOR ADJUST FS)	SS	1		
19	1073296	V531-532	SHAFT, 531, FAILSAFE	NORYL, SS	1		
20	1073293	V531-495K	VALVE CAP, 531 FAILSAFE	ALUM	1		
21	1073395	V535-080K	NUT, SOCKET RETAINING, 535 PIPE	NORYL	1		
22	1073596	WAS-0025	WASHER, (1.00X.686X.060)	SS	1		
23	1073292	V531-491	SHAFT GUIDE, 531	PVC	1		
24	1071483		CAP PLUG, 1-1/2 X 1"	LDPE	1		

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ-MATIC REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ-MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ-MATIC UPON WRITTEN REQUEST.

DO NOT SCALE DRAWING. DIMS. ARE IN INCHES [mm]
INTERPRET DIMS AND TOLERANCES PER ASME Y14.5M -1994
UNLESS OTHERWISE SPECIFIED:
CORNER FILLETS R.005-.020 [.127-.508]
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .100 [2.54]
2 PLACE .XX: ± .010 [0.25]
3 PLACE .XXX: ± .005 [0.13]

THE COMPONENT, PART, OR ASSEMBLY DESCRIBED IN THIS DOCUMENT MUST COMPLY WITH THE EU (EUROPEAN UNION) DIRECTIVE: RoHS DIRECTIVE 2011/65/EC,

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN TMS	05/21/10
CHECKED BY	
APPROVED	

AQ-MATIC
VALVES AND CONTROLS

CATALOG SHEET, 531 FAILSAFE, VALVE

SIZE C | DWG NO. 1084008 | REV. S

SCALE 3:4


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Watermart Perkasa
www.water.co.id


REVISIONS				
ECN	REV.	DESCRIPTION	DATE	APP'D
		SEE SHEET ONE FOR A LIST OF CHANGES.		

CAP REPLACEMENT INSTRUCTIONS:


1. TURN SCREW (16) OF OLD CAP CLOCKWISE UNTIL SPRINGS ARE FULLY COMPRESSED.
2. UNSCREW CAP NUT (21) AND REMOVE OLD CAP ASSEMBLY.
3. PLACE O-RING (3) INTO BOTTOM GROOVE IN CAP ASSEMBLY.
4. PLACE NEW CAP ASSEMBLY ON VALVE AND TIGHTEN CAP NUT (21).
5. TURN SCREW (16) OF NEW CAP COUNTERCLOCKWISE UNTIL CONTACT IS MADE WITH UPPER DIAPHRAGM PLATE (13) WHILE IN CLOSED POSITION.

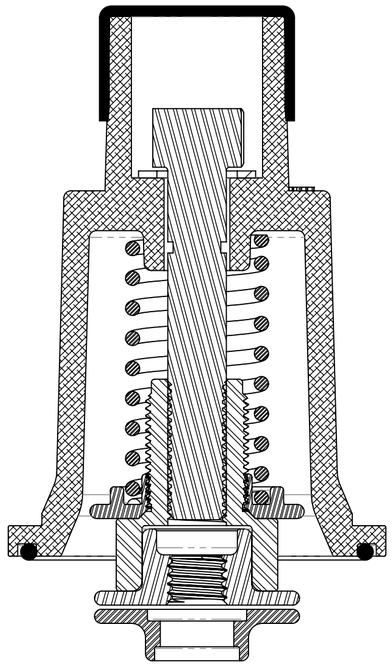

1071263 (K531-FS3)
REPAIR KIT - 30#

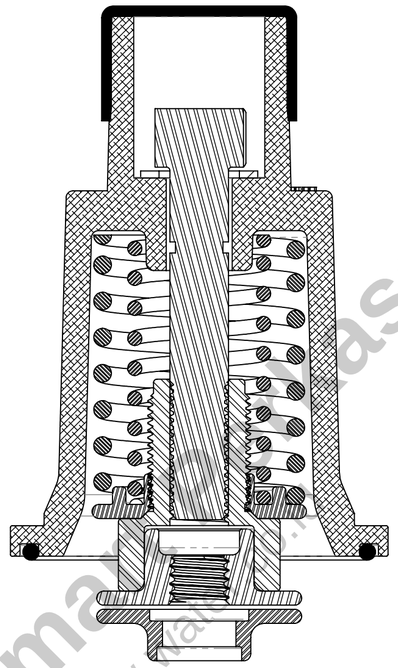

1071264 (K531-FS6)
REPAIR KIT - 60#

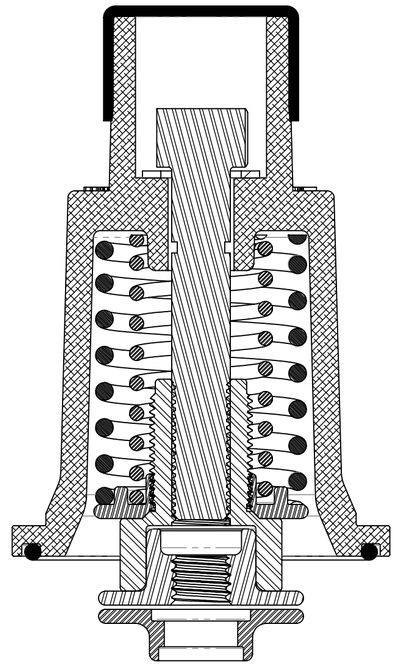

1071262 (K531-FS1)
REPAIR KIT - 100#

Watermart
www.watermart.co.id

REPAIR KITS	
REPAIR KIT NO.	**PART NUMBERS INCLUDED**
1071263 (K531-FS3)	3,12,13,15,16,17,18,22,24
1071264 (K531-FS6)	3,6,12,13,15,16,17,18,22,24
1071262 (K531-FS1)	3,6,12,13,15,16,17,18,22,24

VALVE SERIES	30# FAILSAFE #TURNS UP FROM BOTTOM	60# FAILSAFE #TURNS UP FROM BOTTOM	100# FAILSAFE #TURNS UP FROM BOTTOM
531	**7**	**0**	**9**

NOTES:
1. REPAIR KIT IS TO BE SHIPPED TO CUSTOMER IN A FULLY COMPRESSED STATE.

THE COMPONENT, PART, OR ASSEMBLY DESCRIBED IN THIS DOCUMENT MUST COMPLY WITH THE EU (EUROPEAN UNION) DIRECTIVE: RoHS DIRECTIVE 2011/65/EC.

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ-MATIC REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ-MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ-MATIC UPON WRITTEN REQUEST.

DO NOT SCALE DRAWING. DIMS. ARE IN INCHES [mm]
INTERPRET DIMS AND TOLERANCES PER ASME Y14.5M -1994
UNLESS OTHERWISE SPECIFIED:
CORNER FILLETS R.005-.020 [.127-.508]
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .100 [2.54]
2 PLACE .XX: ± .010 [0.25]
3 PLACE .XXX: ± .005 [0.13]

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN TMS	05/21/10
CHECKED BY	
APPROVED	

AQ-MATIC
VALVES AND CONTROLS


CATALOG SHEET, 531 FAILSAFE, VALVE

SIZE C | DWG NO. 1084008 | REV. S


SCALE 1:1

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


REVISIONS				
REV	ECN	DESCRIPTION	DATE	APP'D
H		RELEASE INTO THE SYSTEM	5/19/2010	MHM
J	1848	REDRAWN INTO AQ TEMPLATE	2/23/2021	PMJ
K	1857	REPAIR KIT INSTRUCTIONS ADDED	3/4/2021	PMJ

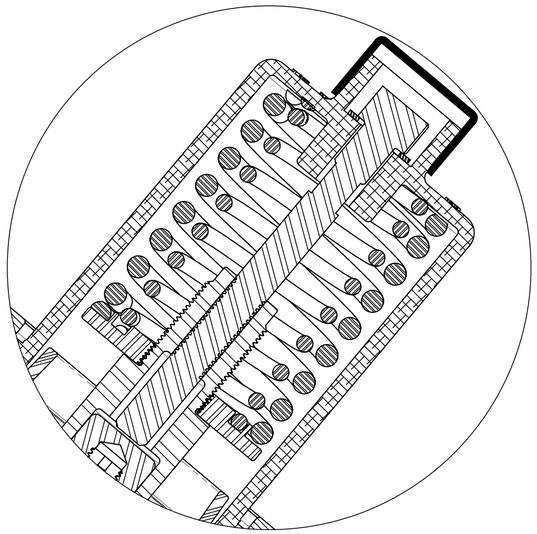

1071334 (K534-X204-14000)
(60 PSI - 4 BAR)
FAILSAFE CLOSED

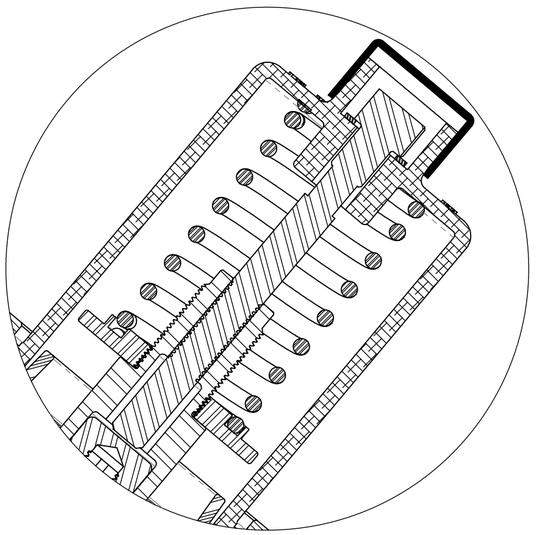

1079718 (K534-X203-14000)
(30 PSI - 2 BAR)
FAILSAFE CLOSED

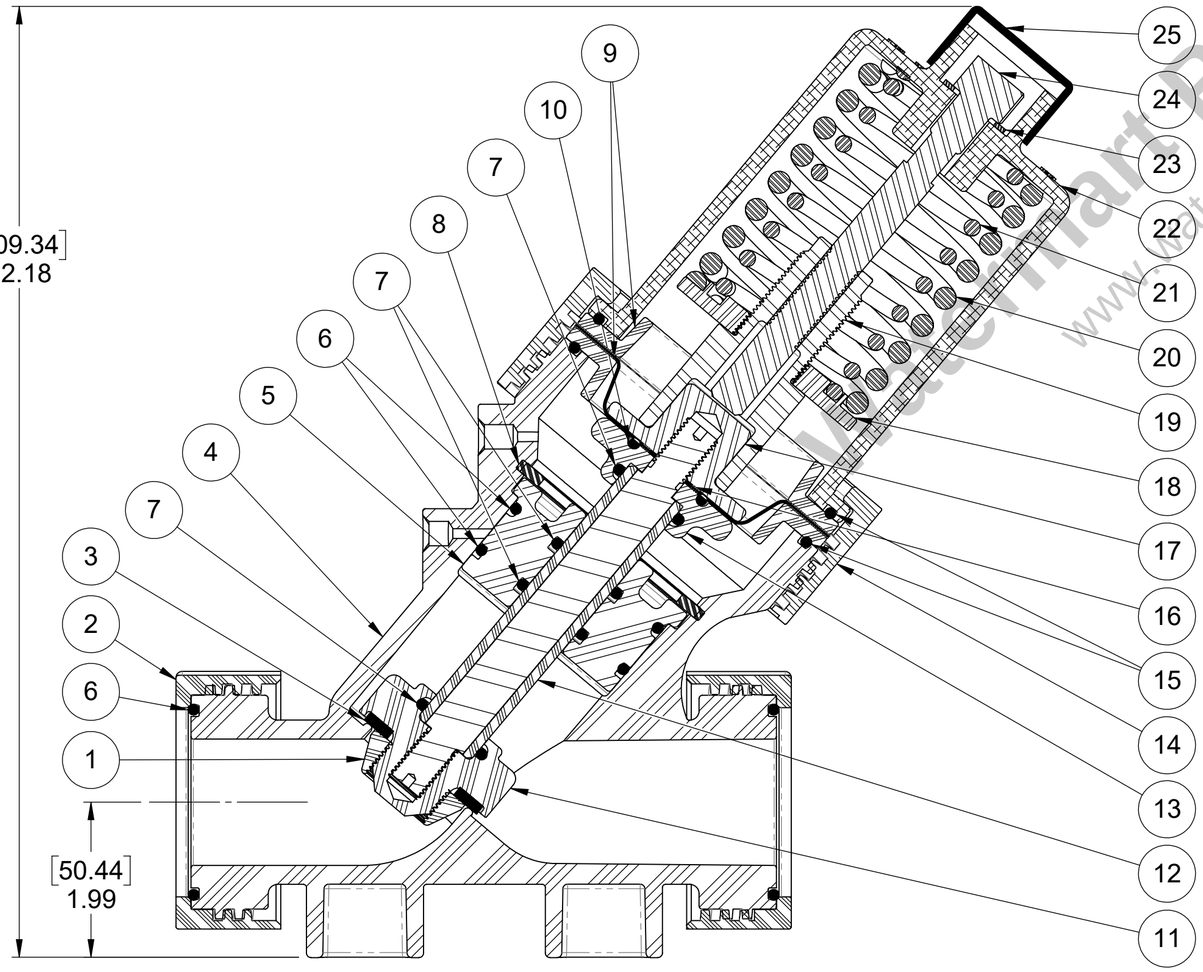

1071335 (K534-X205-14000)
(100 PSI - 7 BAR)
FAILSAFE CLOSED

NOTE:
REPLACEMENT COMPONENTS UNIQUE TO FAILSAFE DESIGN ARE AVAILABLE AS A REPAIR KIT ONLY. SEE SHEET 2 FOR KIT DETAILS.

ITEM NO.	PART NO.	MODEL	DESCRIPTION	1079718 30 LBS. QTY.	1071334 60 LBS. QTY.	1071335 100 LBS. QTY.
1	1073330	V534-093	PLATE, DISC, 534, PVC, MCHD	1		
2	1073329	V534-080K	NUT, RETAINING, 534	2		
3	1073337	V534-110	DISC, 534	1		
4	1073344	V534-410K	VALVE BODY	1		
5	1073350	V534-491	GUIDE, SHAFT, 534	1		
6	1071751	ORE-228	O-RING, 2-228	4		
7	1071745	ORE-212	O-RING, 2-212, EPDM	4		
8	1073375	V534-593	RING, RETAINING, 534	1		
9	1073366	V534-551K	SUPPORT, DIAPHRAGM, 534	2		
10	1076766	ORB-214	O-RING, 2-214	1		
11	1073355	V534-502	HOLDER, DISC, FS, 534	1		
12	1073379	V534-702	SHAFT ASSEMBLY, FS, 534	1		
13	1073349	V534-448	PLATE, DIAPHRAGM, LWR, FS, 534	1		
14	43073		NUT, FS, 534	1		
15	1071709	ORB-240	O-RING, 2-240	2		
16	1073335	V534-100	DIAPHRAGM, SERIES 534	1		
17	1073348	V534-444	PLATE, DIAPHRAGM, UPR, FS, 534	1		
18	1073377	V534-597	RING, SPRG RETAINER, 534	1		
19	1073376	V534-596	BASE, SPRING RETAINER	1		
20	1073341	V534-171	SPRING, COMPRESSION	-	1	
21	1073342	V534-172	SPRING, COMPRESSION	1		
22	1073352	V534-495K	CAP, FS, 534	1		
23	1073596	WAS-0025	WASHER, (1.00X.686X.060)	1		
24	1073374	V534-592	SCREW, FS, 534	1		
25	1071483		CAP PLUG, 1-1/2 X 1"	1		

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ-MATIC REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ-MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ-MATIC UPON WRITTEN REQUEST.

INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5M -1994

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES [mm]
CORNER FILLETS R.005-.020 [.127-.508]
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .100 [2.54]
2 PLACE .XX: ± .010 [0.25]
3 PLACE .XXX: ± .005 [0.13]

THE COMPONENT OR PRODUCT DESCRIBED IN THIS DOCUMENT MUST COMPLY WITH RoHS 3 EU (EUROPEAN UNION) DIRECTIVE 2015/863

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN PMJ	2/23/2021
CHECKED BY	
APPROVED	

AQ-MATIC
VALVES AND CONTROLS


DESCRIPTION: CATALOG SHEET
K534 FAILSAFE

SIZE C | DWG NO. 1078167 | REV. K


SCALE 2:3

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


REVISIONS				
REV	ECN	DESCRIPTION	DATE	APP'D
		SEE SHEET 1 FOR REVISION HISTORY		

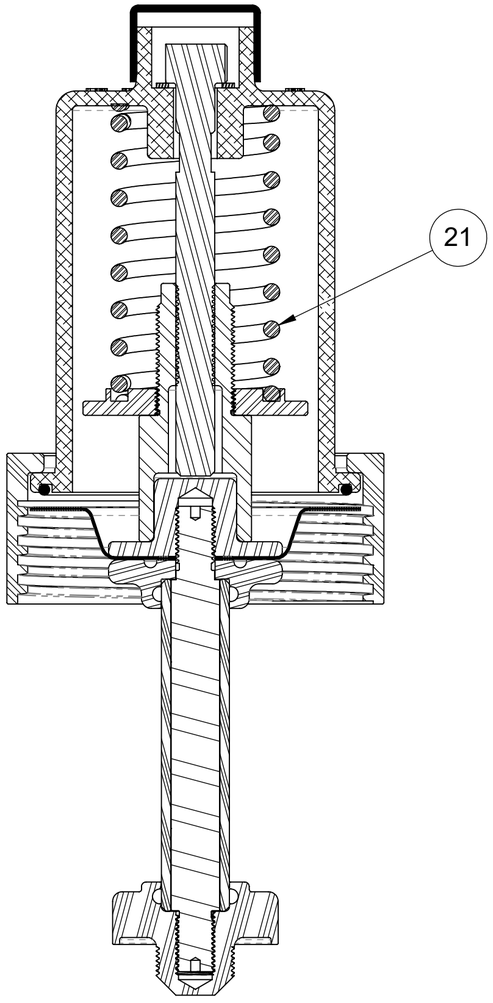

1071306 (K534-FS3)
REPAIR KIT - 30 LBS.

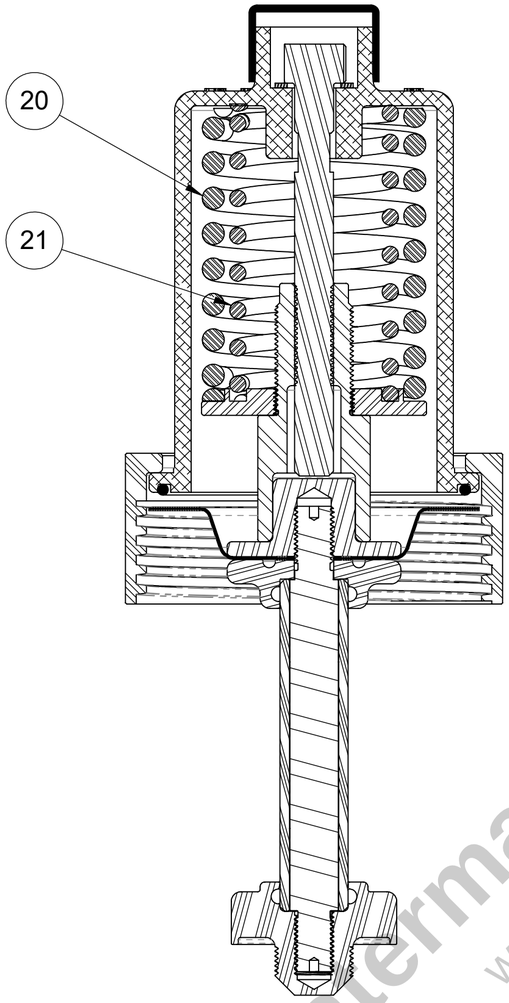

1071307 (K534-FS6)
REPAIR KIT - 60 LBS.

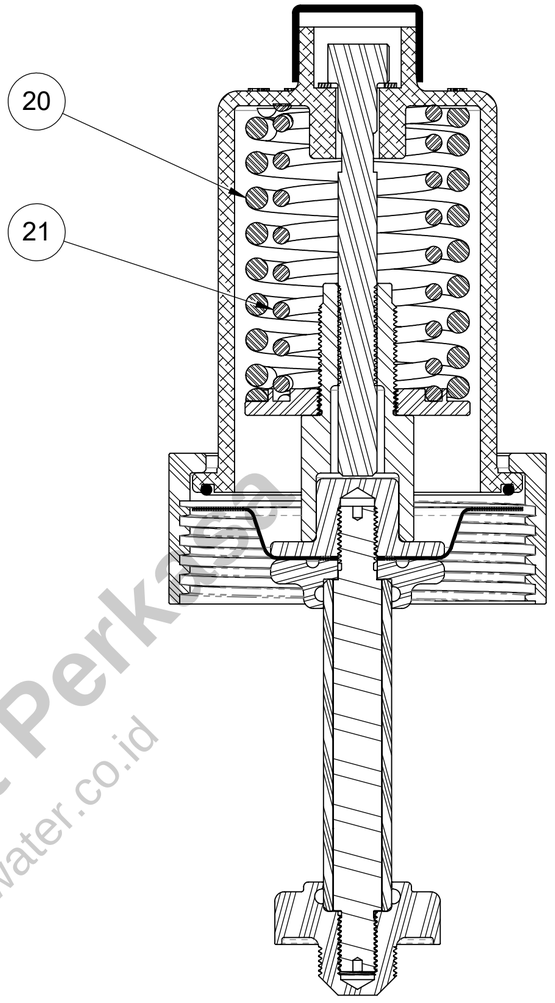

1071305 (K534-FS1)
REPAIR KIT - 100 LBS.

CAP REPLACEMENT INSTRUCTIONS:
1. TURN SCREW (24) OF OLD CAP CLOCKWISE UNTIL SPRINGS ARE FULLY COMPRESSED.
2. UNSCREW CAP NUT (14) AND REMOVE OLD CAP ASSEMBLY.
3. PLACE O-RING (15) INTO BOTTOM GROOVE IN CAP ASSEMBLY.
4. PLACE NEW CAP ASSEMBLY ON VALVE AND TIGHTEN CAP NUT (14).
5. TURN SCREW (24) OF NEW CAP COUNTERCLOCKWISE UNTIL CONTACT IS MADE WITH UPPER DIAPHRAGM PLATE (17) WHILE IN CLOSED POSITION.

NOTES:
1. REPLACEMENT COMPONENTS UNIQUE TO FAILSAFE DESIGN ARE AVAILABLE AS A REPAIR KIT ONLY. SEE SHEET 2 FOR KIT DETAILS.
2. REPAIR KIT IS TO BE SHIPPED TO CUSTOMER IN A FULLY COMPRESSED STATE.

REPAIR KITS

ITEM NO.	PART NO.	MODEL	DESCRIPTION	1071306 K534-FS3 30 LBS. QTY.	1071307 K534-FS6 60 LBS. QTY.	1071305 K534-FS1 100 LBS. QTY.
11	1073355	V534-502	HOLDER, DISC, FS, 534	1		
12	1073379	V534-702	SHAFT ASSEMBLY, FS, 534	1		
13	1073349	V534-448	PLATE, DIAPHRAGM, LWR, FS, 534	1		
14	43073		NUT, FS, 534	1		
15	1071709	ORB-240	O-RING, 2-240	1		
16	1073335	V534-100	DIAPHRAGM, SERIES 534	1		
17	1073348	V534-444	PLATE, DIAPHRAGM, UPR, FS, 534	1		
18	1073377	V534-597	RING, SPRG RETAINER, 534	1		
19	1073376	V534-596	BASE, SPRING RETAINER	1		
20	1073341	V534-171	SPRING, COMPRESSION	-	1	
21	1073342	V534-172	SPRING, COMPRESSION	1		
22	1073352	V534-495K	CAP, FS, 534	1		
23	1073596	WAS-0025	WASHER, (1.00X.686X.060)	1		
24	1073374	V534-592	SCREW, FS, 534	1		
25	1071483		CAP PLUG, 1-1/2 X 1"	1		

VALVE SERIES	30 LBS. FAILSAFE #TURNS UP FROM BOTTOM	60 LBS. FAILSAFE #TURNS UP FROM BOTTOM	100 LBS. FAILSAFE #TURNS UP FROM BOTTOM
534	2	5	13

Watermart Perkasa
www.water.co.id

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ-MATIC REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ-MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ-MATIC UPON WRITTEN REQUEST.

INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5M -1994

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES [mm]
CORNER FILLETS R.005-.020 [.127-.508]
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .100 [2.54]
2 PLACE .XX: ± .010 [0.25]
3 PLACE .XXX: ± .005 [0.13]

THE COMPONENT OR PRODUCT DESCRIBED IN THIS DOCUMENT MUST COMPLY WITH RoHS 3 EU (EUROPEAN UNION) DIRECTIVE 2015/863

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN PMJ	2/23/2021
CHECKED BY	
APPROVED	

AQ-MATIC
VALVES AND CONTROLS


DESCRIPTION: CATALOG SHEET
K534 FAILSAFE

SIZE C | DWG NO. 1078167 | REV. K


SCALE 2:3

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

REVISIONS				
REV	ECN	DESCRIPTION	DATE	APP'D
E		REDRAWN IN SOLIDWORKS: 1-ADD'D:BR1071745: 2-REM'D:BR1071483	5/18/2010	MHM
F		1-ADD'D:43307	10/21/2011	TMS
G	1001	AQ MATIC UPDATE & VERIFIED PART NUMBERS	1/27/2017	MGS
H	1845	REDRAWN IN NEW TEMPLATE, ADD'D MODEL NO'S	2/22/2021	PMJ
J	1857	REPAIR KIT INSTRUCTIONS ADDED	3/4/2021	PMJ

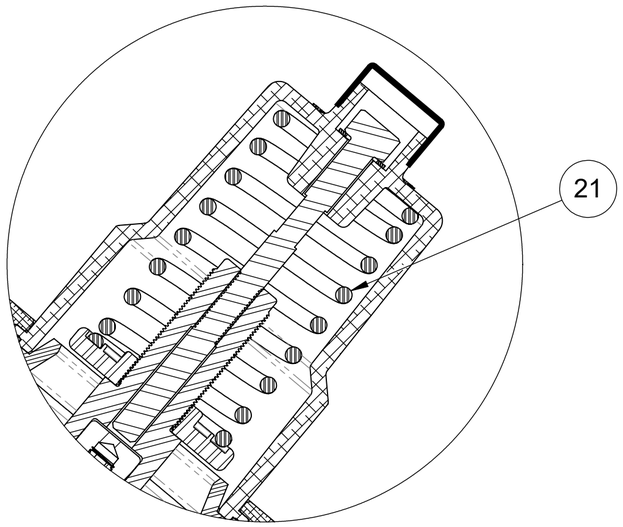


1076665 (K535-X203-14000)
(30 PSI - 2 BAR)
FAILSAFE CLOSED

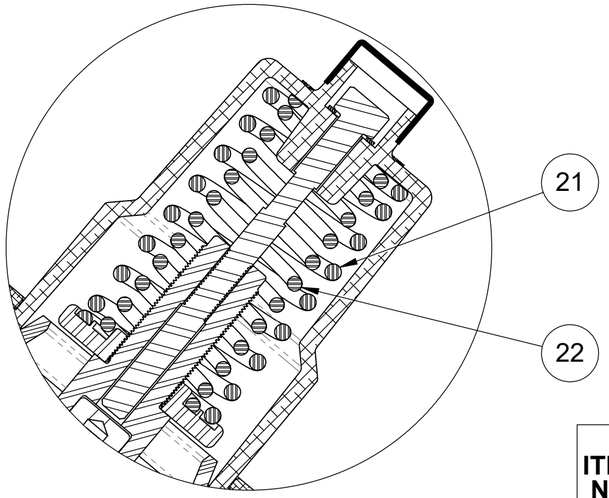

1071368 (K535-X204-14000)
(60 PSI - 4 BAR)
FAILSAFE CLOSED

NOTE:
REPLACEMENT COMPONENTS UNIQUE TO FAILSAFE DESIGN ARE AVAILABLE AS A REPAIR KIT ONLY. SEE SHEET 2 FOR KIT DETAILS.

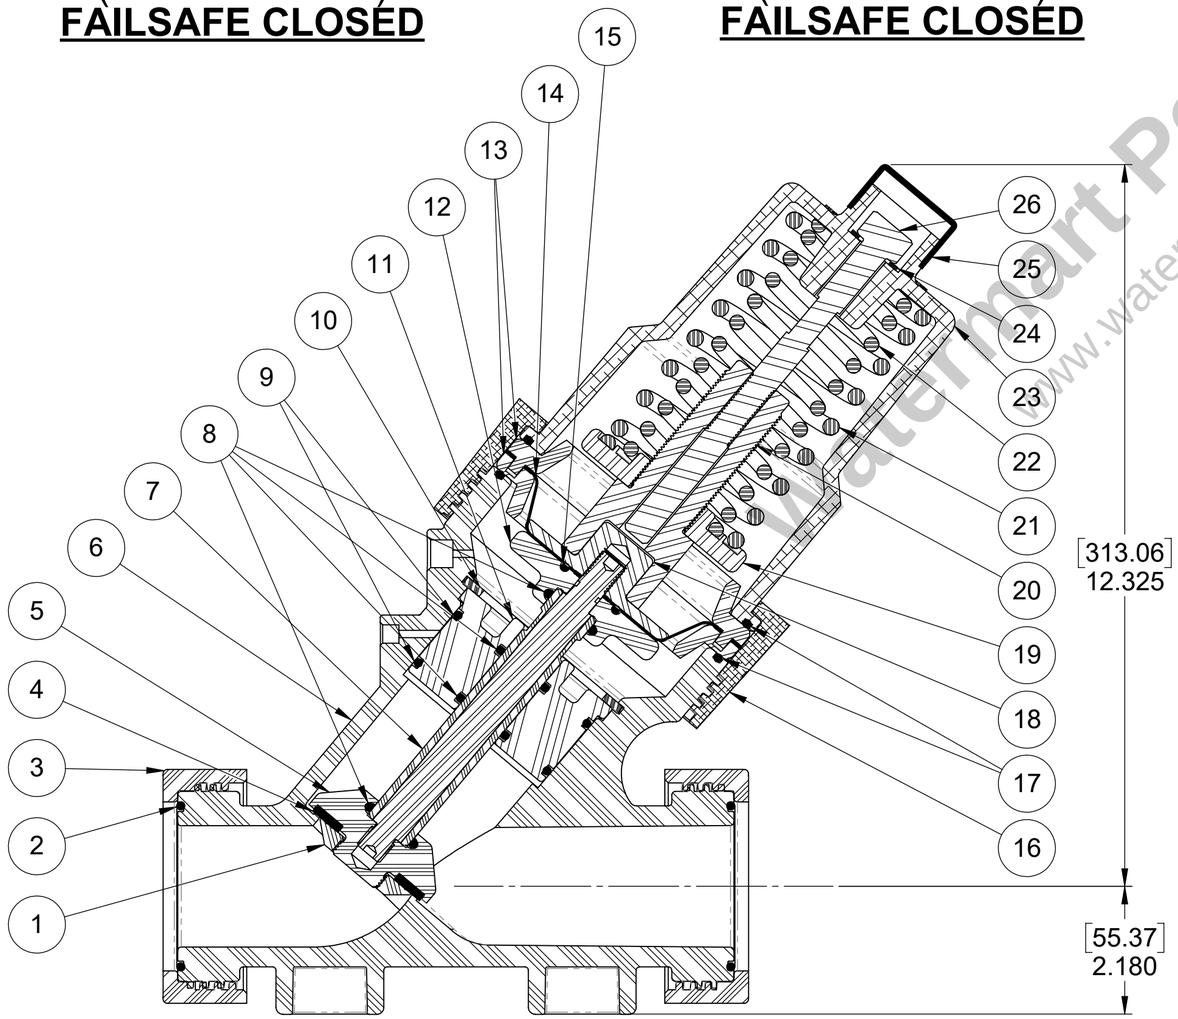

1071371 (K535-X205-14000) (100 PSI - 7BAR)
FAILSAFE CLOSED

ITEM NO.	PART NO.		DESCRIPTION	1076665 30 PSI QTY.	1071368 60 PSI QTY.	1071371 100 PSI QTY.
1	1073396	V535-093	NUT, DISC RETAINING, 535	1		
2	1071752	ORE-231	O-RING, 2-231	2		
3	1073395	V535-080K	NUT, SOCKET RETAINING, 535	2		
4	1073401	V535-110	DISC, 535	1		
5	1073416	V535-500	HOLDER, DISC, 535	1		
6	1073407	V535-410K	BODY, 535, VALVE	1		
7	1073439	V535-702	ASSEMBLY, SHAFT, 535	1		
8	1071745	ORE-212	O-RING, 2-212, EPDM	4		
9	1071753	ORE-232	O-RING, 2-232	2		
10	1073434	V535-593	RING, RETAINING, 535	1		
11	1073413	V535-491	GUIDE, SHAFT, 535	1		
12	1073412	V535-448	PLATE, DIAPHRAGM, LWR, FS, 535	1		
13	1073425	V535-551K	SUPPORT, DIAPHRAGM, 535	2		
14	1073399	V535-100	DIAPHRAGM, 535	1		
15	1076766	ORB-214	O-RING, 2-214	1		
16	43307		NUT, FS, 535	1		
17	1071712	ORB-248	O-RING, 2-248	2		
18	1073411	V535-444	PLATE, DIAPHRAGM, UPR, FS, 535	1		
19	1073436	V535-597	RING, SPRG RETAINER, 535	1		
20	1073435	V535-596	BASE, SPRING RETAINER	1		
21	1073405	V535-171	SPRING, COMPRESSION	1		
22	1073406	V535-172	SPRING, COMPRESSION	-	1	
23	1073415	V535-495K	CAP, FS, 535	1		
24	1073596	WAS-0025	WASHER, (1.00X.686X.060)	1		
25	1071483		CAP PLUG, 1-1/2 X 1"	1		
26	1073433	V535-592	SCREW, FS, 535	1		

Watermart Perkasa
www.water.co.id

THE COMPONENT OR PRODUCT DESCRIBED IN THIS DOCUMENT MUST COMPLY WITH RoHS 3 EU (EUROPEAN UNION) DIRECTIVE 2015/863

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ-MATIC REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ-MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ-MATIC UPON WRITTEN REQUEST.

INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5M -1994

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES [mm]
CORNER FILLETS R.005-.020 [.127-.508]
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .100 [2.54]
2 PLACE .XX: ± .010 [0.25]
3 PLACE .XXX: ± .005 [0.13]

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN PMJ	2/19/2021
CHECKED BY	
APPROVED	

AQ-MATIC
VALVES AND CONTROLS

DESCRIPTION
CATALOG SHEET
535 FAILSAFE VALVE

SIZE C | DWG NO. 1084011 | REV. J


SCALE 1:2

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


REVISIONS				
REV	ECN	DESCRIPTION	DATE	APP'D
		SEE SHEET 1 FOR REVISION HISTORY		

REPAIR KITS						
ITEM NO.	PART NO.		DESCRIPTION	1071341 30 LBS. QTY.	1071342 30 LBS. QTY.	1071340 30 LBS. QTY.
14	1073412	V535-448	PLATE, DIAPHRAGM, LWR, FS, 535	1		
15	43307		NUT, FS, 535	1		
16	1071712	ORB-248	O-RING, 2-248	1		
17	1073411	V535-444	PLATE, DIAPHRAGM, UPR, FS, 535	1		
18	1073436	V535-597	RING, SPRG RETAINER, 535	1		
19	1073435	V535-596	BASE, SPRING RETAINER	1		
20	1073405	V535-171	SPRING, COMPRESSION	1		
21	1073406	V535-172	SPRING, COMPRESSION	-	1	
22	1073415	V535-495K	CAP, FS, 535	1		
23	1073596	WAS-0025	WASHER, (1.00X.686X.060)	1		
24	1071483		CAP PLUG, 1-1/2 X 1"	1		
25	1073433	V535-592	SCREW, FS, 535	1		


CAP REPLACEMENT INSTRUCTIONS:
1. TURN SCREW (25) OF OLD CAP CLOCKWISE UNTIL SPRINGS ARE FULLY COMPRESSED.
2. UNSCREW CAP NUT (15) AND REMOVE OLD CAP ASSEMBLY.
3. PLACE O-RING (16) INTO BOTTOM GROOVE IN CAP ASSEMBLY.
4. PLACE NEW CAP ASSEMBLY ON VALVE AND TIGHTEN CAP NUT (15).
5. TURN SCREW (25) OF NEW CAP COUNTERCLOCKWISE UNTIL CONTACT IS MADE WITH UPPER DIAPHRAGM PLATE (17) WHILE IN CLOSED POSITION.

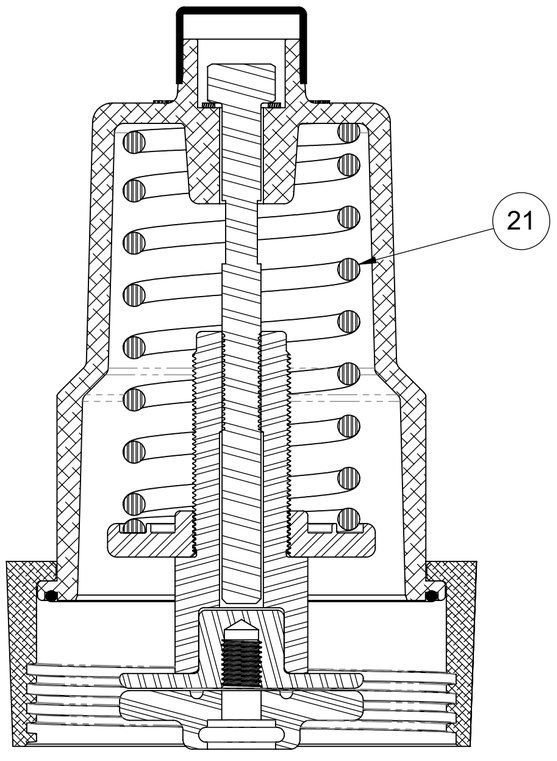

1071341 (K535-FS3)
REPAIR KIT - 30 LBS.

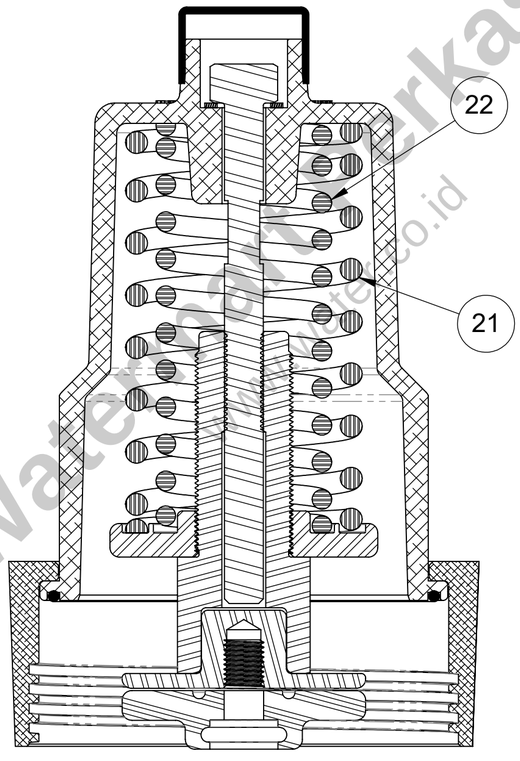

1071342 (K535-FS6)
REPAIR KIT - 60 LBS.

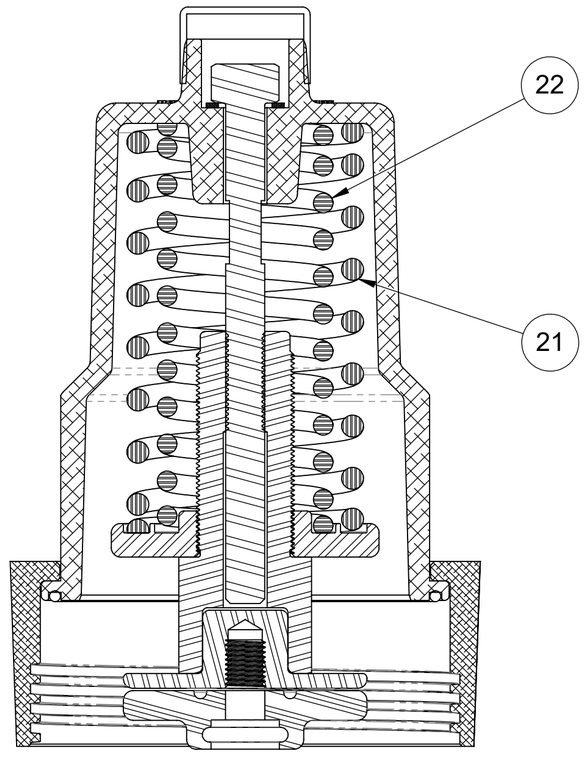

1071340 (K535-FS1)
REPAIR KIT - 100 LBS.

VALVE SERIES	30 LBS. FAILSAFE # TURNS UP FROM BOTTOM	60 LBS. FAILSAFE # TURNS UP FROM BOTTOM	100 LBS. FAILSAFE # TURNS UP FROM BOTTOM
535	6	0	12

NOTES:
1. REPAIR KIT IS TO BE SHIPPED TO CUSTOMER IN A FULLY COMPRESSED STATE.

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ-MATIC REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ-MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ-MATIC UPON WRITTEN REQUEST.

INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5M -1994

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES [mm]
CORNER FILLETS R.005-.020 [.127-.508]
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .100 [2.54]
2 PLACE .XX: ± .010 [0.25]
3 PLACE .XXX: ± .005 [0.13]

THE COMPONENT OR PRODUCT DESCRIBED IN THIS DOCUMENT MUST COMPLY WITH RoHS 3 EU (EUROPEAN UNION) DIRECTIVE 2015/863

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN PMJ	2/19/2021
CHECKED BY	
APPROVED	

AQ-MATIC
VALVES AND CONTROLS

DESCRIPTION: 535 FAILSAFE VALVE


SIZE C | DWG NO. 1084011 | REV. I

SCALE 2:3


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Watermart Perkasa
www.water.co.id


REVISIONS				
ECN	REV.	DESCRIPTION	DATE	APP'D
1834	F	REMOVE BR1073477, ADD 4510494, UPDATE DRAWING	1/28/21	TRK
1857	G	INSTRUCTIONS FOR REPAIR KITS ADDED.	3/4/21	PMJ

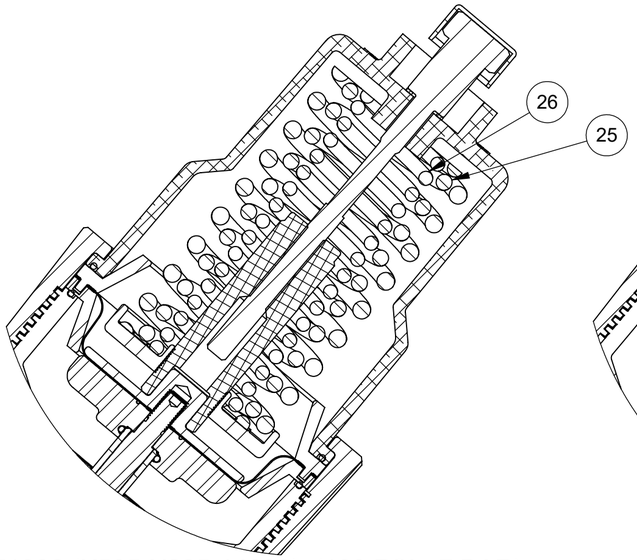

1071396 (K535-X205-14000) (100 PSI - 7 BAR)
FAILSAFE CLOSED

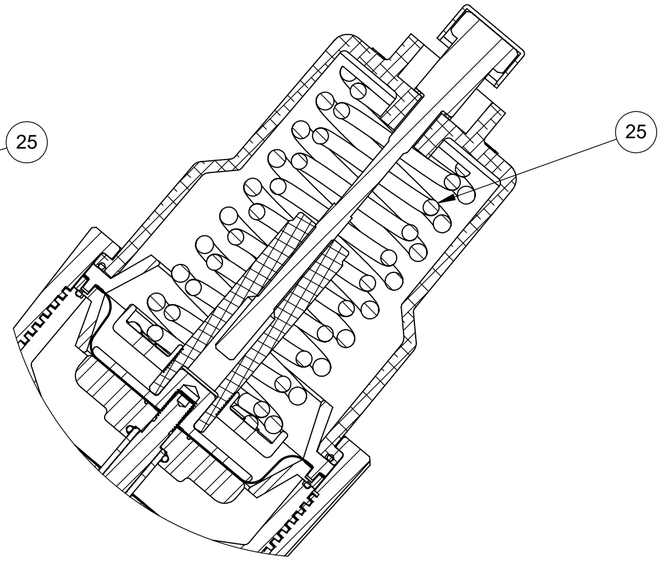

1071393 (K535-X204-14000) (60 PSI - 4 BAR)
FAILSAFE CLOSED

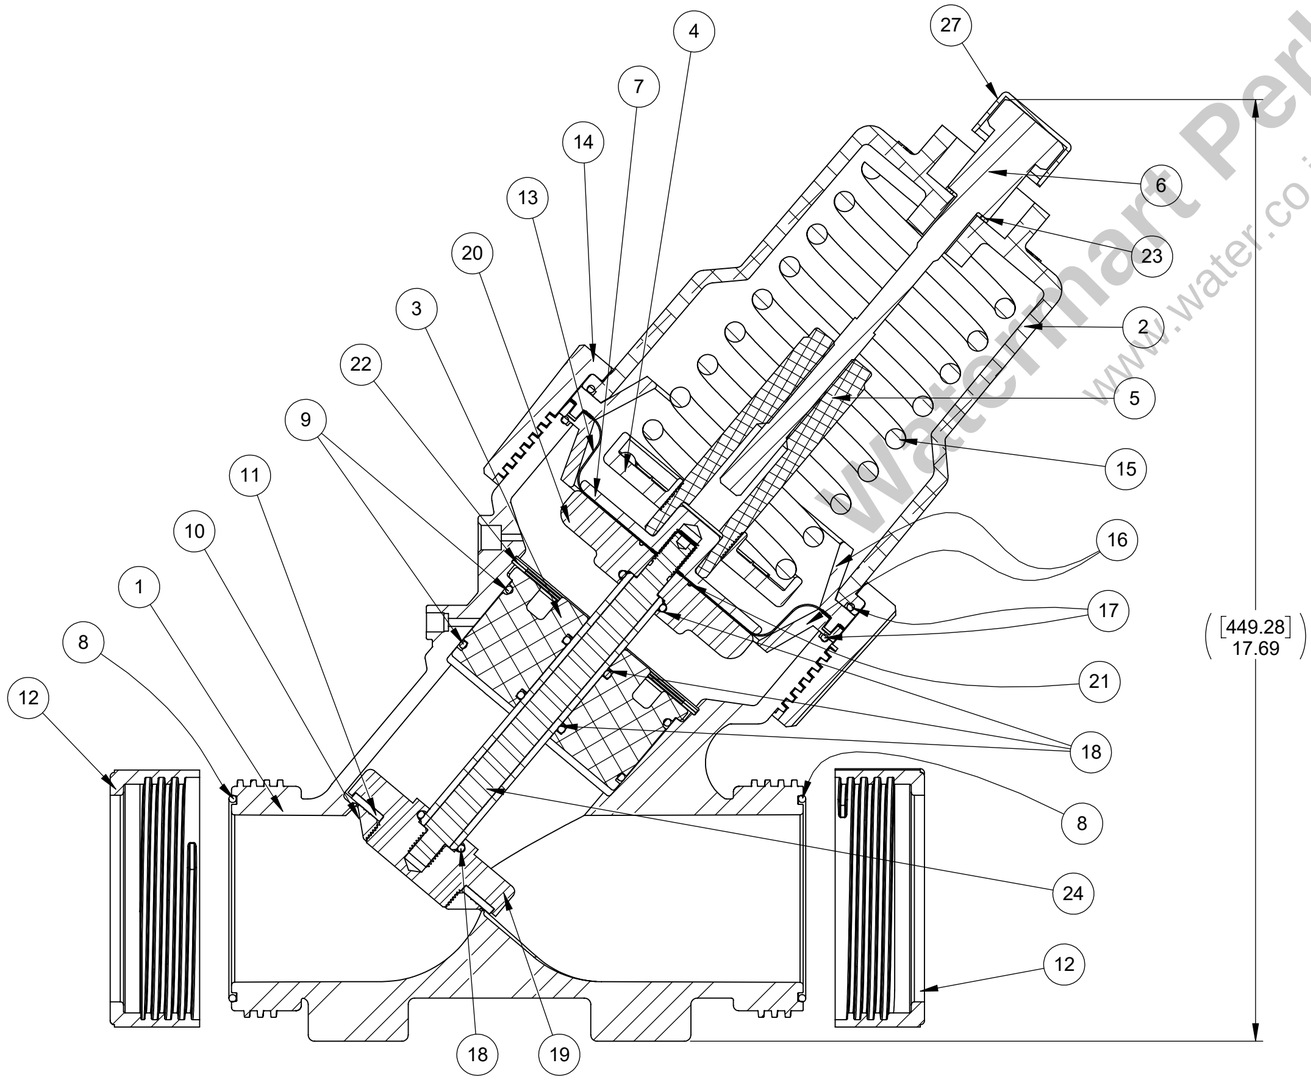

1071392 (K537-X203-14000) (30 PSI - 2 BAR)
FAILSAFE CLOSED

ITEM NO.	100PSI - 7BAR 1071396 QTY.	60PSI- 4BAR 1071393 QTY.	30PSI- 2BAR 107392 QTY.	MATERIAL	DESCRIPTION	PART NUMBER
1	1	1	1	NORYL	BODY, 537, VALVE	1073472 (V537- 410K)
2	1	1	1	ALUMINUM	CAP, FAILSAFE	1073480 (V537-495)
3	1	1	1	PVC	GUIDE, SHAFT, 537	1073478 (V537-491)
4	1	1	1	SS	RING, SPRING RETAINER	1073504 (V537-597)
5	1	1	1	SS	BASE, SPRING RETAINER	1073503 (V537-596)
6	1	1	1	SS	SCREW, FAILSAFE	1073501 (V537-592
7	1	1	1	SS	PLATE, UPPER DIAPGM, FAIL SAFE	1073476 (V537-444)
8	2	2	2	EPDM	O-RING, 2-239	1071756 (ORE-239)
9	2	2	2	EPDM	O-RING, 2-240	1071757 (ORE-240)
10	1	1	1	PVC	NUT, DISC, PLATE, 537	1073459 (V537-093)
11	1	1	1	EPDM	DISC, 537	1073463 (V537-110)
12	2	2	2	NORYL	NUT, RETAINING, 537	1073458 (V537-080K)
13	1	1	1	NITRILE	DIAPHRAGM	1073462 (V537-100)
14	1	1	1	ALUMINUM	NUT, CAP RETAINING, 537 FAILSAFE	43293
15	1	1	1	SS	COMPRESSION SPRING	1073468 (V537-171)
16	2	2	2	NORYL	DIAPHRAGM SUPPORT, K537	1073491 (V537-551K)
17	2	2	2	NITRILE	O-RING, 2-259	1071714 (ORB-259)
18	4	4	4	EPDM	O-RING, 2-212	1071745 (ORE-212)
19	1	1	1	ULTEM	HOLDER, DISC, 537	43361
20	1	1	1	SS	K537 LOWER DIAPHRAGM PLATE	4510494
21	1	1	1	FKM	O-RING, 2-024	1071676
22	1	1	1	SS	RING, RETAINING, 537	1073505 (V537-598)
23	1	1	1	SS	WASHER, 1.00 X .686 X .06	1073596 (WAS-0025)
24	1	1	1	PVC (OUTER) / SS (INNER)	SHAFT (ASSEMBLE)	1073508 (V537-702)
25	1	1		SS	COMPRESSION SPRING	1073469 (V537-093)
26	1			SS	COMPRESSION SPRING	1073470 (V537-173)
27	1	1	1	PLASTIC	CAP PLUG, 1-1/2 X 1"	1071483

NOTE:
REPLACEMENT COMPONENTS UNIQUE TO FAILSAFE DESIGN ARE AVAILABLE AS A REPAIR KIT ONLY. SEE SHEET 2 FOR KIT DETAILS.

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ-MATIC REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ-MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ-MATIC UPON WRITTEN REQUEST.

INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5M -1994

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES [mm]
CORNER FILLETS R.005-.020 [.127-.508]
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .100 [2.54]
2 PLACE .XX: ± .010 [0.25]
3 PLACE .XXX: ± .005 [0.13]

THE COMPONENT OR PRODUCT DESCRIBED IN THIS DOCUMENT MUST COMPLY WITH RoHS 3 EU (EUROPEAN UNION) DIRECTIVE 2015/863

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN TRK	1/28/21
CHECKED BY	
APPROVED	

AQ-MATIC
VALVES AND CONTROLS

DESCRIPTION
CATALOG SHEET, K537 FAIL SAFE

SIZE C | DWG NO. 1078168 | REV. F
SCALE 1:4


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Watermart Perkasa
www.water.co.id


REVISIONS				
ECN	REV.	DESCRIPTION	DATE	APP'D
		SEE PG. 1 FOR REVISION UPDATES		

CAP REPLACEMENT INSTRUCTIONS:


1. TURN SCREW (6) OF OLD CAP CLOCKWISE UNTIL SPRINGS ARE FULLY COMPRESSED.
2. UNSCREW CAP NUT (14) AND REMOVE OLD CAP ASSEMBLY.
3. PLACE O-RING (17) INTO BOTTOM GROOVE IN CAP ASSEMBLY.
4. PLACE NEW CAP ASSEMBLY ON VALVE AND TIGHTEN CAP NUT (14).
5. TURN SCREW (6) OF NEW CAP COUNTERCLOCKWISE UNTIL CONTACT IS MADE WITH UPPER DIAPHRAGM PLATE (7) WHILE IN CLOSED POSITION.

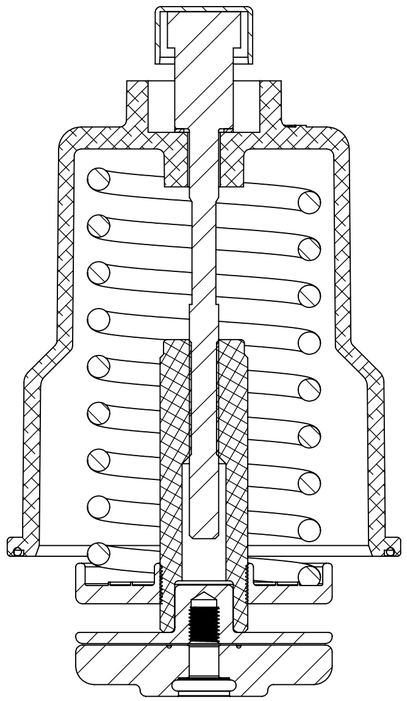

1071375 (K537-FS3)
REPAIR KIT - 30#

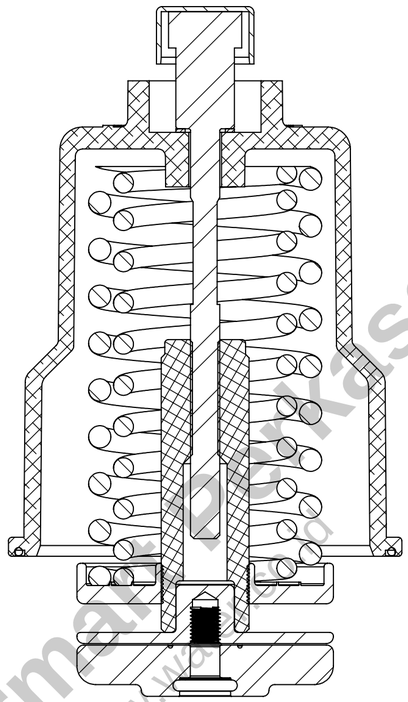

1071376 (K537-FS6)
REPAIR KIT - 60#

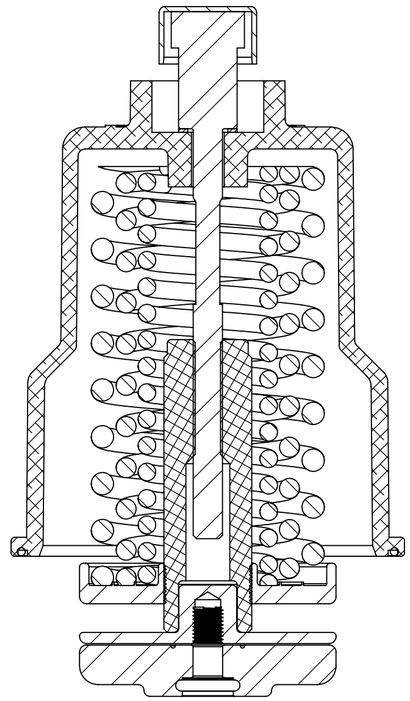

1071374 (K537-FS1)
REPAIR KIT - 100#

Watermart Perkasa
www.water.co.id

REPAIR KITS	
REPAIR KIT NO.	PART NUMBERS INCLUDED. SOLD AS ASSEMBLY ONLY.
1071375 (K537-FS3)	INCLUDES ITEM #'S: 2, 4, 5, 6, 7, 14, 15, 17(2), 20, 23, 27
1071376 (K537-FS6)	INCLUDES ITEM #'S: 2, 4, 5, 6, 7, 14, 15, 17(2), 20, 23, 25, 27
1071374 (K537-FS1)	INCLUDES ITEM #'S: 2, 4, 5, 6, 7, 14, 15, 17(2), 20, 23, 26, 27

VALVE SERIES	30# FAILSAFE #TURNS UP FROM BOTTOM	60# FAILSAFE #TURNS UP FROM BOTTOM	100# FAILSAFE #TURNS UP FROM BOTTOM
537	14	12	14

NOTES:

1. REPAIR KIT IS TO BE SHIPPED TO CUSTOMER IN A FULLY COMPRESSED STATE.

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ-MATIC REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ-MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ-MATIC UPON WRITTEN REQUEST.

INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5M -1994

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES [mm]
CORNER FILLETS R.005-.020 [.127-.508]
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .100 [2.54]
2 PLACE .XX: ± .010 [0.25]
3 PLACE .XXX: ± .005 [0.13]

THE COMPONENT OR PRODUCT DESCRIBED IN THIS DOCUMENT MUST COMPLY WITH RoHS 3 EU (EUROPEAN UNION) DIRECTIVE 2015/863

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN TRK	1/28/21
CHECKED BY	
APPROVED	

AQ-MATIC
VALVES AND CONTROLS

DESCRIPTION
CATALOG SHEET, K537 FAIL SAFE

SIZE C | DWG NO. 1078168 | REV. E
SCALE 1:4


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

ITEM NO	PART NO	DESCRIPTION	531 EC QTY	531 EO QTY	534 EC QTY	534 EO QTY	535 EC QTY	535 EO QTY	537 EC QTY	537 EO QTY	UNIT
1	-	NORMALLY OPEN K53X SERIES VALVE	1	1	1	1	1	1	1	1	EACH
2	1073272	SOLENOID MOUNTING BRACKET	1	1	1	1	1	1	1	1	EACH
3	1072377	SCREW, RD HD, 8-32 X 1/4	2	2	2	2	2	2	2	2	EACH
4	1071646	NUT, HEX, 8-32	2	2	2	2	2	2	2	2	EACH
5	1071939	NUT & SLEEVE ASSEMBLY, 1/4" TUBE	3	3	3	3	3	3	3	3	EACH
6	1072354	SCREW, HEX HD, 5/16 X 5/8, SS	1	1	-	-	-	-	-	-	EACH
7	1073282	INSERT,HEADED KNURLED, 5/16-18	1	1	-	-	-	-	-	-	EACH
8	1073598	WASHER, FLAT, 5/16"	1	1	1	1	1	1	1	1	EACH
9	1072355	SCREW, HEX HD, CAP, 5/16-18	-	-	1	1	1	1	1	1	EACH
10	1071655	HEX NUT, 5/16"-18, 18-8SS	-	-	1	1	1	1	1	1	EACH
11	1078767	CONNECTOR, 1/8 MNPT X 1/4T	1	1	1	1	-	-	-	-	EACH
12	1071937	FITTING, ELBOW, 1/8NPT X 1/4T	1	1	1	1	-	-	-	-	EACH
13	1071941	CONNECTOR, 1/4 MNPT X 1/4T	-	-	-	-	1	1	1	1	EACH
14	1078770	FITTING, ELBOW, 1/4NPT X 1/4T	-	-	-	-	1	1	1	1	EACH
15	1075637	SOLENOID, ASCO, 120/60 VAC	1	1	1	1	1	1	1	1	EACH
	1075638	SOLENOID, ASCO, 220/50 VAC									
	1075639	SOLENOID, ASCO, 24/60 VAC									
	4510604	SOLENOID, ASCO, 24 VDC, N.O.	-	1	-	1	-	1	-	1	
	4510605	SOLENOID, ASCO, 24 VDC, N.C.	1	-	1	-	1	-	1	-	
16	1071936	TUBING, POLY 1/4" O.D. X .035"	12	12	16	16	17	17	20	20	INCHES
			7	7	9	9	9	9	11	10	

REVISIONS				
REV	ECN	DESCRIPTION	DATE	APP'D
A		INITIAL RELEASE	06/21/2001	JWB
B		NUMBER CONVERSION	12/19/2002	APVD
C	1695	REDRAWN IN AQ TEMPLATE, CORRECTED BOM ERRORS	4/14/2020	PMJ
D	1789	ADDED SOLENOID P/N 4510604, 4510605	10/21/2020	PMJ

NOTES:
1. LENGTH OF TUBING VARIES WITH EACH SIZE OF DIAPHRAGM VALVE.
2. DIAPHRAGM VALVE IS NORMALLY OPEN, PRESSURE TO CLOSE.
3. BOSS NO. 1 ON VALVE TAPPED 1/8" N.P.T. (531, 534) OR 1/4" N.P.T. (535, 537)
4. DRY DRAIN OPTIONS DETAILED ON SHEET 2.
   INDEPENDANT CONTROL PRESSURE OPTIONS DETAILED ON SHEET 3.
5. EC STANDS FOR ENERGIZED TO CLOSE.
   EO STANDS FOR ENERGIZED TO OPEN.


ENERGIZED TO CLOSE
(531 SHOWN BELOW)

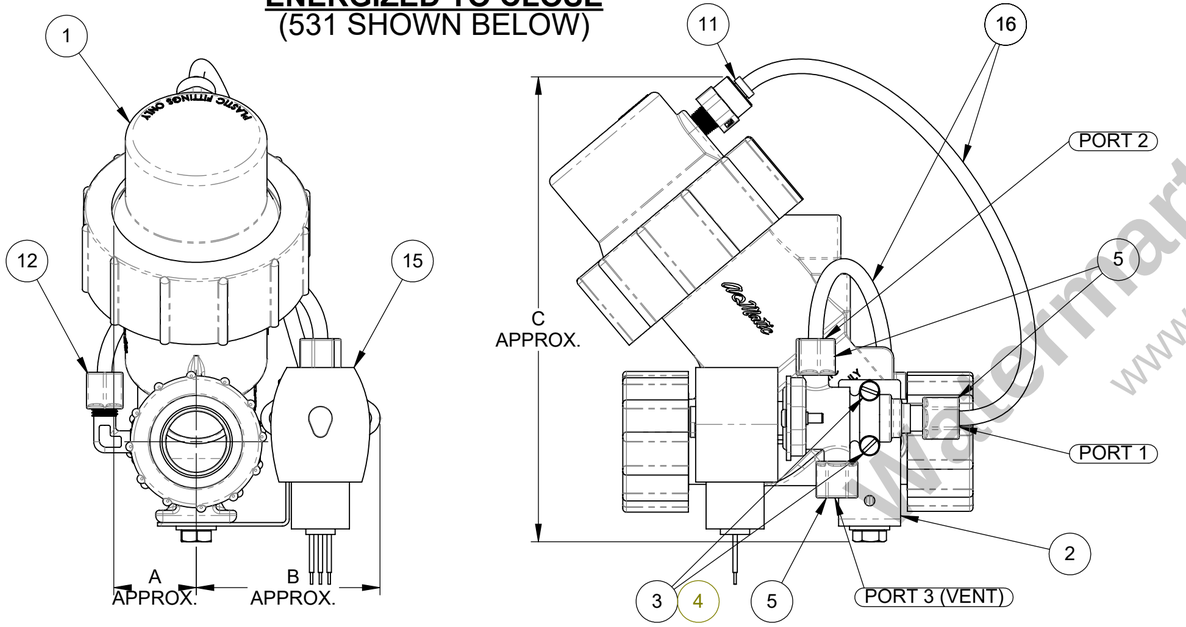

SOLENOID ENERGIZED:
UPSTREAM PRESSURE, FROM SOLENOID PORT 2 TO PORT 1, IS APPLIED TO UPPER DIAPHRAGM CHAMBER TO CLOSE THE VALVE.

SOLENOID DE-ENERGIZED:
PRESSURE FROM UPPER DIAPHRAGM CHAMBER IS VENTED, THROUGH SOLENOID PORT 1 TO PORT 3 TO DRAIN. UPSTREAM PRESSURE OPENS THE DIAPHRAGM VALVE.


ENERGIZED TO OPEN
(535 SHOWN BELOW)

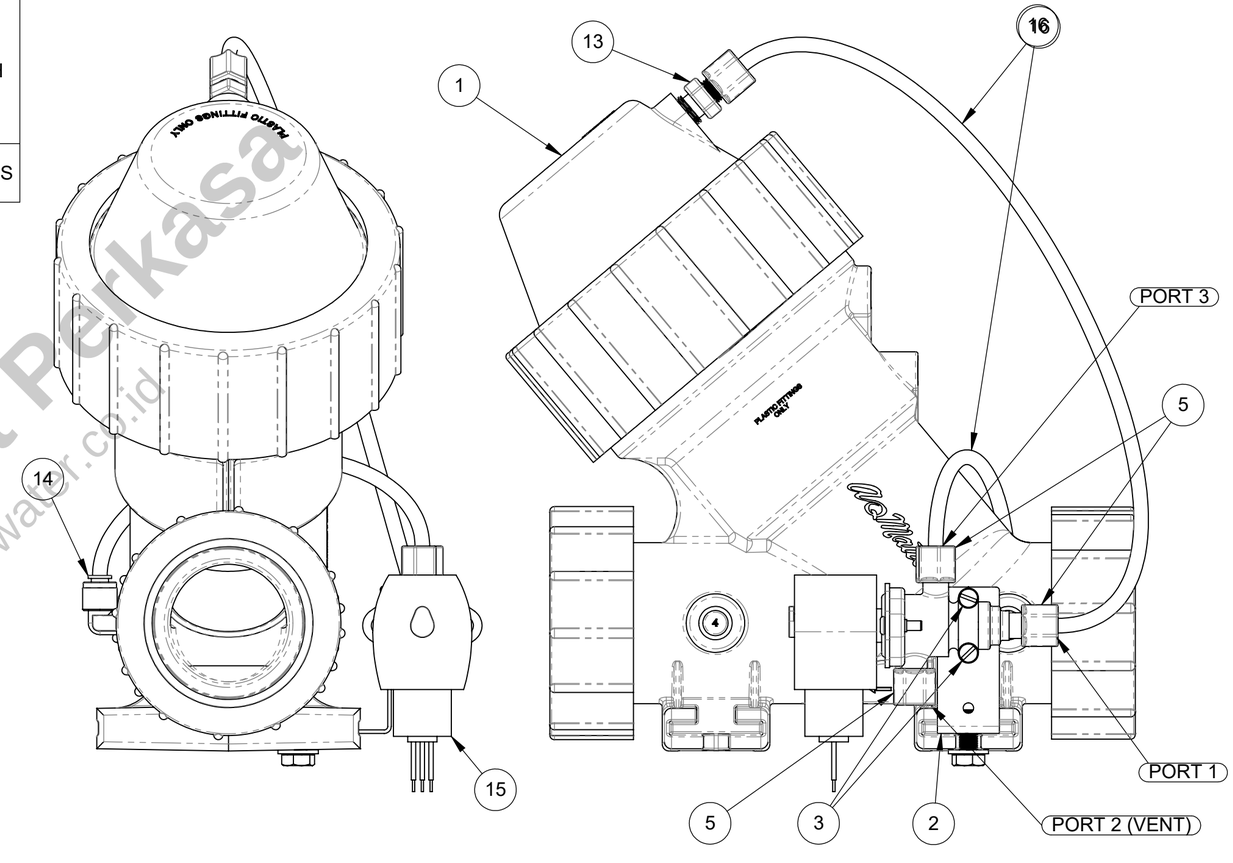


SOLENOID ENERGIZED:
PRESSURE FROM UPPER DIAPHRAGM CHAMBER IS VENTED, THROUGH SOLENOID PORT 1 TO PORT 2 TO DRAIN. UPSTREAM PRESSURE OPENS THE DIAPHRAGM VALVE.

SOLENOID DE-ENERGIZED:
UPSTREAM PRESSURE, FROM SOLENOID PORT 3 TO PORT 1, IS APPLIED TO UPPER DIAPHRAGM CHAMBER TO CLOSE THE VALVE.

DETAIL A
531 MOUNTING

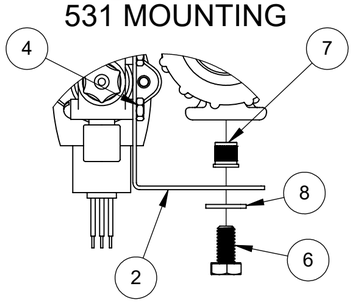

DETAIL B
534-537 MOUNTING

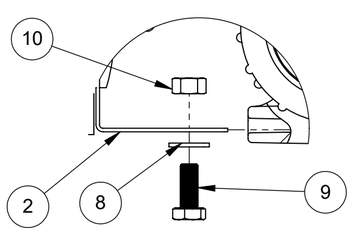

VALVE SERIES	PIPE SIZE	A [MM] IN.	B [MM] IN.	C [MM] IN.
531	1"	[36] 1.41	[80] 3.14	[202] 7.94
534	1-1/2"	[62] 2.45	[108] 4.24	[255] 10.05
535	2"	[76] 2.98	[110] 4.33	[310] 12.21
537	3"	[99] 3.91	[96] 3.8	[377] 14.83

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ-MATIC REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ-MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ-MATIC UPON WRITTEN REQUEST.

INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5M -1994

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES [mm]
CORNER FILLETS R.005-.020 [.127-.508]
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .100 [2.54]
2 PLACE .XX: ± .010 [0.25]
3 PLACE .XXX: ± .005 [0.13]

THE COMPONENT OR PRODUCT DESCRIBED IN THIS DOCUMENT MUST COMPLY WITH RoHS 3 EU (EUROPEAN UNION) DIRECTIVE 2015/863

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN PMJ	4/14/2020
CHECKED BY	
APPROVED	

AQ-MATIC
VALVES AND CONTROLS

DESCRIPTION: K531-K537 SOLENOID OPERATED VALVES

SIZE C | DWG NO. 1078170 | REV. D

SCALE 1:2


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


ITEM NO	PART NO	DESCRIPTION	531 ECDD	531 EODD	534 ECDD	534 EODD	535 ECDD	535 EODD	537 ECDD	537 EODD	UNIT
1	-	NORMALLY OPEN K53X SERIES VALVE	1	1	1	1	1	1	1	1	EACH
2	1073272	SOLENOID MOUNTING BRACKET	1	1	1	1	1	1	1	1	EACH
3	1072377	SCREW, RD HD, 8-32 X 1/4	2	2	2	2	2	2	2	2	EACH
4	1071646	NUT, HEX, 8-32	2	2	2	2	2	2	2	2	EACH
5	1071939	NUT & SLEEVE ASSEMBLY, 1/4" TUBE	3	3	3	3	3	3	3	3	EACH
6	1072354	SCREW, HEX HD, 5/16 X 5/8, SS	1	1	-	-	-	-	-	-	EACH
7	1073282	INSERT,HEADED KNURLED, 5/16-18	1	1	-	-	-	-	-	-	EACH
8	1073598	WASHER, FLAT, 5/16"	1	1	1	1	1	1	1	1	EACH
9	1072355	SCREW, HEX HD, CAP, 5/16-18	-	-	1	1	1	1	1	1	EACH
10	1071655	HEX NUT, 5/16"-18, 18-8SS	-	-	1	1	1	1	1	1	EACH
11	1078767	CONNECTOR, 1/8 MNPT X 1/4T	1	1	1	1	-	-	-	-	EACH
12	1071937	FITTING, ELBOW, 1/8NPT X 1/4T	2	2	2	2	-	-	-	-	EACH
13	1071941	CONNECTOR, 1/4 MNPT X 1/4T	-	-	-	-	1	1	1	1	EACH
14	1078770	FITTING, ELBOW, 1/4NPT X 1/4T	-	-	-	-	2	2	2	2	EACH
15	1075637	SOLENOID, ASCO, 120/60 VAC	1	1	1	1	1	1	1	1	EACH
	1075638	SOLENOID, ASCO, 220/50 VAC									
	1075639	SOLENOID, ASCO, 24/60 VAC									
	4510604	SOLENOID, ASCO, 24 VDC, N.O.	-	1	-	1	-	1	-	1	
	4510605	SOLENOID, ASCO, 24 VDC, N.C.	1	-	1	-	1	-	1	-	
16	1071936	TUBING, POLY 1/4" O.D. X .035"	12	12	16	16	17	17	20	20	INCHES
			7	7	9	9	9	9	10	10	
			8	7	6	6	7	7	9	9	

REVISIONS				
REV	ECN	DESCRIPTION	DATE	APP'D
		SEE SHEET 1 FOR CHANGE LOG		

NOTES:
1. LENGTH OF TUBING VARIES WITH EACH SIZE OF DIAPHRAGM VALVE.
2. DIAPHRAGM VALVE IS NORMALLY OPEN, PRESSURE TO CLOSE.
3. BOSSES ON VALVE TAPPED 1/8" N.P.T. (531, 534) OR 1/4" N.P.T. (535, 537)
4. STANDARD OPTIONS DETAILED ON SHEET 1.
   INDEPENDANT CONTROL PRESSURE OPTIONS DETAILED ON SHEET 3.
5. ECDD STANDS FOR ENERGIZED TO CLOSE, DRY DRAIN.
   EODD STANDS FOR ENERGIZED TO OPEN, DRY DRAIN.
6. 531 VALVES ARE TAPPED IN BOSSES 1 & 3.
   534 - 537 VALVES ARE TAPPED IN BOSSES 1 & 4.
7. DRY DRAIN OPTION REQUIES DOWNSTREAM SIDE OF VALVE TO BE AT ATMOSPHERIC PRESSURE WHEN VALVE IS CLOSED.

ENERGIZED TO CLOSE, DRY DRAIN
(531 SHOWN BELOW)

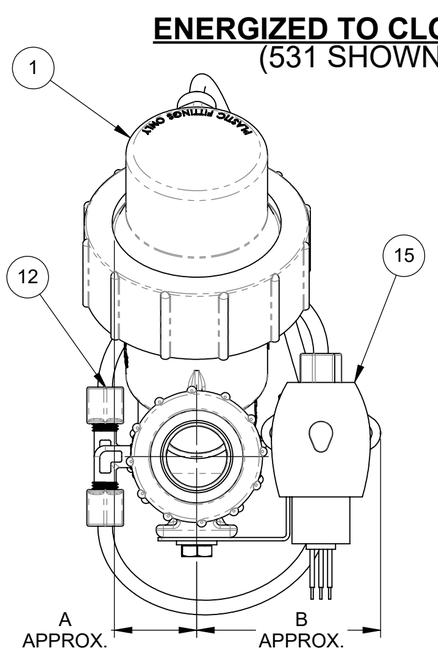


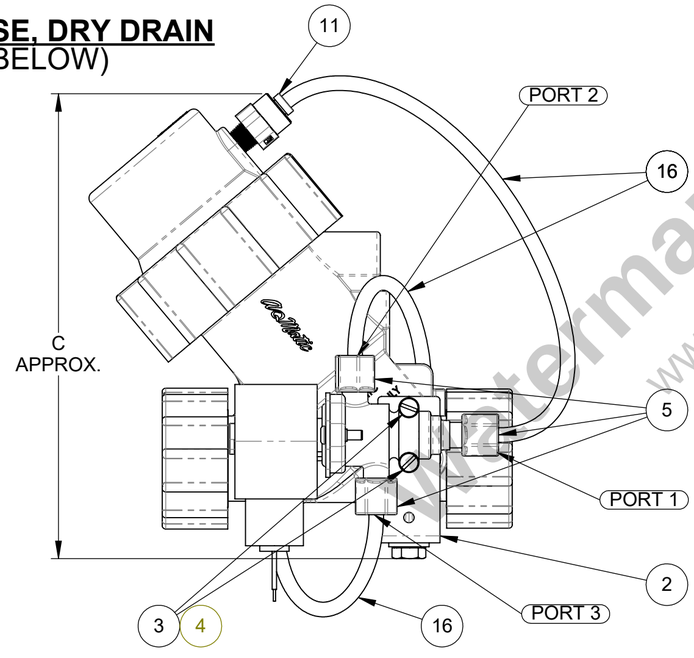


SOLENOID ENERGIZED:
UPSTREAM PRESSURE, FROM SOLENOID PORT 2 TO PORT 1, IS APPLIED TO UPPER DIAPHRAGM CHAMBER TO CLOSE THE VALVE.

SOLENOID DE-ENERGIZED:
PRESSURE FROM UPPER DIAPHRAGM CHAMBER IS VENTED, THROUGH SOLENOID PORT 1 TO PORT 3 TO DOWNSTREAM. UPSTREAM PRESSURE OPENS THE DIAPHRAGM VALVE.

ENERGIZED TO OPEN
(535 SHOWN BELOW)

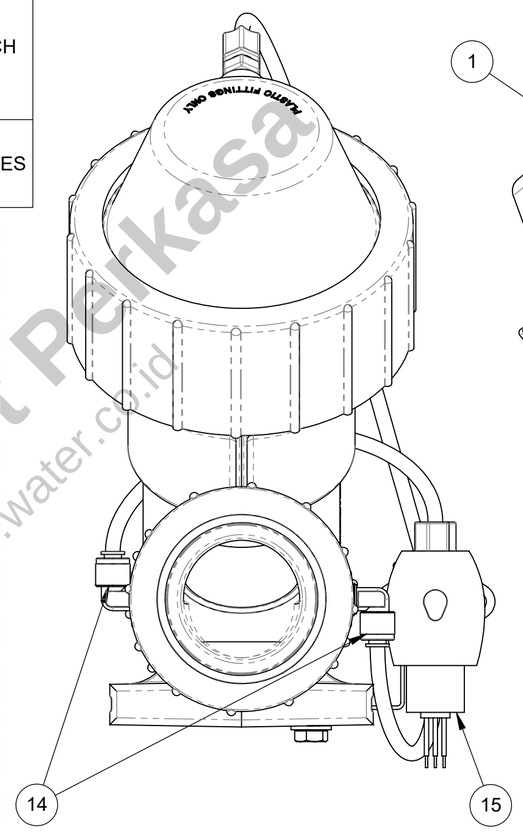


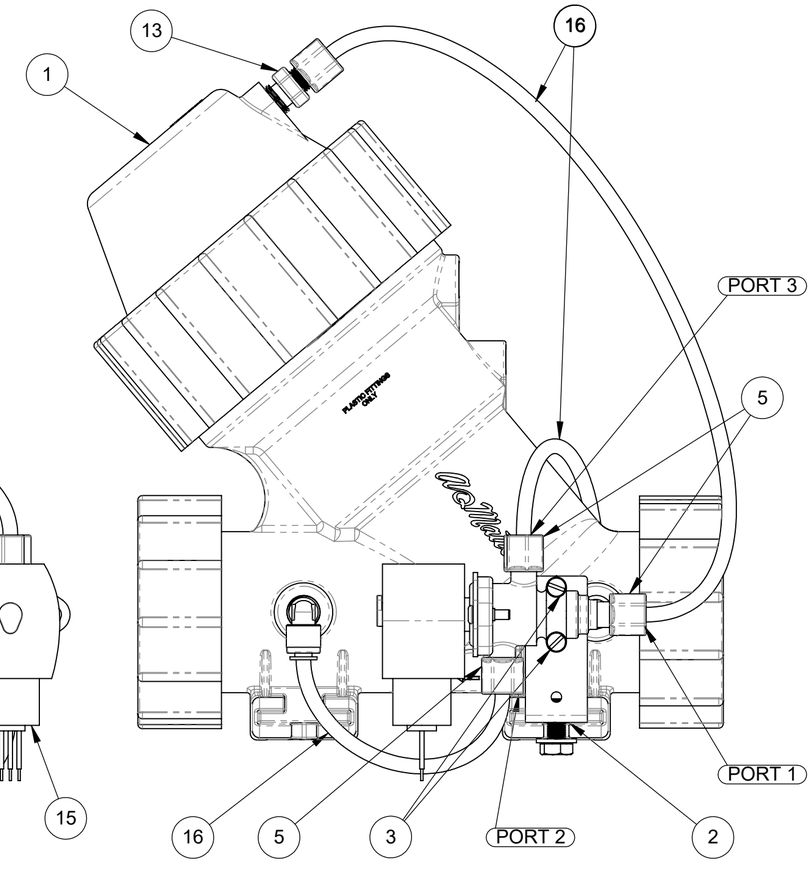


SOLENOID ENERGIZED:
PRESSURE FROM UPPER DIAPHRAGM CHAMBER IS VENTED, THROUGH SOLENOID PORT 1 TO PORT 2 TO DOWNSTREAM. UPSTREAM PRESSURE OPENS THE DIAPHRAGM VALVE.

SOLENOID DE-ENERGIZED:
UPSTREAM PRESSURE, FROM SOLENOID PORT 3 TO PORT 1, IS APPLIED TO UPPER DIAPHRAGM CHAMBER TO CLOSE THE VALVE.

DETAIL A
531 MOUNTING

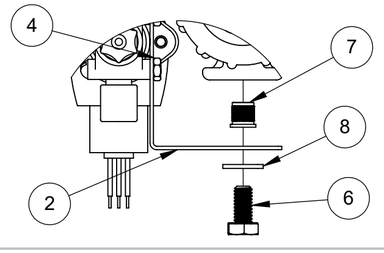

DETAIL B
534-537 MOUNTING

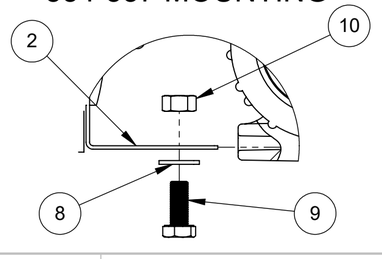

VALVE SERIES	PIPE SIZE	A [MM] IN.	B [MM] IN.	C [MM] IN.
531	1"	[36] 1.41	[80] 3.14	[202] 7.94
534	1-1/2"	[108] 4.24	[62] 2.45	[264] 10.38
535	2"	[110] 4.33	[76] 2.98	[310] 12.21
537	3"	[99] 3.91	[96] 3.78	[377] 14.83

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ-MATIC REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ-MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ-MATIC UPON WRITTEN REQUEST.

INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5M -1994

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES [mm]
CORNER FILLETS R.005-.020 [.127-.508]
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .100 [2.54]
2 PLACE .XX: ± .010 [0.25]
3 PLACE .XXX: ± .005 [0.13]

THE COMPONENT OR PRODUCT DESCRIBED IN THIS DOCUMENT MUST COMPLY WITH RoHS 3 EU (EUROPEAN UNION) DIRECTIVE 2015/863

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN PMJ	4/14/2020
CHECKED BY	
APPROVED	

AQ-MATIC
VALVES AND CONTROLS

DESCRIPTION: K531-K537 SOLENOID OPERATED VALVES

SIZE C | DWG NO. 1078170 | REV. D

SCALE 1:2

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


Watermart Perkasa
www.water.co.id

ITEM NO	PART NO	DESCRIPTION	531 IP QTY	534 IP QTY	535 IP QTY	537 IP QTY	UNIT
1	-	NORMALLY OPEN K53X SERIES VALVE	1	1	1	1	EACH
2	1073272	SOLENOID MOUNTING BRACKET	1	1	1	1	EACH
3	1072377	SCREW, RD HD, 8-32 X 1/4	2	2	2	2	EACH
4	1071646	NUT, HEX, 8-32	2	2	2	2	EACH
5	1071939	NUT & SLEEVE ASSEMBLY, 1/4" TUBE	3	3	3	3	EACH
6	1072354	SCREW, HEX HD, 5/16 X 5/8, SS	1	-	-	-	EACH
7	1073282	INSERT,HEADED KNURLED, 5/16-18	1	-	-	-	EACH
8	1073598	WASHER, FLAT, 5/16"	1	1	1	1	EACH
9	1072355	SCREW, HEX HD, CAP, 5/16-18	-	1	1	1	EACH
10	1071655	HEX NUT, 5/16"-18, 18-8SS	-	1	1	1	EACH
11	1078767	CONNECTOR, 1/8 MNPT X 1/4T	1	1	-	-	EACH
13	1071941	CONNECTOR, 1/4 MNPT X 1/4T	-	-	1	1	EACH
15	1075637	SOLENOID, ASCO, 120/60 VAC	1	1	1	1	EACH
	1075638	SOLENOID, ASCO, 220/50 VAC					
	1075639	SOLENOID, ASCO, 24/60 VAC					
16	1071936	TUBING, POLY 1/4" O.D. X .035"	12	16	17	20	INCHES

REVISIONS				
REV	ECN	DESCRIPTION	DATE	APP'D
		SEE SHEET 1 FOR CHANGE LOG		

NOTES:
1. LENGTH OF TUBING VARIES WITH EACH SIZE OF DIAPHRAGM VALVE.
2. DIAPHRAGM VALVE IS NORMALLY OPEN, PRESSURE TO CLOSE.
3. BOSS NO. 1 ON VALVE TAPPED 1/8" N.P.T. (531, 534) OR 1/4" N.P.T. (535, 537)
4. STANDARD OPTIONS DETAILED ON SHEET 1.
   DRY DRAIN OPTIONS DETAILED ON SHEET 2.
5. IP STANDS FOR INDEPENDENT PRESSURE.

INDEPENDENT CONTROL PRESSURE
(531 SHOWN BELOW)

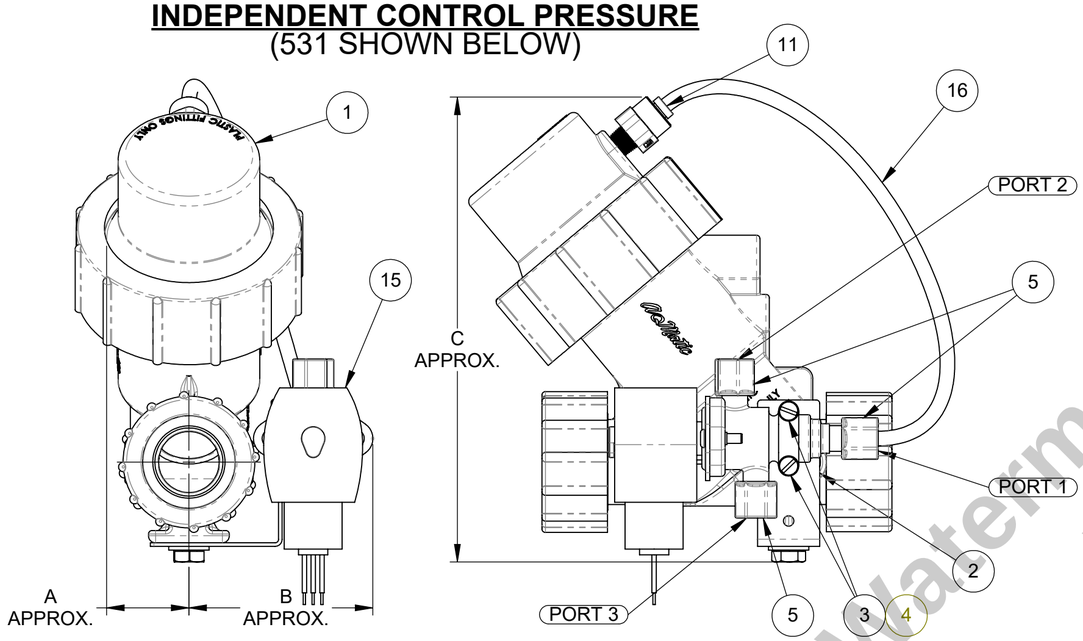


ENERGIZE TO OPEN
APPLY CONTROL PRESSURE
AT SOLENOID PORT NO. 3.
(PORT NO. 2 VENTED)

ENERGIZE TO CLOSE
APPLY CONTROL PRESSURE
AT SOLENOID PORT NO. 2.
(PORT NO. 3 VENTED)


CONTROL PRESSURE MUST BE EQUAL
TO OR GREATER THAN LINE PRESSURE

SOLENOID FLOW

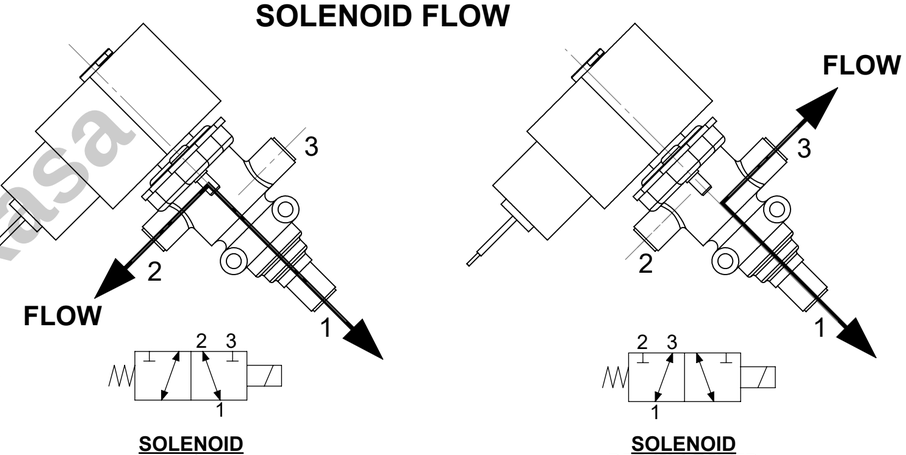


CURRENT DRAIN (AMPERES)		
VOLTAGE	INRUSH	HOLDING
24V 60Hz	1.66	1.04
120V 60Hz	0.33	0.21
220V 50Hz	0.18	0.11


DETAIL A
531 MOUNTING
SCALE 1 : 1.5

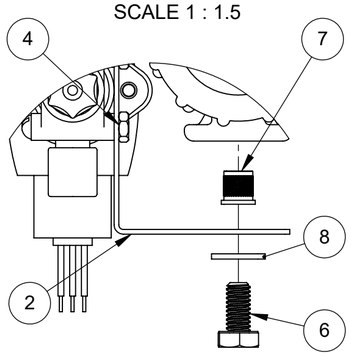


DETAIL B
534 - 537 MOUNTING
SCALE 1 : 1.5

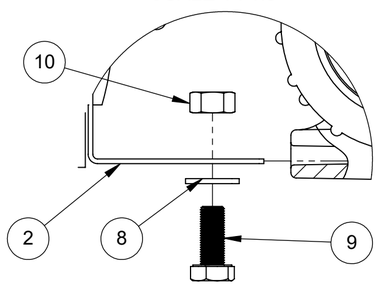

DETAIL C
534 - 537 MOUNTING
SCALE 1 : 1

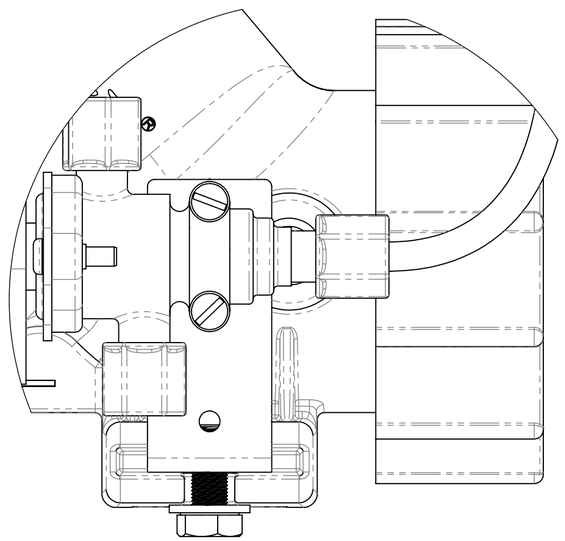

DETAIL D
535 - 537 CAP FITTING
SCALE 1 : 1

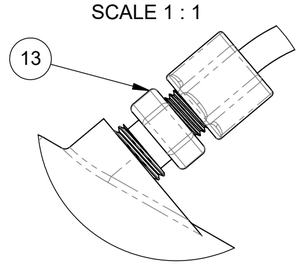

VALVE SERIES	PIPE SIZE	A [MM] IN.	B [MM] IN.	C [MM] IN.
531	1"	[80] 3.14	[49] 1.94	[202] 7.94
534	1-1/2"	[108] 4.24	[62] 2.45	[264] 10.38
535	2"	[110] 4.33	[76] 2.98	[310] 12.21
537	3"	[99] 3.91	[96] 3.78	[377] 14.83

Watermart Perkasa
www.water.co.id

THE COMPONENT OR PRODUCT DESCRIBED IN THIS DOCUMENT MUST COMPLY WITH RoHS 3 EU (EUROPEAN UNION) DIRECTIVE 2015/863

THIS DOCUMENT IS SOLELY THE PROPERTY OF AQ-MATIC REPRODUCTION, USE DISCLOSURE, OR TRANSMISSION OF THIS DOCUMENT OR DETAILS CONTAINED HEREIN, IN PART OR IN WHOLE, IS PROHIBITED WITHOUT THE WRITTEN CONSENT OF AQ-MATIC ENGINEERING. THIS DOCUMENT AND ANY COPIES SHALL BE RETURNED TO AQ-MATIC UPON WRITTEN REQUEST.

INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5M -1994

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES [mm]
CORNER FILLETS R.005-.020 [.127-.508]
TOLERANCES:
ANGLES : ± 1°
1 PLACE .X: ± .100 [2.54]
2 PLACE .XX: ± .010 [0.25]
3 PLACE .XXX: ± .005 [0.13]

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRAWN PMJ	4/14/2020
CHECKED BY	
APPROVED	

AQ-MATIC
VALVES AND CONTROLS

DESCRIPTION
K531-K537 SOLENOID OPERATED VALVES

SIZE C | DWG NO. 1078170 | REV. D

SCALE 1:2

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

AQUAMATIC® STAGER
PILOT VALVES

IDEAL FOR CONTROL OF DIAPHRAGM VALVES

MADE IN THE USA
OF FOREIGN & DOMESTIC PARTS



FEATURES/BENEFITS

Stagers are motor-driven rotary multiport pilot valves, which are used to control a set of diaphragm valves in a predefined sequence

Constructed of durable, noncorroding, self-lubricating material for long and trouble-free operation

Control pressure to the stager, either hydraulic or pneumatic, must be constant and equal to or greater than the line pressure in the system

Electrical stagers are available for use in 120 VAC, 220 VAC, 12 VAC and 24 VAC configurations

All stagers can be manually operated if power is not available

OPTIONS

Supplied with a maximum of two extra auxiliary cams and switches [SPDT] for electrical outputs in any position

Supplied in a NEMA-rated enclosure or without enclosure

TYPICAL APPLICATIONS

Condensate Polishers

Deionizers


Water Treatment Systems

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


OPERATING SPECIFICATIONS

Max Pressure	125 psi (8.6 bar)	
Max Temperature	150°F (65°C)	
Body Material	Model 48 & 51: Model 58:	Brass PVC
Internal Gasket	Neoprene	
Stem Plate	PTFE	
Control Ports	Model 48: Model 51: Model 58:	6 8 16
Inlet Port Size NPT	Model 48 & 51: Model 58:	1/8" 1/4"
Drain Port Size NPT	Model 48 & 51: Model 58:	1/8" 1/4"
Control Port Size NPT	Model 48, 51, 58:	1/8"
Power Usage in Watts	Model 48 & 51: Model 58:	4.0 max 3.5 max

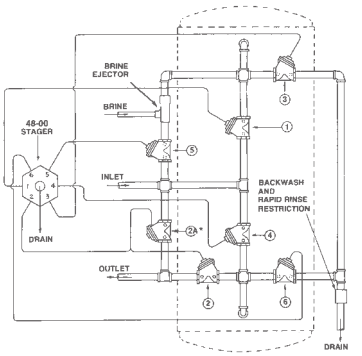

Stager (Model 48-00)

*Valve 2A required for raw water bypass only.

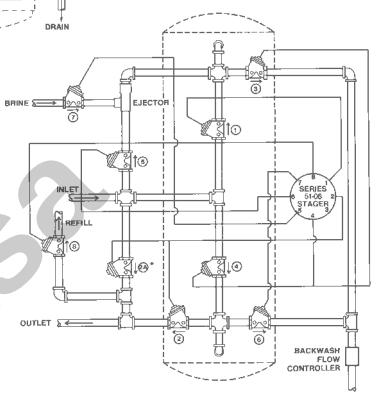

Stager (Model 51-06)

STANDARD STAGER PROGRAMS

STAGER DESIGNATION	NUMBER OF POSITION	APPLICATION	SUGGESTED PIPING DWG
48-00	4	4 Position Softener	1078271
48-01	3	3 Position Filter	1078272
48-83	4	3 Tank Sequential Filter, Backwash Only	1078276
48-84	5	4 Tank Sequential Filter, Backwash Only	1078277
48-85	6	5 Tank Sequential Filter, Backwash Only	1078278
51-06	6	6 Position Softener, Timed Brine and Refill	1078279
51-07	5	5 Position Softener, Timed Brine	1078280
51-09	5	5 Position Softener, Timed Brine Refill	1078281
51-10	5	2 Tank Sequential Filter, Backwash and Rinse	1078282
51-86	7	6 Tank Sequential Filter, Backwash Only	1078286
51-87	8	7 Tank Sequential Filter, Backwash Only	1078287
58-00	9	2 Bed Deionization	1078290
58-02	9	2 Bed Deionization with De-Gasifier	1078291
58-03	7	3 Tank Sequential Filter, Backwash and Rinse	1078288
58-04	8	4 Tank Sequential Filter, Backwash and Rinse	1078289
58-10	10	Mixed Bed Deionization	1078292
58-TA	8	2 Tank Alternating Softeners	1078293
58-TB	10	2 Tank Alternating Softeners, with Timed Brine	1078294

16605 West Victor Rd. New Berlin, WI 53151
P: 262-326-0100 | www.aq-matic.com | techsupport@aq-matic.com

© 2016 AQ Matic Valve and Controls Company, Inc. All rights reserved.

All AQ Matic trademarks and logos are owned by AQ Matic or its affiliates. All other registered and unregistered trademarks and logos are the property of their respective owners. Because we are continuously improving our products and services, AQ Matic reserves the right to change specifications without prior notice. AQ Matic is an equal opportunity employer.

1164142 REV D MA2016

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

STAGER MASTER CHART

FILL IN PROPER DESIGNATIONS TO DETERMINE PRODUCT NUMBER: R - -

USAGE
- 0 Stager **not used in controller** (Wire harness included)
- C Stager **is used in controller** (Wire harness not included) [Not for individual Sale]

STAGER Rotary Pilot Stager Series to be Provided
- 48 6 Port (Brass)
- 51 8 Port (Brass)
- 58 16 Port (PVC)

PROGRAM Stager Program to be Provided
- *00 - 99 STANDARD
- **SS SPECIAL Program per Drawing Indicated
- TA Twin Alternating Softener (Model 48, and 58 Only)
- ^TB Twin Alternating Softener (w/ Timed Brine Pos. & switch output)
- ^TR Twin Alternating Softener (w/ Timed Refill Pos. & switch output)

* Two character designation from standard stager drawing.
** Special Drawing number placed in last 5 digits of product number.
(Special Drawing number also used for Aux. Sw. notched in more than 1 position)
^ For model 58 stagers ONLY

ENCLOSURE N.E.M.A. Rating of Panel & Enclosure to be Provided
- 7 NEMA 4 Mounting Plate w/Gasket on Stagers
- F NEMA 4X Fiberglass Panel & Enclosure

ELECTRICAL Power Required to Operate Device
- 1 115 Volts / **60 Hertz** for 48 & 51 Stagers
  115 Volts **50 or 60 Hertz** for 58B Stagers
- 2 220 Volts / **50 or 60 Hertz** for ALL STAGERS
- 5 24 Volts / 50 or 60 Hertz (**for 48 & 51 Stagers Only)**
- 9 12 Volts / 50 or 60 Hertz for ALL STAGERS
- N 24 Volts / 50 or 60 Hertz **(for 48 & 51 Stagers Only) NXT Cam & Wire Harness**

1st AUX. SWITCH First Extra Switch to be provided on Rotary Pilot Stager (Unless Special Drawing Number is Assigned)
- 0 NONE (Not valid for use with AQ Matic controllers)
- *^A to R CAM POSITION Switch is to be active (I & O not used)
- S SERVICE Return (**Homing**) (For AQ Matic Controllers, MUST be "S") W Status Lights Cam (48, & 58 Stagers w/TA Program only)
- Z BLANK CAM (no notches)

* Use a Letter to indicate Cam position Not a Number.
^ Use SPECIAL DRAWING number if active in more than 1 position.

2nd AUX. SWITCH Second Extra Switch to be provided on Rotary Pilot Stager (Unless Special Drawing Number is Assigned)
- 0 NONE
- *^A to R CAM POSITION Switch is to be active (I & O not used)
- S SERVICE Return (Homing) **(Not for 48-TA)**
- T TIMED SWITCH OUTPUT (58-TB, signal in Pos. 2 & 7)
  TIMED SWITCH OUTPUT (58-TR, signal in Pos. 4 & 9)
- Z BLANK CAM (no notches)

* Use a Letter to indicate Cam position Not a Number.
^ Use SPECIAL DRAWING number if active in more than 1 position.

PRESSURE Program of Stager (Unless Special Drawing Number is Assigned)
- 0 STANDARD (Vent to open)
- 1 INVERTED (Pressure to open)

- 0 (unless Special Drawing number is assigned)

REVISION Stager Revision Level (Unless Special Drawing Number is Assigned)
- **B** 48 and 51 Series Rotary Pilot Stagers
- **C** 58 Series Rotary Pilot Stagers

Rev.	DESCRIPTION	BY	DATE	ECN NO.
G	Added NXT Motor & Cam Option	TLE	25-Nov-14	103975

16605 West Victor Rd. New Berlin, WI 53151
P: 262-326-0100 | www.aq-matic.com | techsupport@aq-matic.com
© 2016 AQ Matic Valve and Controls Company, Inc. All rights reserved.
All AQ Matic trademarks and logos are owned by AQ Matic or its affiliates. All other registered and unregistered trademarks a are continuously improving our products and services, AQ Matic reserves the right to change specifications without prior notic 42986 MA 2016

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Watermart Perkasa www.water.co.id

Watermart Perkasa
www.water.co.id

16605 West Victor Rd. New Berlin, WI 53151
P: 262-326-0100 | www.aq-matic.com | techsupport@aq-matic.com
© 2016 AQ Matic Valve and Controls Company, Inc. All rights reserved.
All AQ Matic trademarks and logos are owned by AQ Matic or its affiliates. All other registered and unregistered trademarks and logos are the property of their respective owners. Because we are continuously improving our products and services, AQ Matic reserves the right to change specifi
REV G NOV 14

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

STAGER MODEL NUMBER SELECTION

PROGRAM (SEE STAGER PROGRAM CHARTS)

*00 - 99 = STANDARD
**SS = SPECIAL Program per Drawing Indicated
TA = Twin Alternating Softener (Model 48, 58 and 59 Only)
^TB = Twin Alternating Softener (w/ Timed Brine Pos. & switch output, **962 only**)

* Two character designation for standard stager program.
** Special Drawing number placed in last 5 digits of model number.
(Special Drawing number also used for Aux. Sw. notched in more than 1 position)
^ For models 58 and 59 stagers used in 962 Stager Controller ONLY

ELECTRICAL Power Required to Operate Device

1 = 115 Volts / **60 Hertz** for 48 & 51 Stagers
115 Volts **50 or 60 Hertz** for 58, 59 & 96 Stagers
2 = 220 Volts / **50 or 60 Hertz** for ALL STAGERS
5 = 24 Volts / 50 or 60 Hertz for ALL STAGERS
* 9 = 12 Volts / 50 or 60 Hertz for ALL STAGERS

* ***(Option 9 is ONLY valid if used with a 962 stager controller)***

2nd AUX. SWITCH (SEE STAGER PROGRAM CHARTS) Second Extra Switch to be provided on Stager (Unless Special Drawing Number is Assigned)

0 = NONE
*^A to R=CAM POSITION Switch is to be active (I & O not used)
S = SERVICE Return (Homing)
T = TIMED BRINE OUTPUT (58-TB & 59-TB Only, signal in Pos. 2 & 7)
Z = BLANK CAM (no notches)

* Use a Letter to indicate Cam position Not a Number.
^ Use SPECIAL DRAWING number if active in more than 1 position.

R 0 ? ? -- ? ? ? ? -- ? ? ? ? ?

STAGER Rotary Pilot Stager Series to be Provided

48 = 6 Port (Brass)
51 = 8 Port (Brass)
58 = 16 Port (PVC)
59 = 16 Port (Brass)
96 = 8 Port High Pressure (Brass) (250 PSI)

ENCLOSURE N.E.M.A. Rating of Enclosure to be Provided

1 = NEMA 1 Std. Enclosure
4 = NEMA 4 Std. Enclosure
7 = NONE (NEMA 4 Mounting Plate w/Gasket Provided)
F = NEMA 4X Fiberglass Panel & Enclosure

1st AUX. SWITCH (SEE STAGER PROGRAM CHARTS) First Extra Switch to be provided on Stager (Unless Special Drawing Number is Assigned)

0 = NONE (Not valid for use with 962 controller)
*^A to R = CAM POSITION Switch is to be active (I & O not used)
S = SERVICE Return (**Homing**) (For 962 Controller, MUST be "S")
W = Status Lights Cam (48, 58 & 59 Stagers w/TA Program only)
Z = BLANK CAM (no notches)

* Use a Letter to indicate Cam position Not a Number.
^ Use SPECIAL DRAWING number if active in more than 1 position.

REVISION Stager Revision Level (Unless Special Drawing Number is Assigned)

B = 48 and 51 Stagers
C = 58, 59, and 96 Series Stagers

0 (Unless Special Drawing Number is Assigned)

PRESSURE Program of Stager (Unless Special Drawing Number is Assigned)

0 = STANDARD (Vent to open)
1 = INVERTED (Pressure to open)

SERIES 48 STANDARD STAGER PROGRAMS

STAGER PROGRAM	# POS.		PORTS VENTED IN POSITION 0 A	1 B	2 C	3 D	4 E	5 F	REF. DWG NO.	FUNCTION
00	4	POSITION	SVC	----	BW	----	BSR	FR	4800PRGM	4 POS. SOFTENER
		PORTS VENTED	1, 2	----	3, 4	----	5, 6	1, 6		
01	3	POSITION	SVC	----	BW	----	----	FR	4801PRGM	3 POS. FILTER
		PORTS VENTED	1, 2	----	3, 4	----	----	1, 6		
03	4	POSITION	SVC	----	BW	----	BSR	FR	4803PRGM	4 POS. SOFTENER (BUTTERFLY CAM)
		PORTS VENTED	1, 2	----	3, 4	----	5, 6	1, 6		
04	2	POSITION	SVC	----	BW	----	----	----	4804PRGM	2 POS. FILTER
		PORTS VENTED	1, 2	----	3, 4	----	----	----		
12	4	POSITION	SVC	----	BW -or- ASC	BSR -or- BW	----	FR	4812PRGM	4 POS. FILTER W/ AIR SCOUR -OR- 4 POS. UPFLOW SOFTENER
		PORTS VENTED	1, 2	----	3, 4	4, 5	----	1, 6		
83	4	POSITION	BW2	BW3	----	----	SVC	BW1	4883PRGM	3 TANK SEQUENTIAL FILTER
		PORTS VENTED	2	3	----	----	6	1		
84	5	POSITION	BW2	BW3	BW4	----	SVC	BW1	4884PRGM	4 TANK SEQUENTIAL FILTER
		PORTS VENTED	2	3	4	----	6	1		
85	6	POSITION	BW2	BW3	BW4	BW5	SVC	BW1	4885PRGM	5 TANK SEQUENTIAL FILTER
		PORTS VENTED	2	3	4	5	6	1		
TA	2	POSITION	SVCA	----	SVCB	----	----	----	48TAPRGM	2 TANK ALTERNATOR
		PORTS VENTED	1	----	2	----	----	----		
TB	2	POSITION	SVCA	SVCB	SVCA	SVCB	SVCA	SVCB	48TAPRGM	2 TANK ALTERNATOR
		PORTS VENTED	1	2	1	2	1	2		

ASC = AIR SCOUR
BSR = BRINE / SLOW RINSE
BW = BACKWASH
FR = FAST RINSE
SVC = SERVICE
SVCA = SERVICE UNIT A
SVCB = SERVICE UNIT B

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Watermart Perkasa
www.water.co.id

STAGER MODEL NUMBER SELEC

SERIES 58 STANDARD STAGER PROGRAMS

STAGER PROGRAM	# POS.		PORTS VENTED IN POSITION 0 A	1 B	2 C	3 D	4 E	5 F	6 G	7 H	8 J	9 K	10 L	11 M	12 N	13 P	14 Q	15 R	REF. DWG NO.	FUNCTION
00	9	POSITION	SVC	----	----	CBW	----	----	INJ	CSR	CFR	ABW	----	----	ADR	ASR	AFR	----	5800PRGM	2 BED DI UNIT
		PORTS VENTED	1,15,16	----	----	2,3	----	----	5,6,7	6,7	1,7	1,10	----	----	1,11,12,13	1,12,13	1,13,15	----		
01	5	POSITION	SVC	----	----	----	----	----	----	----	----	----	DRD	ASC	----	BW	----	FR	5801PRGM	5 POSTION FILTER, DOUBLE ACTING VALVES
		PORTS VENTED	3,4,5,6,7,8, 9,10	----	----	----	----	----	----	----	----	----	7,8,9,10,11, 12,13,14	5,8,9,10,11, 12,14,15	----	1,5,6,7,10, 11,12,16	----	2,3,5,6,7,8, 9,12		
02	9	POSITION	SVC	----	----	CBW	----	----	CDR	CSR	CFR	ABW	----	----	ADR	ASR	AFR	----	5802PRGM	2 BED DI UNIT, OUTLET VALVE ON CATION UNIT
		PORTS VENTED	1,2,3,16	----	----	4	----	----	6,7,8	7,8	1,8	1,3,11	----	----	1,3,12,13,14	1,3,13,14	1,3,14,16	----		
03	7	POSITION	SVC	----	BW1	FR1	----	----	BW2	FR2	----	----	BW3	FR3	----	----	----	----	5803PRGM	3 TANK SEQUENTIAL FILTER, BW & FAST RINSE
		PORTS VENTED	2,4,6,7, 9,11	----	1,6,7,9,11	2,6,7,9, 11,12	----	----	2,4,5,9,11	2,4,6,9, 11,16	----	----	2,3,4,6,7	2,4,6,7,9,10	----	----	----	----		
04	9	POSITION	SVC	----	BW1	FR1	----	----	BW2	FR2	----	----	BW3	FR3	----	----	BW4	FR4	5804PRGM	4 TANK SEQUENTIAL FILTER, BW & FAST RINSE
		PORTS VENTED	2,4,6,7,9,11, 14,15	----	1,6,7,9,11, 14,15	2,6,7,9, 11,12,14,15	----	----	2,4,5,9,11, 14,15	2,4,6,9, 11,14,15,16	----	----	2,3,4,6,7, 14,15	2,4,6,7,9,10, 14,15	----	----	2,4,6,7,9, 11,13	2,4,6,7,8,9, 11,14		
07	10	POSITION	SVC	----	BW	----	INJ	DISP	FR	DRN	----	AM	AMD	----	REF	----	----	FNR	5807PRGM	MIXED BED DI, SIMULTANEOUS REGENERATION
		PORTS VENTED	11,12	----	1,13	----	1,3,15,16	1,3,16	1,3,11	3,7	----	5,7	3,5,7	----	7,11	----	----	10,11		
10	11	POSITION	SVC	----	BW	SET	----	CDR	CSR	----	ADR	ASR	AFR	----	DRD	AM	----	FNR	5810PRGM	MIXED BED DI UNIT
		PORTS VENTED	15,16	----	1	(NONE)	----	4,5,9	5,9	----	7,8,9	8,9	9,10	----	9,12	12,13	----	14,15		
TA	8	POSITION	SVCA	----	----	BWA	BSRA	----	----	FRA	SBA	----	----	----	----	BWB	BSRB	FRB	58TAPRGM	TWO UNIT ALTERNATING SOFTENER
		PORTS VENTED	1,2,8,16	----	----	6,8,11	5,7,8,11	----	----	7,8,11,16	8,11,16	----	----	----	----	2,13,16	1,2,15,16	2,8,15,16		
TB *	10	POSITION	SVCA	----	----	BWA	----	BRD	SR	FRA	SBA	----	----	BWB	----	BRD	SR	FRA	58TBPRGM	TWO TANK ALTERNATOR W/ TIMED BRINE
		PORTS VENTED	6,14,16	----	----	1,2,6,8	----	4,5,6,8	4,5,6,8	5,6,8,14	6,8,14	----	----	9,10,14,16	----	12,13,14,16	12,13,14,16	**6,13,14,16**		

* TB PROGRAM FOR USE WITH SERIES 962 CONTROLLER ONLY.

SERIES 51 STANDARD STAGER PROGRAMS

STAGER PROGRAM	# POS.		PORTS VENTED IN POSITION 0 A	1 B	2 C	3 D	4 E	5 F	6 G	7 H	REF. DWG NO.	FUNCTION
06	6	POSITION	SVC	----	BW	----	BRD	SR	FR	REF	5106PRGM -or- 9606PRGM	6 POSITION SOFTENER (TIMED DRAW & REFILL)
		PORTS VENTED	1, 2	----	4	----	5, 6, 7	6, 7	1, 7	1, 2, 8		
07	5	POSITION	SVC	----	BW	----	BRD	SR	FR	----	5107PRGM -or- 9607PRGM	5 POSITION SOFTENER (TIMED DRAW)
		PORTS VENTED	1, 2	----	4	----	5, 6, 7	6, 7	1, 7	----		
09	5	POSITION	SVC	----	----	BW	BSR	----	FR	REF	5109PRGM -or- 9609PRGM	5 POSITION SOFTENER (TIMED REFILL)
		PORTS VENTED	1, 3	----	----	4	5, 7	----	1, 7	1, 8		
10	5	POSITION	SVC	----	BW	FRA	----	----	BW2	FRB	5110PRGM -or- 9610PRGM	2 TANK SEQUENTIAL FILTER (BW & FR)
		PORTS VENTED	1, 2, 5, 6	----	5, 6, 7	1, 5, 6, 8	----	----	1, 2, 3	1, 2, 4, 5		
11	7	POSITION	SVC	----	DRD	----	ASC	BW	----	FR	5111PRGM -or- 9611PRGM	FILTER WITH AIR SCOUR
		PORTS VENTED	2,3	----	1,4	----	4,6,7	4,7,8	----	1,2		
12	6	POSITION	SVC	BW	----	BRD	DISP	RECL	FR	----	5112PRGM -or- 9612PRGM	BRINE RECYCLE SOFTENER
		PORTS VENTED	1,8	2	----	4,5	4,5	5,6	4,8	----		
86	7	POSITION	SVC	BW1	BW2	BW3	BW4	BW5	BW6	----	5186PRGM -or- 9686PRGM	6 TANK SEQUENTIAL FILTER
		PORTS VENTED	8	1	2	3	4	5	6	----		
87	8	POSITION	BW1	BW2	BW3	BW4	BW5	BW6	BW7	SVC	5187PRGM -or- 9687PRGM	7 TANK SEQUENTIAL FILTER
		PORTS VENTED	1	2	3	4	5	6	7	8		

ABW = ANION BACKWASH
ADR = ANION DRAW
AM = AIR MIX
AMD = AIR MIX & DRAIN DOWN
ASC = AIR SCOUR
ASR = ANION SLOW RINSE
AFR = ANION FAST RINSE
BW = BACKWASH
BWA = BACKWASH UNIT A
BWB = BACKWASH UNIT B
BRD = BRINE DRAW
BSR = BRINE / SLOW RINSE
BSRA = BRINE / SLOW RINSE UNIT A
BSRB = BRINE / SLOW RINSE UNIT B
CBW = CATION BACKWASH
CDR = CATION DRAW
CFR = CATION FAST RINSE
CSR = CATION SLOW RINSE
DRD = DRAIN DOWN
DISP = DISPLACE

FR = FAST RINSE
FRA = FAST RINSE UNIT A
FRB = FAST RINSE UNIT B
FNR = FINAL RINSE
INJ = INJECT
RECL = RECLAIM
REF = REFILL
SBA = STANDBY UNIT A
SBB = STANDBY UNIT B
SET = SETTLE
SR = SLOW RINSE
SVC = SERVICE
SVCA = SERVICE UNIT A
SVCB = SERVICE UNIT B

SHEET 2 OF 2
FORM NO. 1078030, REV. A

AQ Matic
Valve & Controls Company Inc

SERIES 48, 51, & 58 STAGERS
MODEL SELECTION & PROGRAMS


SCALE	DRAWN	DATE	DWG. NO.
N/A	JWB	10MAY01	1078031

SERIES 51 & 58 STAGER PROGRAMS

Watermart Perkasa
www.water.co.id


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


PILOT CONTROL ASSEMBLY

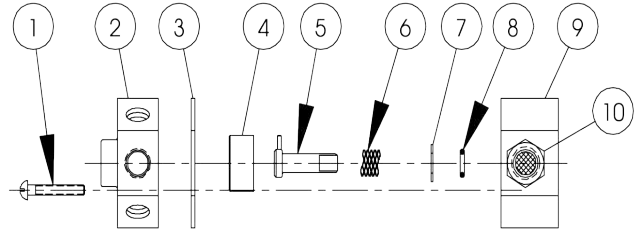

OPTIONAL AUX. SWITCHES

MAXIMUM OF TWO (2)

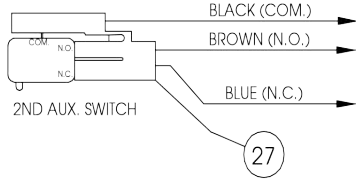


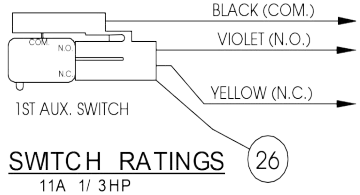

SWITCH RATINGS

11A 1/ 3HP
125, 250, 277 VAC
1/ 2A 125 VDC
1/ 4A 250 VDC
4A 125 VAC L


STANDARD WIRING

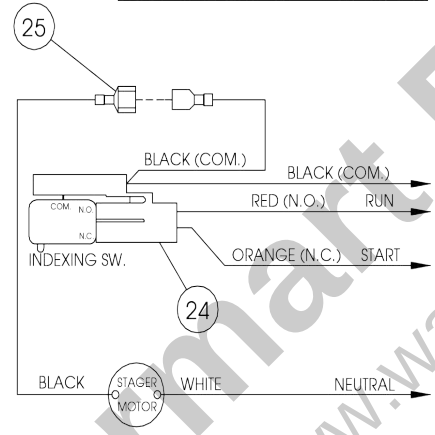

INTERNAL PARTS KITS

STAGER PROGRAM	INTERNAL PARTS KITS STD. PROGRAMS	INTERNAL PARTS KITS INVERTED PROGRAMS
48-00	1074817 (48-IAB)	1077585 (E) (48-IABI)
48-01		
48-03		
48-04		
48-11		
48-12		
48-TA		
48-83	1081593 (48-IA-83)	1081594 (48-IA-83I)
48-84		
48-85		
48-TB	1077584 (48-IA-TB)	
48-SP	1084816 (48-IA-SP)	SPECIFY DWG. NO. WHEN ORDERING THESE PARTS

* INTERNAL PARTS KITS INCLUDE ITEM NOS. 3, 4, 6, 7 & 8 ALONG WITH A SMALL PACKET OF SILICON COMPOUND

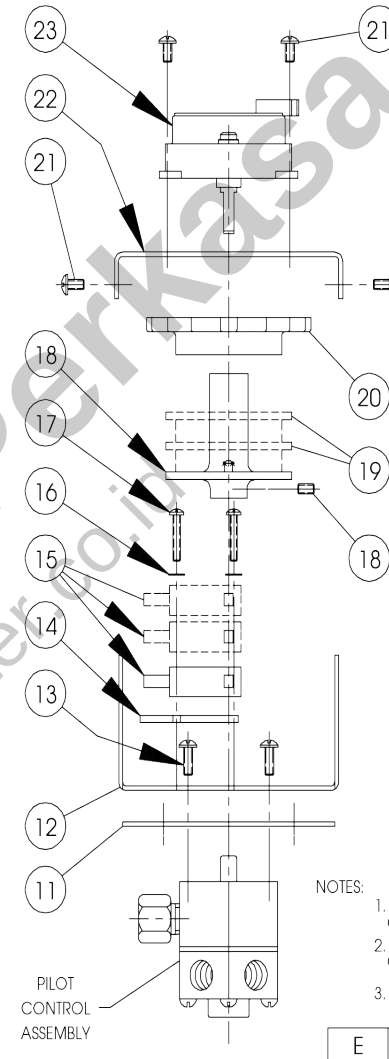

NO.	DESCRIPTION		PART NO.	QTY.
1	RD HD. MACH. SCR. (6-32 X 7/8")		1075759 (SCS-0075)	3
2	BACKPLATE		PER PROGRAM	1
3	GASKET (SEE NOTE 3)		1084171	1
4	STEMPLATE (SEE NOTE 3)		PER PROGRAM	1
5	STEMSHAFT		1070448	1
6	SPRING (SEE NOTE 3)		1076234	1
7	WASHER (SEE NOTE 3)		1074074 (41-F)	1
8	O-RING (SEE NOTE 3)		1071667 (ORB-010)	1
9	BONNET		1074793 (48-B)	1
10	FILTERED INLET (1/8" N.P.T.)		1074825 (48-Q)	1
11	MOUNTING PLATE GASKET		1075737	1
12	BOTTOM MOUNTING BRACKET		1070437	1
13	PAN HD. MACH. SCR. (6-32 X 3/8")		1072371 (SCS-0070)	4
14	INSULATOR		1075455 (58B019)	1
15	SWITCH		1075499 (58013)	1-3
16	LOCKWASHER (NO. 4)		1073593 (WAS-0015)	2
17	PAN HD. MACH. SCREW (4-40 THREAD)	1 SWITCH	1072369 (SCS-0064)	2
		2 SWITCHES	1075757 (SCS-0065)	
		3 SWITCHES	1072389 (SCS-0151)	
18	48-00 INDEXING CAM 48-01 INDEXING CAM 48-03 INDEXING CAM 48-TA INDEXING CAM ALL OTHERS (SEE NOTE 1) *CAMS INCLUDE 6-32 SET SCREW		1076245 1076244 1076246 1077932 1076243	1
19	AUXILIARY CAM (SEE NOTE 2)		1075451 (58B017)	0-2
20	THUMB WHEEL		1075454 (58B018)	1
21	TAPTITE SCREW (6-32 X 1/4")		1075746	6
22	MOTOR MOUNTING BRACKET		1070436	1
23	MOTOR (4 WATTS MAX.)	115VAC 60HZ	1075748	1
		230VAC 50/60HZ	1075749	
		24VAC 50/60HZ	1075750	
		12VAC 50/60HZ	1075753	
24	WIRE HARNESS (STANDARD)		1075464 (58B030)	1
25	MALE CONNECTOR		1075498 (58012)	1
26	WIRE HARNESS (1ST AUX. SWITCH)		1075501 (58015)	1
27	WIRE HARNESS (2ND AUX. SWITCH)		1075502 (58016)	1

NOTES:

1. STAGER PROGRAM MUST BE SPECIFIED WHEN ORDERING THIS PART.
2. MUST SPECIFY IN WHICH POSITION(S) SWITCH OUTPUT(S) ARE REQUIRED.
3. SUPPLIED AS A KIT ONLY.

REV.	DESCRIPTION	ECO	DATE	APVD
E	1-WAS: 1081595	22341	12APR10	TLE
D	ITEM NO. 3 WAS P/N 1074842	NONE	15SEP03	

AQ Matic
Valve & Controls Company Inc.

SERIES 48 STAGER ASSEMBLY

SERIES 48 STAGER ASSEMBLY


Form No. 1077

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

SERIES 48 PROGRAMS AND MOUNTING INFORMATION

NO.	DESCRIPTION		PART NO.	QTY.
1	STAGER ASSEMBLY		R048-___-___B	1
2	ENCLOSURE			1
		NEMA 4XFG	1077969	
3	PAN HEAD MACHINE SCREW 10-32 x 1/2" LONG		1075758 (510-BU)	2
4	LOCKWASHER (NO. 10)		1073588 (WAS-0005)	2

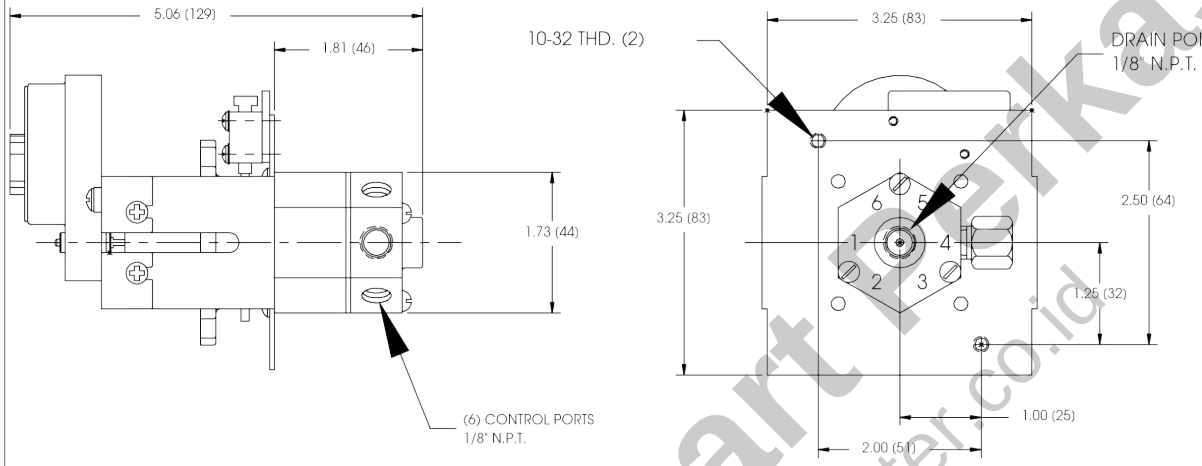

NOTE:

1. STAGERS CAN BE MANUALLY ADVANCED BY ROTATING THE CAM CLOCKWISE.
2. PIPING SCHEMATICS AVAILABLE UPON REQUEST.
3. ALL STAGERS EXCEPT 48-03 & 48-TA SUPPLIED WITH NOTCHED CAM FOR PULSE OUTPUT TYPE TIMERS. 48-03 & 48-TA SUPPLIED WITH BUTTERFLY CAM FOR "UP/DOWN" OUTPUT TYPE TIMERS.

INCHES (MILLIMETERS)

SERIES NO.	PORTS VENTED IN POSITION						DESCRIPTION
	A	B	C	D	E	F	
48-00	1,2 (SVC)	-	3,4 (BW)	-	5,6 (BR)	1,6 (FR)	4 POS. SOFTENER
48-01	1,2 (SVC)	-	3,4 (BW)	-	-	1,6 (FR)	3 POS. FILTER
48-03	1,2 (SVC)	-	3,4 (BW)	-	5,6 (BR)	1,6 (FR)	4 POS. SOFTENER (SEE NOTE 3)
48-04	1,2 (SVC)	-	3,4 (BW)	-	-	-	2 POS. FILTER
48-12	1,2 (SVC)	-	3,4 (BW)	4,5 (BR)	-	1,6 (FR)	4 POS. SOFTENER W/UPFLOW BRINE
48-83	2 (BW)	3 (BW)	-	-	6 (SVC)	1 (BW)	3 TANK SEQUENTIAL FILTER
48-84	2 (BW)	3 (BW)	4 (BW)	-	6 (SVC)	1 (BW)	4 TANK SEQUENTIAL FILTER
48-85	2 (BW)	3 (BW)	4 (BW)	5 (BW)	6 (SVC)	1 (BW)	5 TANK SEQUENTIAL FILTER
48-TA	1	-	2	-	-	-	2 TANK ALTERNATOR (SEE NOTE 3)
48-TB	1	2	1	2	1	2	2 TANK ALTERNATOR

REV.	DESCRIPTION	ECO	DATE	APVD
E	1-WAS: 1081585	22341	12APR10	TLE
D	ITEM NO. 3 WAS P/N 1074842	NONE	15SEP03	

AQ Matic
Valve & Controls Company Inc

SERIES 48 STAGER
PROGRAMS AND MOUNTING DRAWING

SCALE	DRAWN	DATE	DWG. NO.
N/A	MSM	11Apr01	1077882


Form No. 1077881

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


Form No. 1077803

PILOT CONTROL ASSEMBLY

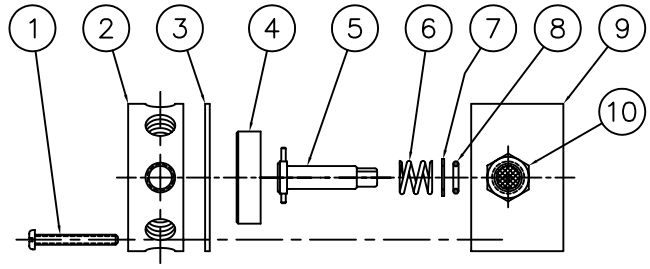

OPTIONAL AUX. SWITCHES


MAXIMUM OF TWO (2)

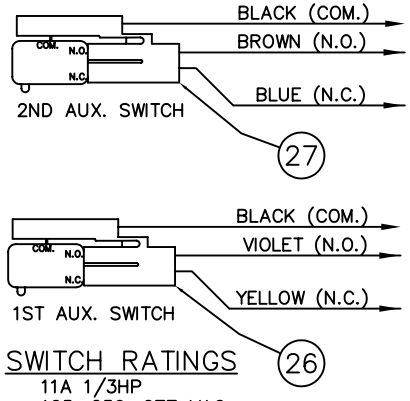

SWITCH RATINGS

11A 1/3HP
125, 250, 277 VAC
1/2A 125 VDC
1/4A 250 VDC
4A 125 VAC L


STANDARD WIRING

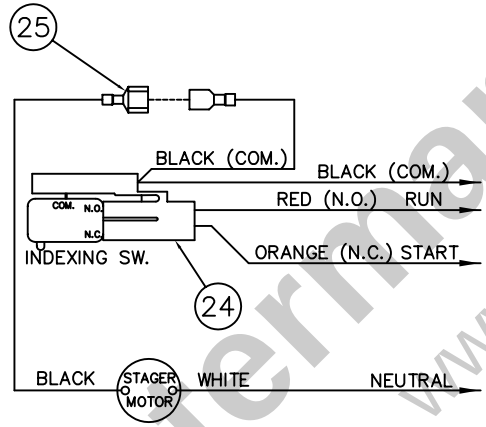

INTERNAL PARTS KITS

STAGER PROGRAM	INTERNAL PARTS KITS STD. PROGRAMS	INTERNAL PARTS KITS INVERTED PROGRAMS
51–06	1074888 (51–IA–00)	
51–07		
51–09		
51–10	1074890 (51–IA–10)	
51–11	1074891 (51–IA–11)	
51–12	1074892 (51–IA–12)	
51–86	1074893 (51–IA–86)	1077587 (51–IA–86I)
51–87		
51–SP	1074887 (51–IA–SP)	SPECIFY DWG. NO. WHEN ORDERING THESE PARTS

* INTERNAL PARTS KITS INCLUDE ITEM NOS. 3, 4, 6, 7 & 8 ALONG WITH A SMALL PACKET OF SILICON COMPOUND

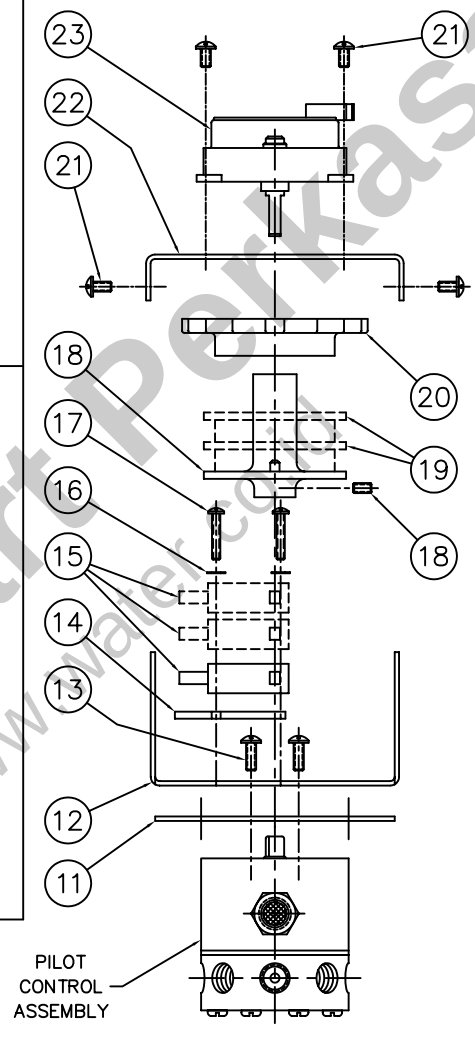

NO.	DESCRIPTION		PART NO.	QTY.
1	PAN HD. MACH. SCR. (6-32 X 1 1/8")		1075760 (SCS-0076)	4
2	BACKPLATE		PER PROGRAM	1
3	GASKET (SEE NOTE 3)		1075675 (96034)	1
4	STEMPLATE (SEE NOTE 3)		PER PROGRAM	1
5	STEMSHAFT		1070438	1
6	SPRING (SEE NOTE 3)		1075242 (54-S)	1
7	WASHER (SEE NOTE 3)		1075241 (54-R)	1
8	O-RING (SEE NOTE 3)		1071716 (ORE-011)	1
9	BONNET		1074883 (51-B)	1
10	FILTERED INLET (1/8" N.P.T.)		1074825 (48-Q)	1
11	MOUNTING PLATE GASKET		1075674 (96B050)	1
12	BOTTOM MOUNTING BRACKET		1077824	1
13	PAN HD. MACH. SCR. (6-32 X 3/8")		1072371 (SCS-0070)	2
14	INSULATOR		1075455 (58B019)	1
15	SWITCH		1075499 (58013)	1–3
16	LOCK WASHER (NO. 4)		1073593 (WAS-0015)	2
17	PAN HD. MACH. SCREW (4–40 THREAD)	1 SWITCH	1072369 (SCS-0064)	2
		2 SWITCHES	1075757 (SCS-0065)	
		3 SWITCHES	1072389 (SCS-0151)	
18	INDEXING CAM (SEE NOTE 1)		1076243	1
	SET SCREW (6–32)			1
19	AUXILIARY CAM (SEE NOTE 2)		1075451 (58B017)	0–2
20	THUMB WHEEL		1075454 (58B018)	1
21	TAPTITE SCREW (6–32 X 1/4")		1075746	6
22	MOTOR MOUNTING BRACKET		1070436	1
23	MOTOR (4 WATTS MAX.)	115VAC 60HZ	1075748	1
		230VAC 50/60HZ	1075749	
		24VAC 50/60HZ	1075750	
		12VAC 50/60HZ	1075753	
24	WIRE HARNESS (STANDARD)		1075464 (58B030)	1
25	MALE CONNECTOR		1075498 (58012)	1
26	WIRE HARNESS (1ST AUX. SWITCH)		1075501 (58015)	1
27	WIRE HARNESS (2ND AUX. SWITCH)		1075502 (58016)	1

NOTES:

1. STAGER PROGRAM MUST BE SPECIFIED WHEN ORDERING THIS PART.
2. MUST SPECIFY IN WHICH POSITION(S) SWITCH OUTPUT(S) ARE REQUIRED.
3. SUPPLIED AS A KIT ONLY.


REV.	DESCRIPTION	ECO	DATE	APVD
C	NUMBER CONVERSION	1588	13DEC02	


SERIES 51 STAGER ASSEN

AQMatic
16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Watermart Perkasa www.water.co.id

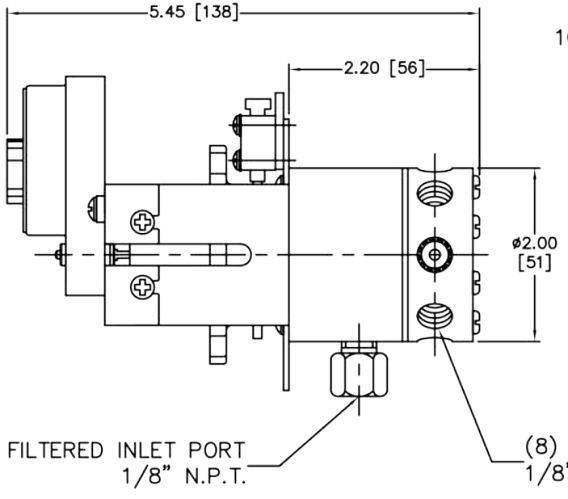

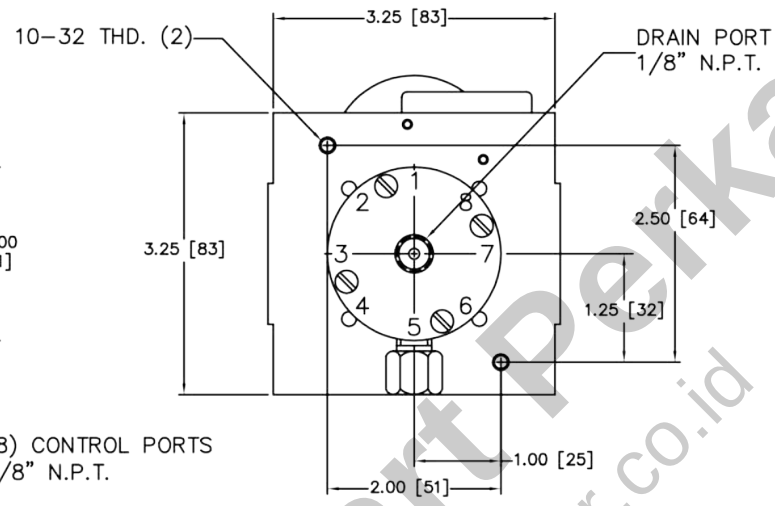

NO.	DESCRIPTION	PART NO.	QTY.
1	STAGER ASSEMBLY	R051-___-___B	1
2	ENCLOSURE		1
	NEMA 4XFG	1077970	
3	PAN HEAD MACHINE SCREW 10–32 x 1/2" LONG	1075758 (510–BU)	2
4	LOCKWASHER (NO. 10)	1073588 (WAS–0005)	2

NOTE:

1. STAGERS CAN BE MANUALLY ADVANCED BY ROTATING THE CAM CLOCKWISE.
2. PIPING SCHEMATICS AVAILABLE UPON REQUEST.

INCHES [MILLIMETERS]

SERIES NO.	PORTS VENTED IN POSITION								DESCRIPTION
	A	B	C	D	E	F	G	H	
51–06	1,2(SVC)	–	4(BW)	–	5,6,7(BR)	6,7(SR)	1,7(FR)	1,2,8(BR REF)	TIMED BR. & REFILL SOFT.
51–07	1,2(SVC)	–	4(BW)	–	5,6,7(BR)	6,7(SR)	1,7(FR)	–	TIMED BRINE SOFTENER
51–09	1,3(SVC)	–	–	4(BW)	5,7(BR/SR)	–	1,7(FR)	1,8(REF)	TIMED REFILL SOFTENER
51–10	1,2,5,6(SVC)	–	5,6,7(BW1)	1,5,6,8(FR1)	–	–	1,2,3(BW2)	1,2,4,5(FR2)	2 TANK SEQ. FILTER
51–11	2,3(SVC)	–	1,4(DR)	–	4,6,7(AS)	4,7,8(BW)	–	1,2(FR)	FILTER WITH AIR SCOUR
51–12	1,8(SVC)	2(BW)	–	4,5(BR)	4,5(DSP)	5,6(REC)	4,8(FR)	–	BRINE RECYCLE SOFT.
51–86	1(BW)	2(BW)	3(BW)	4(BW)	5(BW)	6(BW)	7(SVC)	–	6 TANK SEQ. FILTER
51–87	1(BW)	2(BW)	3(BW)	4(BW)	5(BW)	6(BW)	7(BW)	8(SVC)	7 TANK SEQ. FILTER

REV.	DESCRIPTION	ECO	DATE	APVD
D	NUMBER CONVERSION	1588	13DEC02	

AQ Matic
Valve & Controls Company Inc.

SERIES 51 STAGER
PROGRAMS AND MOUNTING DRAWING

SCALE	DRAWN	DATE	DWG. NO.
N/A	MSM	19Feb01	1077770


SERIES 51 PROGRAMS AND MOUNTING INFORMATION

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


SERIES 58 STAGER ASSEMBLY

PILOT CONTROL ASSEMBLY

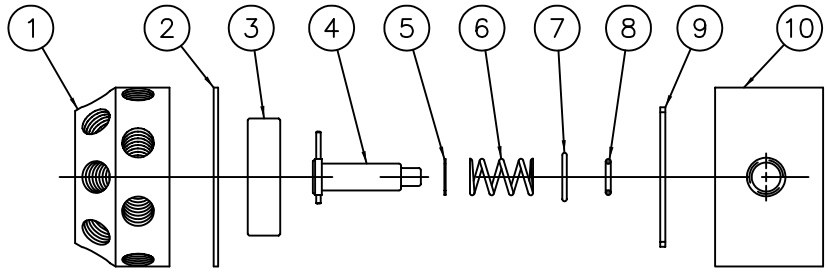

OPTIONAL AUX. SWITCHES


MAXIMUM OF TWO (2)

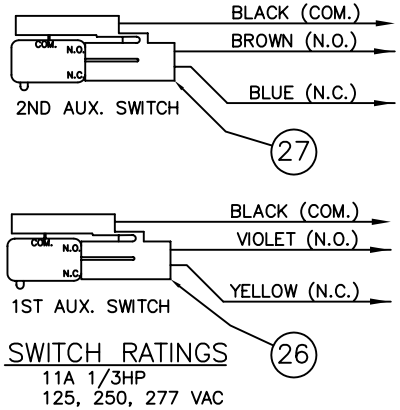

SWITCH RATINGS

11A 1/3HP
125, 250, 277 VAC
1/2A 125 VDC
1/4A 250 VDC
4A 125 VAC L

STANDARD WIRING

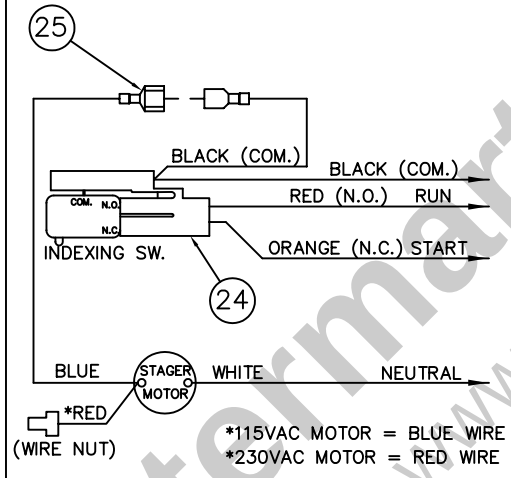


*115VAC MOTOR = BLUE WIRE
*230VAC MOTOR = RED WIRE

INTERNAL PARTS KITS

STAGER PROGRAM	INTERNAL PARTS KITS STD. PROGRAMS	INTERNAL PARTS KITS INVERTED PROGRAMS
58–00	1075411 (58–IA–00)	
58–01	1075412 (58–IA–01)	
58–02	1075413 (58–IA–02)	
58–03	1075414 (58–IA–03)	
58–07	1075415 (58–IA–07)	
58–10	1075416 (58–IA–10)	
58–TA	1075409 (58–IA–TA)	1075410 (58–IA–TAI)
58–TB	1081806 (58–IA–TB)	
58–SP	1075408 (58–IA–SP)	SPECIFY DWG. NO. WHEN ORDERING THESE PARTS

* INTERNAL PARTS KITS INCLUDE ITEM NOS. 2, 3, 5, 6, 7, 8 & 9 ALONG WITH A SMALL PACKET OF SILICON COMPOUND

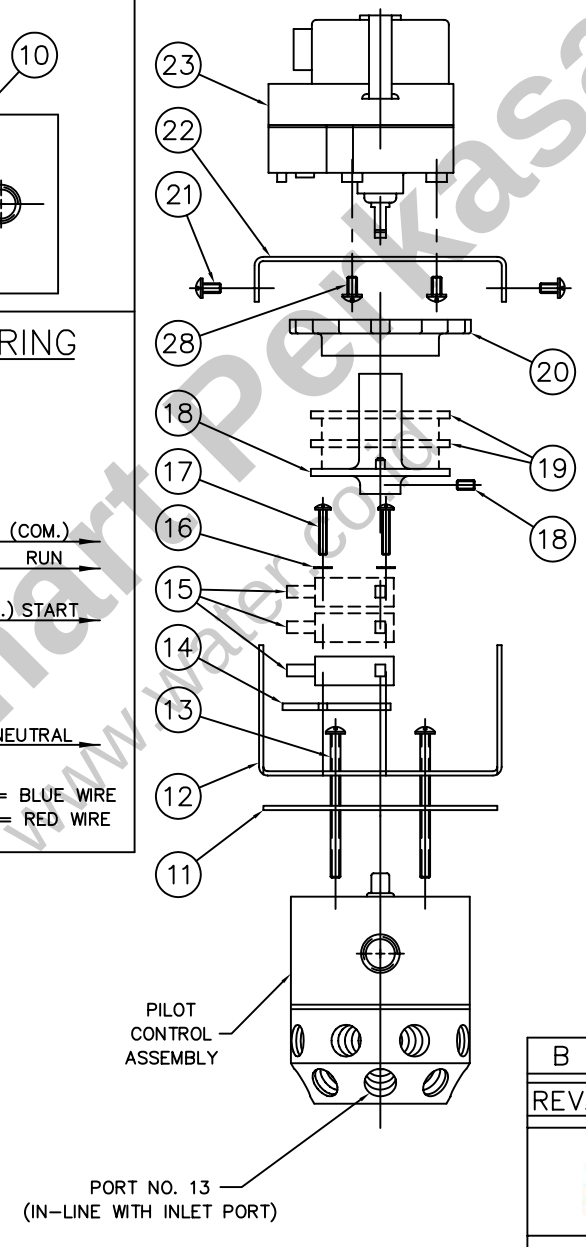

NO.	DESCRIPTION		PART NO.	QTY.
1	BACKPLATE		PER PROGRAM	1
2	BACKPLATE GASKET (SEE NOTE 3)		1084170 (58–KZ)	1
3	STEMPLATE (SEE NOTE 3)		PER PROGRAM	1
4	STEMSHAFT		1070439	1
5	WASHER (SEE NOTE 3)		1075395 (58–AH)	1
6	SPRING (SEE NOTE 3)		1075424 (58–S)	1
7	INSERT (SEE NOTE 3)		1075406 (58–DA)	1
8	O–RING (SEE NOTE 3)		1071668 (ORB–012)	1
9	O–RING (SEE NOTE 3)		1075425 (58–T)	1
10	BONNET		1075404 (58–B)	1
11	MOUNTING PLATE GASKET		1075407 (58–DC)	1
12	BOTTOM MOUNTING BRACKET		1070437	1
13	PAN HD. MACH. SCR. (8–32 X 2")		1072378 (SCS–0087)	4
14	INSULATOR		1075455 (58B019)	1
15	SWITCH		1075499 (58013)	1–3
16	LOCKWASHER (NO. 4)		1073593 (WAS–0015)	2
17	PAN HD. MACH. SCREW (4–40 THREAD)	1 SWITCH	1072369 (SCS–0064)	2
		2 SWITCHES	1075757 (SCS–0065)	
		3 SWITCHES	1072389 (SCS–0151)	
18	INDEXING CAM (SEE NOTE 1) (CAM INCLUDES 6–32 SET SCREW)		1076243	1
19	AUXILIARY CAM (SEE NOTE 2)		1075451 (58B017)	0–2
20	THUMB WHEEL		1075454 (58B018)	1
21	TAPTITE SCREW (6–32 X 1/4")		1075746	4
22	MOTOR MOUNTING BRACKET		1070436	1
23	MOTOR	115VAC 60HZ	1075434 (58B000)	1
		230VAC 50/60HZ		
		24VAC 50/60HZ	1075438 (58B004)	
		12VAC 50/60HZ	1075779	
24	WIRE HARNESS (STANDARD)		1075464 (58B030)	1
25	MALE CONNECTOR		1075498 (58012)	1
26	WIRE HARNESS (1ST AUX. SWITCH)		1075501 (58015)	1
27	WIRE HARNESS (2ND AUX. SWITCH)		1075502 (58016)	1
28	SCREW (M3 X 0.5 X 6)		1072396 (SCS–0167)	3

NOTES:
1. STAGER PROGRAM MUST BE SPECIFIED WHEN ORDERING THIS PART.
2. MUST SPECIFY IN WHICH POSITION(S) SWITCH OUTPUT(S) ARE REQUIRED.
3. SUPPLIED AS A KIT ONLY.

REV.	DESCRIPTION	ECO	DATE	APVD
B	NUMBER CONVERSION	1588	20DEC02	

AQMatic
16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com


SERIES 58 STAGER ASSEMBLY

Form No. 1077897

Watermart Perkasa
www.water.co.id
PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

SERIES 58 PROGRAMS AND MOUNTING INFORMATION

NO.	DESCRIPTION		PART NO.	QTY.
1	STAGER ASSEMBLY		R058-___-___C	1
2	ENCLOSURE	NEMA 1	1075422 (58-R)	1
		NEMA 4	1075423 (58-RA)	
		NEMA 4XFG	1073665 (ZENC0409)	
3	PAN HEAD MACHINE SCREW 10-32 x 1/2" LONG		1075758 (510-BU)	2
4	LOCKWASHER (NO. 10)		1073588 (WAS-0005)	2

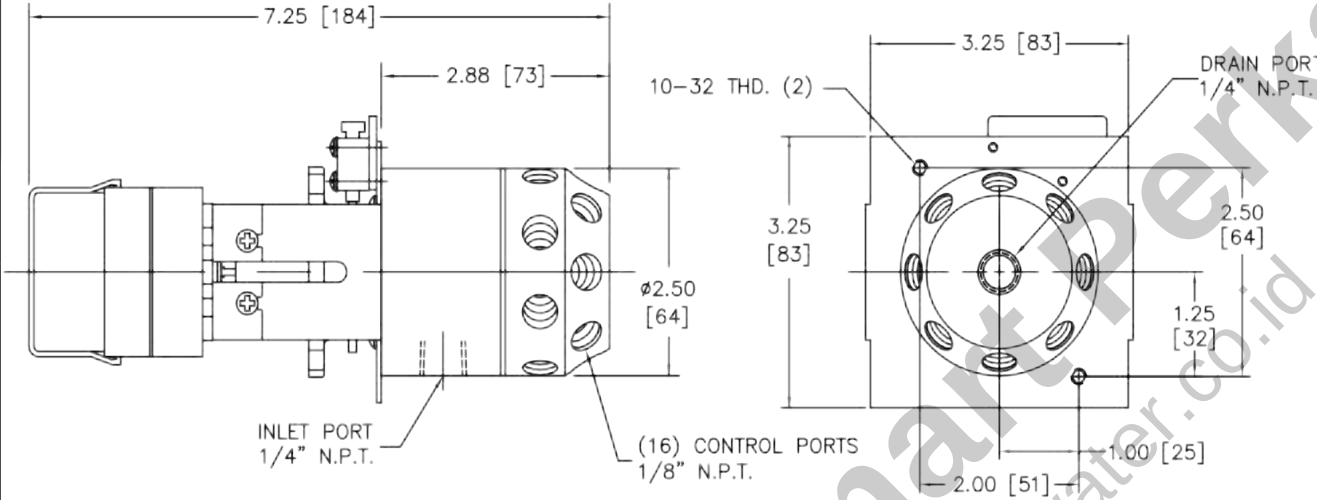

NOTE:

1. STAGERS CAN BE MANUALLY ADVANCED BY ROTATING THE CAM CLOCKWISE.
2. PIPING SCHEMATICS AVAILABLE UPON REQUEST.

INCHES [MILLIMETERS]

SERIES NO.	DESCRIPTION
58-00	2 COLUMN DEIONIZER
58-01	FILTER (DOUBLE ACTING VALVES)
58-02	2 COLUMN DEIONIZER (CATION OUTLET VALVE)
58-03	3 TANK SEQUENTIAL FILTER
58-04	4 TANK SEQUENTIAL FILTER
58-07	MIXED BED DEIONIZER (SIMULTANEOUS REGEN.)
58-10	MIXED BED DEIONIZER
58-TA	2 TANK ALTERNATOR
58-TB	2 TANK ALTERNATOR WITH TIMED BRINE
58-SP	CUSTOM PROGRAM

Form No. 1077897

REV.	DESCRIPTION	ECO	DATE	APVD
D	NUMBER CONVERSION	1588	20DEC02	

AQMatic
16605 West Victor Road
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

SERIES 58 STAGER
PROGRAMS AND MOUNTING DRAWING

SCALE	DRAWN	DATE	DWG. NO.
N/A	MSM	04May01	1077898

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

AQUAMATIC® 962 SERIES
STAGER CONTROLS

SOPHISTICATED ELECTRONICS FOR SUPERIOR PROGRAMMING

MADE IN THE USA
OF FOREIGN & DOMESTIC PARTS



FEATURES/BENEFITS

Remote lockout input combine an AquaMatic stager with a 962 series electronic control, mounted and prewired in a NEMA-rated enclosure

Can be used simultaneously with time clock, meter immediate, or meter delayed regeneration types

Allows monitoring of flow and volume information in remote signal start applications

Control and stager automatically synchronize to the service position

Up to 15 programmable timed regeneration cycles are available [0-255 minutes]

Accepts input from variety of flow sensors

During a power outage, critical operating information is stored in memory

Can be programmed to lock capacity value

Key data [peak flow, average daily usage] is retrievable from memory

Programmable regeneration types for increased flexibility

Selected reserve options

- Fixed reserve: the reserve is fixed at a programmable percentage of the total capacity
- Variable reserve: the control monitors daily water usage and at the programmed time of regeneration, calculates the average water used for each day of the week

OPTIONS

Battery Backup

Contact closure [dry or powered] during a cycle or cycles

SPDT relay for additional signal

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

SPECIFICATIONS

NEMA 4XFG Fiberglass Enclosure

115 VAC 50/60 Hz and 230 VAC 50/60 Hz

U.S. or Metric Units of Measure

APPLICATIONS

SINGLE UNIT CONTROLS	MODEL NUMBER	DESCRIPTION
Typical Softeners and Filters	E948*	962 Control w/Model 48, 6 port stager
More Complex Softeners and Filters	E951*	962 Control w/Model 51, 8 port stager
MULTIPLE UNIT CONTROLS	**MODEL NUMBER**	**DESCRIPTION**
Twin-Alternating Softeners and Filters (with timed brine switch output)	E958-TB	962 Control w/Model 58-TB, 16 port stager
Twin-Alternating Softeners	E958-TA	962 Control w/Model 58-TA, 16 port stager
Sequential Filters (backwash only)	E948	962 Control w/Model 48, 6 port stager
2 Unit Sequential Filters (backwash and rinse)	E951	962 Control w/Model 51, 8 port stager
3 or 4 Unit Sequential Filters	E958	962 Control w/Model 58, 16 port stager

*Two-tank and three-tank parallel systems can be controlled by individual controls provided with lockout feature (lockout feature is void when using the added relay output option).

Watermart Perkasa
www.water.co.id

16605 West Victor Rd. New Berlin, WI 53151

P: 262–326–0100 | www.aq–matic.com | techsupport@aq–matic.com

© 2016 AQ Matic Valve and Controls Company, Inc. All rights reserved.

All AQ Matic trademarks and logos are owned by AQ Matic or its affiliates. All other registered and unregistered trademarks and logos are the property of their respective owners. Because we are continuously improving our products and services, AQ Matic reserves the right to change specifications without prior notice. AQ Matic is an equal opportunity employer.

1221446 REV C MA2016

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

962 ELECTRONIC STAGER CONTROLLER MASTER CHART

FILL IN PROPER DESIGNATIONS TO DETERMINE PRODUCT NUMBER: E 9 ____ - ____ F - ____ ____ ____ ____ ____

CONTROLLER Electronic Controller Series to be Provided
9 = 962 (Battery Backup Capable)*

STAGER Rotary Pilot Stager Series to be Provided
48 = 6 Port (Brass)
51 = 8 Port (Brass)
58 = 16 Port (PVC)

PROGRAM Stager Program to be Provided
*00 - 99 = STANDARD
**SS = SPECIAL per Drawing Indicated
TA = Twin Alternating Softener (w/ Service Lights on front panel)
^TB = Twin Alternating Softener (w/ Timed Brine Pos. & switch output)
-or- Twin Alternating Filter skipping steps 2,3,7 & 8.
^TR = Twin Alternating Softener (w/Timed Refill pos. & switch output)
* Two character designation from standard stager drawing.
** Special Drawing number placed in last 5 digits of product number.
^ Tank In Service is indicated via the 6 digit display of the 962 controller.

ENCLOSURE N.E.M.A. Rating of Panel & Enclosure to be Provided
F = NEMA 4X Fiberglass Panel & Enclosure

ELECTRICAL Power Required to Operate Device (Field Configurable)
1 = 115 Volts / 50 or 60 Hertz
2 = 220 Volts / 50 or 60 Hertz

1st AUX. SWITCH First Extra Switch to be provided on Rotary Pilot Stager (Unless Special Drawing Number is Assigned)
S = SERVICE Return (Homing) (**Not** for 58-**TA** Stagers)
W = Status Lights Cam (58-**TA** Stagers only)

2nd AUX. SWITCH Second Extra Switch to be provided on Rotary Pilot Stager (Unless Special Drawing Number is Assigned)
0 = NONE (Not Valid for 58 TA or TB Stagers)
*A to R = CAM POSITION Switch is to be active (I & O not used)
**S = SERVICE Return (Homing) (58-TA Stagers only)
T = Timed Switch Output (for 58 TB & TR Stagers only)
* Use a Letter to indicate Cam position Not a Number.
**Option "S" Standard on 58 Stagers w/TA Program Only.

PRESSURE Program of Stager (Unless Special Drawing Number is Assigned)
0 = STANDARD (Vent to open)
1 = INVERTED (Pressure to open)

RELAY OUTPUT OPTION (Provides additional relay output during Regeneration) (Unless Special Drawing Number is Assigned)
0 = NONE
R = Relay Output Option (**For Single Tank & Twin Alt. Only**)
(Provides a dry or powered set of contacts during Service / Regen.)
SPDT
Coil: 12VAC
Contacts: 15A/120VAC/28VDC, 10A/240VAC

****Relay also sold as kit p/n: 1077737, kit includes (1)Relay, (1)Socket & Mounting Hardware**

STAGER REVISION (Unless Special Drawing Number is Assigned)
B = 48 and 51 Series Stagers
C = 58 Series Stagers


REV	ECN	DESCRIPTION	BY/DATE
C		Formatted for Pentair ECN	JJJ 17-Nov-09
D	1778	Remove 59 & 96 stagers	MM 1-Oct-20

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Series 962
Electronic Stager Control

Operation Manual

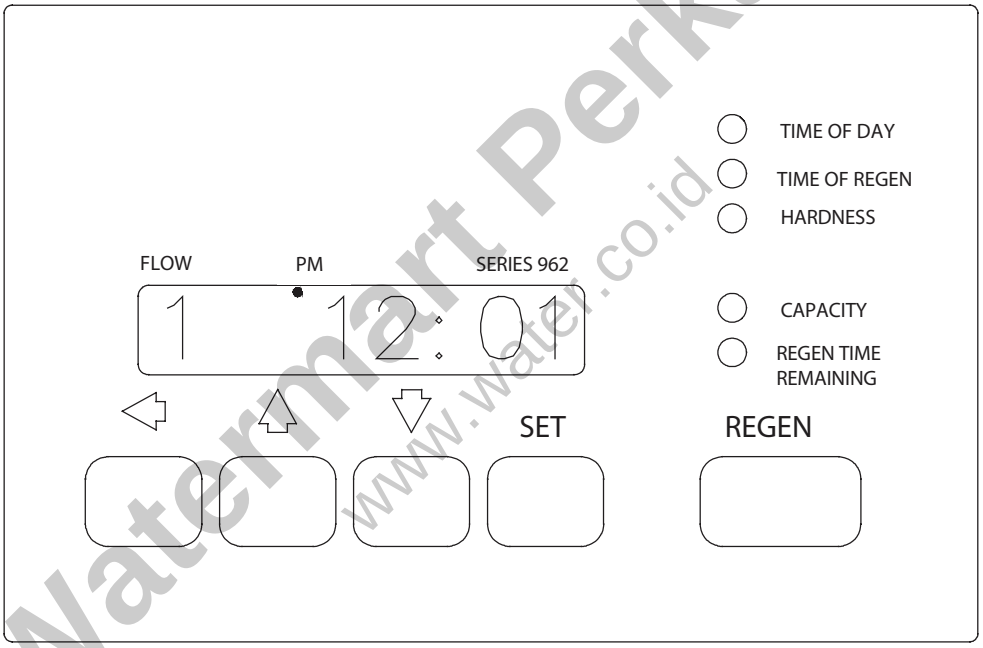

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Table of Contents

Declaration of Conformity 3

Caution and Warning Symbols 4

Series 962 Electronic Stager Controls 6

Special Features of the Series 962 Stagers. . . 6

- Memory Retention
- Programmable Cycles
- Double Regeneration
- Capacity Setting Lockout
- Selectable Reserve Options
- U.S. or Metric Units of Measure
- Calendar Override
- Manual Regeneration
- Operating Histories
- Remote Regeneration
- Selectable Automatic Regeneration
- Optional Battery Backup
- Flow Rate Display

Programming the Series 962 Stager 7

- Factory Default Values
- Program Levels
- Level I Programming
- Setting Time of Day
- Level II Programming
- Changing a Program Value
- Level III Programming
- Level IV Programming
- Entering “C” Values
- Entering “d” Values
- Viewing a Program Value
- Manual Regeneration
- Lock-out Feature

Flow Sensor Select Options 9

Capacity Based Regeneration Start Options . . 9

- Immediate Regeneration Only Option
- Installation Programmed Values Chart

Advance Cycle Function 7

Cancel Regeneration Function 7

Parallel Operation 15

Twin Alternating Operation 15

Flow Sensor Connections 16

AC Power Wiring 16

Remote Regeneration 17

Relay Output Option 17

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Caution and Warning Symbols

The following international symbols appear in this manual to highlight caution and warning messages.

Cautions

Not heeding these messages could result in personal injury and/or damage to equipment.



Caution: This symbol indicates caution messages (Refer to User Manual).

Warnings

Not heeding these messages could result in serious personal injury.



Warning: This symbol is intended to alert the user to the presence of “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Specifications



Warning: Class I equipment - The composite enclosure used in this equipment does not automatically provide grounding between conduit connections. Use grounding bushing and jumper wires as part of the installation. **To avoid electric shock, grounding must be installed by the customer as part of the installation. Installation should be completed by qualified electricians and in accordance with the requirements of all state and local electrical codes as well as the National Electrical Code (NEC). A separate ground post has been provided inside this equipment enclosure and is indicated by the NEC ground symbol as shown below.**



NEC Ground Symbol



Warning: Overcurrent Protection - This equipment is not supplied with built in overcurrent protection (fuses or circuit breakers). An external switch and/or circuit breaker must be installed by a qualified electrician in accordance with all state and local electrical codes as well as the National Electrical Code (NEC). The external switch and/or circuit breaker must be in close proximity to this equipment and in easy reach of the operator. It must be clearly marked to indicate that it is the disconnecting device for this equipment. Recommend fuse size is 1 AMP.

Voltage Range: 230/115VAC (+/- 10%)

Frequency Range: 50/60Hz

Max. Rated Power: 4 Watts

Pollution Degree: 2

Overvoltage Category: II

Altitude: 6500 Ft. (2000 Meters)

Max. Rated Fluid (Air/Water) Pressures

Model E948	Model E951	Model E958/ E959
125 psi (8.6 bar)	125 psi (8.6 bar)	125 psi (8.6 bar)

NEMA 4X Enclosure: Intended for indoor or outdoor use primarily to provide a degree of protection against corrosion, windblown dust and rain, splashing water; undamaged by the formation of ice on the enclosure. The enclosure door must be kept tightly closed using all fasteners provided. ***Any modifications to this enclosure (i.e., added holes for cable entry/ mounting, conduit connections...etc.) may void the intended NEMA 4X rating. NEMA 4 and UL rated fittings should be used when modifying the enclosure***.

Relative Humidity Operating Range:

Temperature Range	Allowed Relative Humidity
0°C to 37°C (32°F to 99°F)	10% to 100% Condensing
38°C to 55°C (100°F to 131°F)	10% to 75% Non-Condensing

Watermart Perkasa
www.Water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Inputs

Terminal Strip 1 (TB1) High Voltage

TB1, Terminal #1: Line Voltage Input

TB1, Terminal #4: Neutral Input

TB1, Terminal #6: Input to Aux. Switch Common

Optional Relay Inputs

Relay Terminal #6: Relay Common Input

Terminal Strip 2 (TB2) Low Voltage

TB2, Terminal #11: Turbine Meter Ground Input

TB2, Terminal #12: Turbine Meter Shield Input

TB2, Terminal #13: Turbine Meter Signal Input

TB2, Terminal #17: Delayed Start Input (Dry Contact)

TB2, Terminal #18: Delayed Start Input (Dry Contact)

TB2, Terminal #19: Lockout Input (Dry Contact)

TB2, Terminal #20: Lockout Input (Dry Contact)

Outputs

Terminal Strip 1 (TB1) High Voltage

TB1, Terminal #7: Aux. Switch N.C. Output

TB1, Terminal #8: Aux. Switch N.O. Output

Optional Relay Outputs

Relay Terminal #2: Relay N.C. Output

Relay Terminal #3: Relay N.O. Output

Terminal Strip 2 (TB2) Low Voltage

TB2, Terminal #14: Turbine Meter +12VDC Output

TB2, Terminal #12: Turbine Meter Shield Input

TB2, Terminal #13: Turbine Meter Signal Input

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Series 962 Electronic Stager Controls

The Series 962 Electronic Stager Controls provide sophisticated, demand-based water conditioning by combining a microprocessor with a flow meter to electronically monitor the amount of water used. This fully programmable series of controls provide the ability to fine tune the operation to meet the application requirements. There are several 962 Stager models available.

Single Unit Controls	Model No.
Basic Softeners & Filters	E948
Complex Softeners & Filters	E951

Multiple Unit Controls	Model No.
Twin Alternating Softeners & Filters	E958-TA E958-TB
Sequential Filters (Backwash Only)	E948
2 Unit Sequential Filters	E951
3 or 4 Unit Sequential Filters	E958

Special Features of the Series 962 Control

Memory Retention

During a power outage, critical operating information is stored in nonvolatile memory. This information includes the time of day, water usage, all programming data and the number of days since the last regeneration. When power is restored, the information is returned to the microprocessor and operation resumes as if an outage never occurred. The time of day will be late by the length of the power outage. The time of day should be reset after an extended power outage. No other reprogramming is necessary. An optional backup battery will allow the control to keep track of time and water usage for up to 8 hours during a power outage. **The control will not initiate a regeneration while on battery backup.**

Programmable Cycles

The control is flexible in defining the appropriate cycles of operation.

Double Regeneration

For single tank applications, the control automatically calls for a second regeneration the following day if the current operation cycle exceeds the programmed capacity by 150% or more.

Capacity Setting Lockout

The control can be programmed to lock the capacity so it cannot be altered after installation.

Selectable Reserve Options

To meet the application requirements, the control allows selection of one of two reserve types:

Fixed Reserve - The reserve is fixed at a programmable percentage (30% factory preset) of the total capacity.

Variable Reserve - The controller monitors the daily water usage and at the programmed time of regeneration, calculates the average water used for each day of the week. The reserve capacity is set to 120% of the average water usage for the next day.

U.S. or Metric Units of Measure

To meet your display and programming requirements, the 962 Stager uses grains per gallon of hardness and kilograins of capacity for U.S. units; or parts per million of hardness and kilograms of capacity as gallons or cubic meters.

Calendar Override

If the volume of water used has not caused a regeneration, the 962 Stager can be set to regenerate every one to thirty days.

Manual Regeneration

A separate **REGEN** button is provided for manual regenerations. A double manual regeneration feature is included that allows back-to-back regenerations.

Operating Histories

Important operating data is stored in memory and is retrievable upon demand.

The historical data includes peak flow data as well as average daily water usage for each day of the week.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Remote Regeneration

A set of input terminals with a programmable delay are provided as a standard feature of the 962 Stager that allows regeneration to be initiated from a remote location. This feature can be used to facilitate remote manual regeneration requirements or assist in further automating the control system such as the use of a differential pressure switch.

Selectable Automatic Regenerations

There are four automatic regeneration methods; “delayed with immediate override”, “delayed only”, “day of week”, and “calendar override”. Immediate regeneration is used to start an automatic regeneration immediately when the capacity remaining in a tank is reduced to zero. Delayed regeneration is used to start an automatic regeneration at a predetermined time of day when the capacity remaining is below a defined reserve. The reserve capacity may be fixed or variable. The variable reserve is determined by past usage history. Regeneration can be accomplished based on the day of the week at a specific time of day or after programmable number of days since the last regeneration.

Optional Battery Backup

An optional backup battery can be provided so that the Time of Day and water usage will be maintained for up to **8 hours** during a power outage. All 962 Stager controls are provided as “Battery Backup Capable”. If the optional battery backup is provided with the Series 962, make sure that it is properly connected.

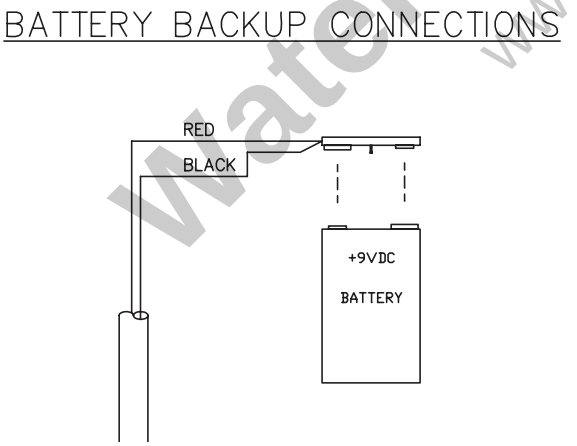


Figure 1

Flow Rate Display

In the normal operating mode the series 962 Stager control will alternate between **Capacity Remaining** (gallons or m^3) and **Flow Rate** (gallons per minute or m^3/hr). In the event of power loss, (including battery power) the display will alternate between **Time of Day** and **Capacity Remaining** once power has been restored. The control will remain in this display mode until the Time of Day is reset or until any button is pressed. The flow rate display is indicated by a small L.E.D. in the top left corner of the display. When P19 is set to “4” (user defined pulse equivalent) flow rate will not be displayed.

Programming the Series 962 Stager Control

This section contains common aspects of programming the 962 control and retrieving historical operating data. A label provided with the control should be filled out with programming parameters on system start-up.

Factory Default Values

Factory default values are shown on Table 1. **Capacity and Hardness values are set to 0 and must be changed to appropriate values before the control will operate. “Err 4” will be displayed until a valid number is entered for each of these items.**

Program Levels

The Series 962 Stager controls have been designed to facilitate different levels of programming requirements. Level I includes program variables that are frequently referenced by users, operators, installers and service personnel. They are accessible without the requirement of codes. Level II includes variables that are most typically used at the time of installation and initial setup. They are accessible only with access codes. Level III locations are used primarily for accessing operation history information. Level IV locations are used to set the regeneration days of the week. Level III and IV parameters also require access codes. Programming levels are further defined in Tables I, II, and III.

Levels	Access Code
I	None Required
II	Press and hold the (↑) and (↓) arrow buttons for 3 seconds
III	Press and hold the (←) and (↑) arrow buttons for 3 seconds
IV	Press and hold the (←) and (↓) arrow buttons for 3 seconds

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Level I Programming

Level I program values are identified by the legend on the faceplate of the control. A green LED is illuminated when a Level I "P" value is displayed. Following are the Level I “P” values:

- Time of Day P1
- Time of Regeneration P2
- Hardness P3
- Capacity P5

P4 is skipped on the 962 Stager Programing.

Setting Time of Day

Press the **SET** button. The display will show the time of day with the minutes digit blinking. Press the UP (↑) arrow button to increase the number or the DOWN (↓) arrow button to decrease the number. To skip the number without changing, press the LEFT (←) arrow button. The first digit will stop flashing and the next digit will start flashing. When the far left digit is reached, pressing the LEFT (←) arrow button returns the flashing to the far right digit. Continue changing numbers until the desired Time of Day is obtained. Press the **SET** button to enter the value. The PM indicator will toggle when the “tens digit” of the hours is increased. The far left digit is used to indicate the day of week. Number 1 being Sunday and number 7 being Saturday.

The time of Regeneration, Hardness, and Capacity are set in a similar manner.

Level II Programming

The control will automatically enter Level II programming if P19 or P20 have not been set.

Press and hold the (↑) and (↓) arrow buttons for 3 seconds to enter the Level II programming mode. The display will show the letter “P” in the far left display digit. The parameter “P-number” is displayed in the far right display digit. See Table 1 for Level I and II programming values.

Changing a Program Value

Once the P value you want to change is displayed, press the (←) arrow button to display the current entry for that value. To change or modify the value, press the **SET** button. The digit on the right hand side of the display will begin to flash. Use the (↑) or (↓) arrow buttons to select the desired entry. Once the desired entry is obtained, press the (←) button to move to the next digit and change as needed. Once you have completed the appropriate changes, press the **SET** button. When you press the **SET** button the new entry is stored and the control automatically scrolls to the next P value. If a beep sounds, the new entry was not accepted. Table 1 lists the range available for a specific program value.

Level III Programming

Press and hold the (←) and (↑) arrow buttons for 3 seconds to enter the Level III programming mode. The display will show the letter “L” in the far left display digit. The parameter “L-number” is displayed in the far right display digit. The **SET** button is inactive except for L4. If **SET** is pressed when L4 is displayed, Peak Flow is reset to zero. If **SET** is pressed when any other location is displayed the control will beep.

Level IV Programming

Press and hold the (←) and (↓) arrow buttons for 3 seconds to enter the Level IV programming mode. Level IV programming is used to enter the user defined cycle times and day of week regeneration. All controllers have default settings for 4 cycle softener operation. **The operation type is determined by the value that is programmed in “P17” and must be changed if not being used as a 4 cycle conditioner.**

Entering "C" Values

"C" values are used to define a specific number of cycles to meet the application needs and are accessible through level IV programming mode.

Example: If the control is used in a system that has a total of 10 cycles of operation, select 6 for P17 and program C1-C10 for the amount of time desired for each cycle (up to 255 minutes).

Each "C" value represents 1 position of the rotary pilot stager that is being used. A maximum of 15 cycles may be used, each programmable from 0-255 minutes.

While the controller is in regeneration the display will show a “C” value in the far left display and the time remaining (in minutes) for that “C” value.

Example: [C1 15] = 15 min remaining in C1.

Entering “d” Values (Regeneration Days)

“d” values are used to start a regeneration on a certain day of the week. There are seven “d” values numbered from 1 to 7, with 1 representing Sunday and 7 representing Saturday. Set a 1 in “d7” to initiate an automatic regeneration every Saturday at the Time of Regeneration (P2). The automatic regenerations will occur at the time set in P2 regardless of the capacity remaining in the system. A value of “0” indicates no regeneration on that day. The default value is “0” for all “d” values.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Viewing a Program Value

Programmed values may be viewed at any time. Program values may not be changed during a regeneration.

Level I - To locate and display a P value in Level I press the (↑) or (↓) arrow button until the desired value is displayed. Level I parameters are indicated by the legend on the face plate of the control.

Level II - To locate and display a P value in Level II, simultaneously press the (↑) and (↓) arrow buttons for 3 seconds to gain access. Press the (↑) or (↓) arrow buttons until the desired location is displayed. Press (←) to display the value in the P location.

Level III - To locate and display an L value in Level III, simultaneously press the (←) and (↑) arrow buttons for 3 seconds to gain access an then press the (↑) or (↓) arrow buttons until the desired location is displayed. Press (←) to display the value in the L location.

Level IV - To locate and display a "d" value in Level IV, simultaneously press the (←) and (↓) arrow buttons for 3 seconds to gain access and then press the (↑) or (↓) arrow buttons until the desired location is displayed. Press (←) to display the value in the "d" location.

Manual Regeneration

To initiate a manual regeneration, simply press and hold the **REGEN** button for 3 seconds. If an immediate second regeneration is desired, wait for at least **one minute** after the first regeneration begins and then press and hold the **REGEN** button for 3 seconds. A second regeneration will be performed immediately following the first. The display will freeze and only show the Regeneration Time Remaining as an indication that the second regeneration will be initiated. When the first regeneration is complete, the second regeneration will begin and the display will alternate between Flow Rate and Regeneration Time Remaining. The second regeneration will be performed on the offline tank in twin alternating applications.

Lock-Out Feature

The lock-out feature may also be used to prevent regenerations when a signal is present at the lock-out terminals. Two or more 962 controls can be connected together (see Figure 2) to prevent one from regenerating while another is in regeneration. This signal can also come from external equipment that can provide a dry contact closure. (CONNECTION MUST BE A DRY CONTACT).

NOTE: When using the Relay Output Option the lockout feature cannot be used.

Flow Sensor Select Options

P19 is used to select the flow sensor type. Numbers 1 and 2 are for the Autotrol 1 inch and 2 inch turbine type flow sensors. The number in P20 will be ignored when P19 is programmed with a 1 or 2.

Other flow sensors can be used by entering a "3" in P19 and entering the correct "K-factor" in P20. The K-factor is defined as pulses per gallon for U.S. units or pulses per liter for metric units. The K-factor can be obtained from the flow sensor manufacturer.

If a "4" is entered in P19 then the definition of the number in P20 becomes gallons or liters per pulse depending on the units of measure selected.

Capacity Based Regeneration Start Options

The following is an explanation of the regeneration start options for single tank 962 Stager controls.

At the time of regeneration (time set in P2) the control will check to see if a regeneration should start. This check depends on the value programmed in P15.

P15 = 0 or 2 Variable Reserve

The control calculates an average water usage for each day of the week when it is using variable reserve. A regeneration will start if the capacity remaining is less than 1.2 times the average water usage for the next day.

P15 = 1 or 3 Fixed Reserve

The reserve capacity is calculated using the fixed reserve capacity programmed in P16. The value in P16 is the percentage of the calculated system capacity used for the reserve.

Example: If the programmed capacity is 10,000 grains and the hardness is 10 grains/gallon the calculated system capacity is 1000 gallons. The reserve capacity is 300 gallons if the fixed reserve is set to 30%. A regeneration will start if the capacity remaining at the time of regeneration is less than 300 gallons.

The parameter P15 is also used to select immediate regenerations or delayed regenerations only.

P15 = 0 or 1 Delayed Regeneration Only

Automatic regenerations will occur at the time of regeneration only. The control will delay the start of regeneration until the time of regeneration even if the capacity remaining is reduced to zero gallons.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

P15 = 2 or 3 Immediate Regeneration Override

In addition to delayed regenerations automatic regenerations will occur at any time during the day if the capacity remaining reaches zero.

Immediate Regeneration Only Option

Automatic regenerations performed at the time of regeneration (P2) can be eliminated by setting the control for fixed reserve with immediate regeneration override (P15 = 3) and setting the reserve capacity percentage (P16) to 0%. This will create a reserve capacity of zero gallons and override the Time of Regeneration (P2) to allow for an immediate regeneration. **These are the preferred settings for a Twin Alternating softener system**.

Advance Cycle Function

While in a regeneration cycle, you can advance the stager to the next cycle by pressing and holding the left arrow key (←) for 3 seconds. The stager and controller will then advance to the next regeneration cycle.

Cancel Regeneration Function

To cancel (abort) a regeneration, press and hold the left arrow (←) and **SET** keys for 3 seconds. The control will display an ERROR 3 and return the stager to the service (Home) position. Once in the service position, ERROR 3 will be cleared.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Press and hold the (↑) and (↓) arrow buttons to access Level II.

Table 1 - Level I and II Parameters

Parameter		Range of Values[a]	Minimum Increments	Default	Units of Measure	Notes
Name	Description					
P1	Day of week and time of day	(1-7) 1:00-12:59 AM or PM (1-7) 0:00 -23:59	(1 day) 1 minute	None	hour:minute	Range depends on value selected for P13. For day of week, SUN=1, MON=2, TUE=3, WED=4, THU=5, FRI=6, SAT=7
P2	Time of day to start regeneration	1:00-12:59 AM or PM 0:00-23:59	1 minute	2:00 am	hour:minute	Range depends on value selected for P13. Use only if P15 = 1
P3	Hardness of water	3-250 30-2500	1 10	0 0	grains/gallon ppm	Unit of measure depends value selected for P12
P4						Not Used
P5	Capacity of unit	1-5100 .1-510.0	1 .1	0	kilograins[b] kilograms[b]	Unit of measure depends on value selected for P12
P6						Not Used
P7						Not Used
P8						Not Used
P9	Backwash time	1-30	1	14	minutes	If P17=6 or 9, Do not program P9
P10	Rinse/Draw time	1-125	1	40	minutes	If P17=3, 6, or 9, Do not program P10
P11	Rinse time	1-19	1	4	minutes	If P17=6 or 9, Do not program P11
P12	Units of measure	0-1	1	0		0 = US, 1 = Metric
P13	Clock mode	0-1	1	0		0 = 12 hour clock 1 = 24 hour clock
P14	Calendar override	0-30	1	0	days	0 = no calendar override
P15	Reserve Type	0-3	1	0		0 = Variable reserve, 1 = fixed reserve, 2 = variable reserve with immediate regeneration, 3 = fixed reserve with immediate regen
P16	Initial average usage or fixed reserve	0-70	1	30	% of capacity	Description depends on value entered for P15
P17	Operation type[c]	3-9	1	4		0 - 2 = Not Used, 3 = 3 cycle filter 4 = 4 cycle softener, 5 = 4 cycle (180/182) butterfly config., 6 = User defined cycle times[d]., 9 = User defined (58-TB & 58-TR only).[d]
P18	Capacity change lock-out	0-1	1	0		0 = None, 1 = Capacity change locked-out
P19	Flow sensor select	1-4	1	3		1 = 1.0" Autotrol turbine, 2 = 2.0" Autotrol turbine, 3 = User defined K-factor (PPG), 4 = User defined pulse equivalent (GPP)
P20	K-factor or pulse equivalent	0.01-255.00	.01	0.01		Number used for meter K-factor or pulse equivalent
P21	Remote regeneration switch delay	1-254	1	60	seconds	Time remote switch must be active to start a regeneration

a. All parameters must be set within acceptable range of values or ERR4 will be displayed.
b. See Table 2 for conversions.
c. When using options 6 or 9 programming "C" values per Table 3 eliminates the need to program P9 through P11.
d. Program "C" values per Table 4.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Table 2 Conversions

To Convert Capacity in	Into Capacity in	Multiply by
kilograms (kg)	kilograins (kgr)	15.43
kilograins (kgr)	kilograms (kg)	0.0648
moles of $CaCO_3$	kilograms (kg)	0.10
equivalents of $CaCO_3$	kilograms (kg)	0.05

Press and hold the (←) and (↑) arrow buttons to access Level III.

Table 3 Level III History Data

Location	Range	Description
L 1	1-7	Day of week (Sun=1, Sat=7)
L 2	0-255	Days since last regeneration
L 3	1:00-12:59/0:00-23:59	Time that peak flow occurred
L4[a]	0-200/0-50.0	Peak flow gallons per minute/cubic meters (M^3) per hour since location reset
L 5	0-655360/0-6553.6	Water used today in gallons/M^3 since time of regeneration
L 6	0-655360/0-6553.6	Water used since last regeneration in gallons/M^3
L 7	0-655360/0-6553.6	Average water usage for Sunday in gallons/M^3
L 8	0-655360/0-6553.6	Average water usage for Monday in gallons/M^3
L 9	0-655360/0-6553.6	Average water usage for Tuesday in gallons/M^3
L 10	0-655360/0-6553.6	Average water usage for Wednesday in gallons/M^3
L 11	0-655360/0-6553.6	Average water usage for Thursday in gallons/M^3
L 12	0-655360/0-6553.6	Average water usage for Friday in gallons/M^3
L 13	0-655360/0-6553.6	Average water usage for Saturday in gallons/M^3
L 14	0-999990/0-99999.9	Total water used since NOVRAM test in gallons/M^3 (LSD)
L 15	0-167/0-16	Total water used since NOVRAM test in gallons/M^3 x 10^6 (MSD)

a. Press and hold SET for 5 seconds to reset.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Press and hold the (←) and (↓) arrow buttons to access Level IV.

Table 4 Level IV Parameters

#	Description of Parameter	Range of Values	Minimum Increment	Default	Notes
C1	Position 1 Cycle Time	0 min -255 min	1 min	0	Stager Cycle (P17=6 or 9)
C2	Position 2 Cycle Time	0 min -255 min	1 min	0	Stager Cycle (P17=6 or 9)
C3	Position 3 Cycle Time	0 min -255 min	1 min	0	Stager Cycle (P17=6 or 9)
C4	Position 4 Cycle Time	0 min -255 min	1 min	0	Stager Cycle (P17=6 or 9)
C5	Position 5 Cycle Time	0 min -255 min	1 min	0	Stager Cycle (P17=6 or 9)
C6	Position 6 Cycle Time	0 min -255 min	1 min	0	Stager Cycle (P17=6 or 9)
C7	Position 7 Cycle Time	0 min -255 min	1 min	0	Stager Cycle (P17=6 or 9)
C8	Position 8 Cycle Time	0 min -255 min	1 min	0	Stager Cycle (P17=6 or 9)
C9	Position 9 Cycle Time	0 min -255 min	1 min	0	Stager Cycle (P17=6 or 9)
C10	Position 10 Cycle Time	0 min -255 min	1 min	0	Stager Cycle (P17=6 or 9)
C11	Position 11 Cycle Time	0 min -255 min	1 min	0	Stager Cycle (P17=6 or 9)
C12	Position 12 Cycle Time	0 min -255 min	1 min	0	Stager Cycle (P17=6 or 9)
C13	Position 13 Cycle Time	0 min -255 min	1 min	0	Stager Cycle (P17=6 or 9)
C14	Position 14 Cycle Time	0 min -255 min	1 min	0	Stager Cycle (P17=6 or 9)
C15	Position 15 Cycle Time	0 min -255 min	1 min	0	Stager Cycle (P17=6 or 9)
d1	Sunday	0-1	1	0	0 = no day of week regen this day
d2	Monday	0-1	1	0	0 = no day of week regen this day
d3	Tuesday	0-1	1	0	0 = no day of week regen this day
d4	Wednesday	0-1	1	0	0 = no day of week regen this day
d5	Thursday	0-1	1	0	0 = no day of week regen this day
d6	Friday	0-1	1	0	0 = no day of week regen this day
d7	Saturday	0-1	1	0	0 = no day of week regen this day

Note: The number of “C” values MUST equal exactly the number of stager regeneration cycles.

Example: If the parameter “Position 5 Cycle Time” is programmed then C1 through C4 must also be programmed.

Table 5 “C” Level Program Values for Select Stager Configurations

#	48-83	51-09	51-10	51-86	59-00	59-03	58-04	58-TB
C1	BW1 Time	BW Time	BW1 Time	BW1 Time	BW1 Time	BW1 Time	BW1 Time	BW Time
C2	BW2 Time	BR/SR Time	FR1 Time	BW2 Time	Draw1 Time	FR1 Time	FR1 Time	Draw Time
C3	BW3 Time	FR Time	BW2 Time	BW3 Time	SR1 Time	BW2 Time	BW2 Time	SR Time
C4	0	Refill Time	FR2 Time	BW4 Time	FR1 Time	FR2 Time	FR2 Time	FR Time
C5	0	0	0	BW5 Time	BW2 Time	BW3 Time	BW3 Time	0
C6	0	0	0	BW6 Time	Draw2 Time	FR3 Time	FR3 Time	0
C7	0	0	0	0	Rinse2 Time	0	BW4 Time	0
C8	0	0	0	0	FR2 Time	0	FR4 Time	0
C9	0	0	0	0	0	0	0	0
C10	0	0	0	0	0	0	0	0
C11	0	0	0	0	0	0	0	0
C12	0	0	0	0	0	0	0	0
C13	0	0	0	0	0	0	0	0
C14	0	0	0	0	0	0	0	0
C15	0	0	0	0	0	0	0	0

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Table 6 Error Code Identification

Error Code	Description
1	Data stored in NOVRAM has been corrupted and is incorrect
2	Home switch (SW 2) closed when it should be open
3	Home switch (SW 2) open when it should be closed
4	One or more parameters are below the minimum value in Table I
5	System capacity less than 10 gallons or 0.1 m^3 (Capacity is set too low or Hardness is set too high)

Table 7 Installation Programmed Values Chart

Installation Date:					
"P" Value	**Description**	**Install Values**	**"C"/"d" Value**	**Description**	**Install Values**
P1	Day of week/Time of day		C1	Position 1 Cycle Time	
P2	Time of regeneration		C2	Position 2 Cycle Time	
P3	Hardness of water		C3	Position 3 Cycle Time	
P4	Not used		C4	Position 4 Cycle Time	
P5	Capacity of unit		C5	Position 5 Cycle Time	
P6	Not used		C6	Position 6 Cycle Time	
P7	Not used		C7	Position 7 Cycle Time	
P8	Not used		C8	Position 8 Cycle Time	
P9	Backwash time		C9	Position 9 Cycle Time	
P10	Rinse/Draw time		C10	Position 10 Cycle Time	
P11	Purge time		C11	Position 11 Cycle Time	
P12	Units of measure		C12	Position 12 Cycle Time	
P13	Clock Mode		C13	Position 13 Cycle Time	
P14	Calendar override		C14	Position 14 Cycle Time	
P15	Reserve type		C15	Position 15 Cycle Time	
P16	Initial average value or fixed reserve capacity		d1	Regenerate on Sunday	
P17	Operation type		d2	Regenerate on Monday	
P18	Capacity change lock out		d3	Regenerate on Tuesday	
P19	Turbine select		d4	Regenerate on Wednesday	
P20	K-factor or pulse equivalent		d5	Regenerate on Thursday	
P21	Remote regeneration switch delay		d6	Regenerate on Friday	
P22	Factory use only. Do not program.		d7	Regenerate on Saturday	

Watermart Perkasa
www.Water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Parallel Operation

The 962 Stager control can be used for twin and triple tank applications, operating in a parallel mode. Parallel systems can be implemented with up to three individual controls by using the lock-out feature. Each control will provide a lock-out signal when it is in regeneration. This lock-out signal will prevent other controls from starting a regeneration when the controls are connected as in Figure 2.

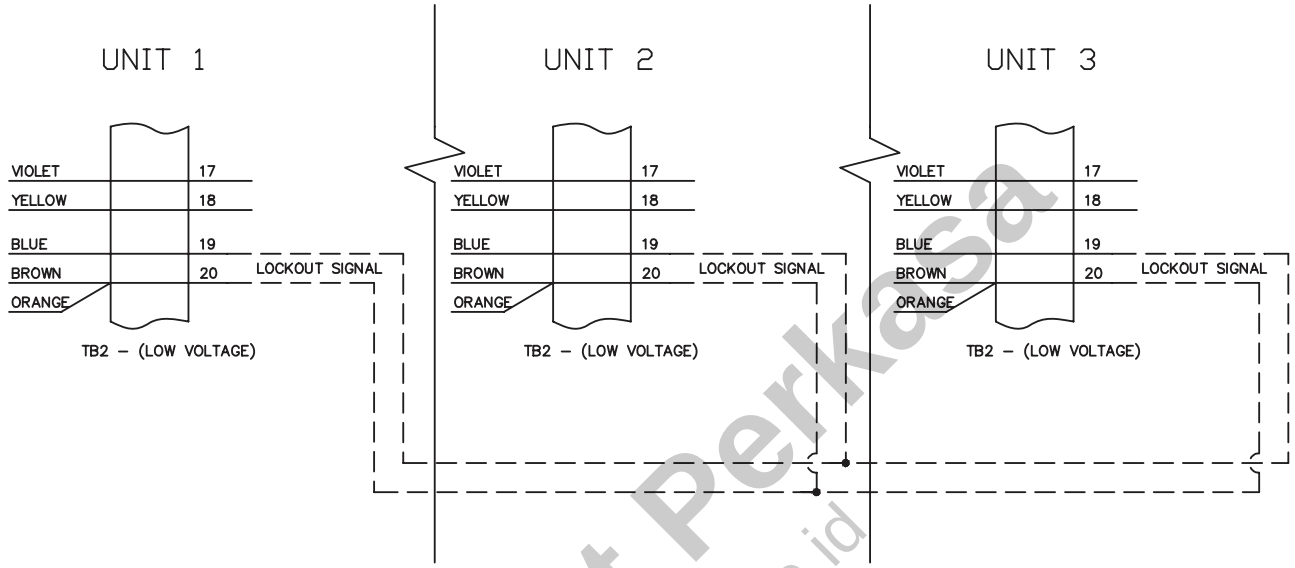


Figure 2 Parallel/Interlock Connections

NOTE: The lockout feature is void when using the relay output option.

Twin Alternating using a model 58-TA stager

The 962 Stager control can be used for Twin Alternating applications by combining a single 962 controller with a single model 58-TA Twin Alternating stager. The alternating of the system is performed by the stager and is independent of the controller. When using a model 58-TA, the “Tank in Service” is indicated by two NEMA 4 rated door-mounted lights that are operated by the stagers second auxiliary switch. **When using a model 58-TA Twin Alternating stager, P17 must be set to a 4 or 6 depending on the number of positions**.

Twin Alternating using a model 58-TB stager (Timed Brine)

The 962 Stager control can be used for Twin Alternating applications that require a timed brine draw (using 58-TR Stager). These Stagers do not use door-mounted lights to indicate the “Tank in Service”. The controller will display the “Tank in Service” in the left-most digit of the 6-digit display. It will display a 1 or 2 depending on which tank is in service. Flow is also displayed during this time. If any error condition occurs, the “Tank in Service” display will be set to a 2 by default. The controller will reset the display to the proper tank in service once a regeneration is performed on any tank. **When using a model 58-TB or 58-TR Twin Alternating stager, P17 must be set to a 9**.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Flow Sensor Connections

The 962 Stager control may be connected to a number of different flow sensing devices. Figure 3 shows the connections for the Autotrol turbine type flow sensor. Figure 4 shows the connections for the Signet flow sensor. Most of the flow sensors that are used will be wired similarly, though the wire colors may vary.

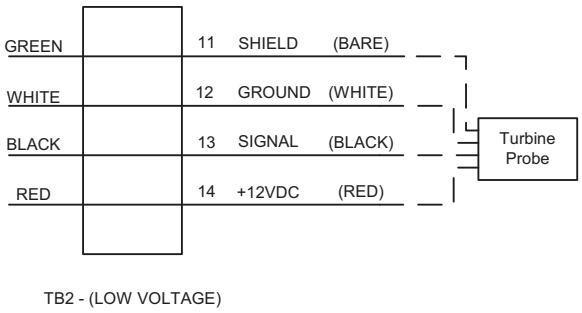


Figure 3 Autotrol Flow Sensor Connections

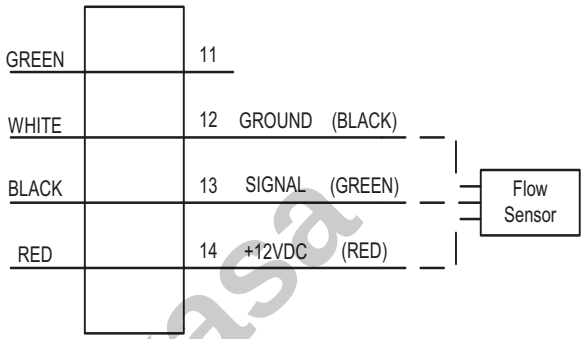


Figure 5 Fleck Flow Sensor Connections

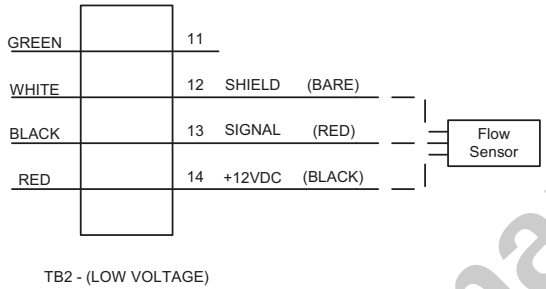


Figure 4 Signet Flow Sensor Connections

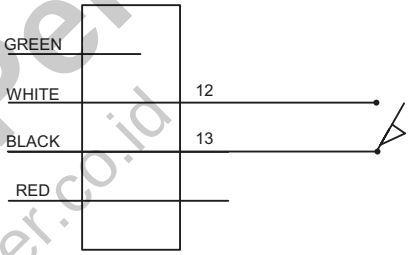


Figure 6 Pulse Transmitter 2 Wire Connection

Watermart Perkasa
www.water.co.id

AC Power Wiring

The 962 Stager controls have standard voltage configurations of 115 VAC 50/60 Hz, or 230 VAC 50/60 Hz. Power requirements must be specified when ordering. For 115 VAC jumpers are placed between terminals 1 and 3 and 2 and 4. For 230VAC jumpers are placed between terminals 2 and 3 only, Figure 5. Line voltage and neutral inputs are always on terminals 1 and 4 respectively.

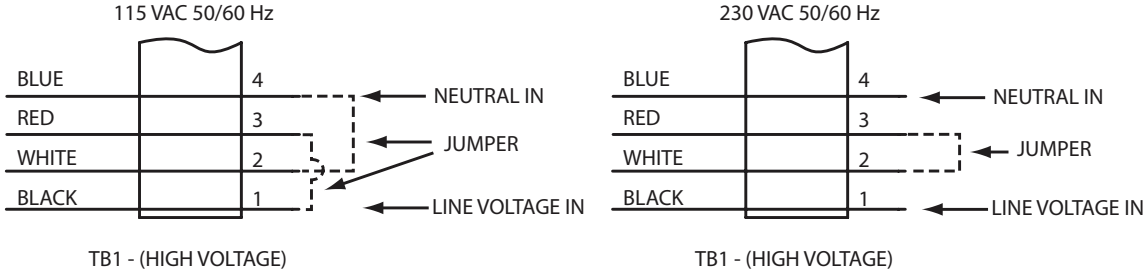


Figure 7 AC Power Connections

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Remote Regeneration

A set of terminals with a programmable delay (P21) are provided as a standard feature of the 962 control, Figure 6. This feature allows for a regeneration to be initiated from a remote location. This feature can also be used to accommodate a differential pressure switch input or any dry contact closure from external equipment. Programmable value “P21” is used to monitor this input for the amount of time that is programmed (in seconds).

P21 is the length of time (in seconds) that the remote input signal will be ignored before starting a regeneration. THE CONNECTION MUST BE A NO VOLTAGE DRY CONTACT.

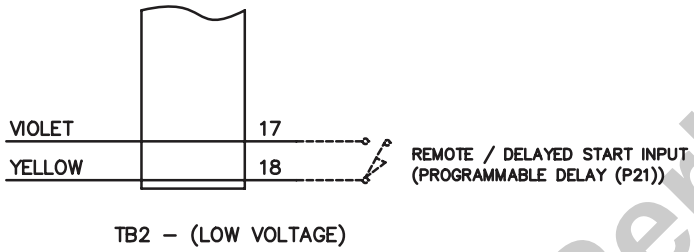


Figure 8 Remote Regeneration Start Connections

Relay Output Option

A single pole double throw (SPDT) relay may be added for outputs during Regeneration and Service mode. The relay output option is available on single unit and Twin Alternating models only. This feature may not be used however, with the parallel multi-tank systems using the lockout feature. The contacts of this relay are supplied as "Dry Contacts” (un-powered). See Figures 7 and 8 for wiring information.

NOTE: The lockout feature is void when using the relay output option.

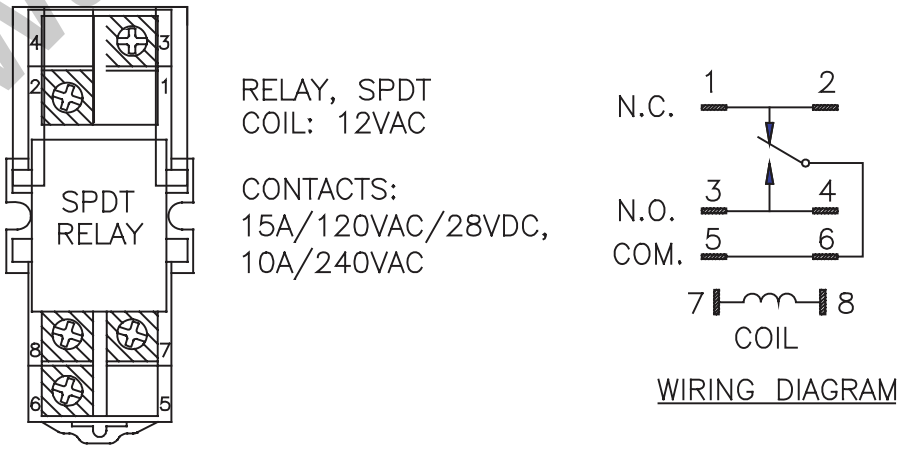


Figure 9 Relay Output Option

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

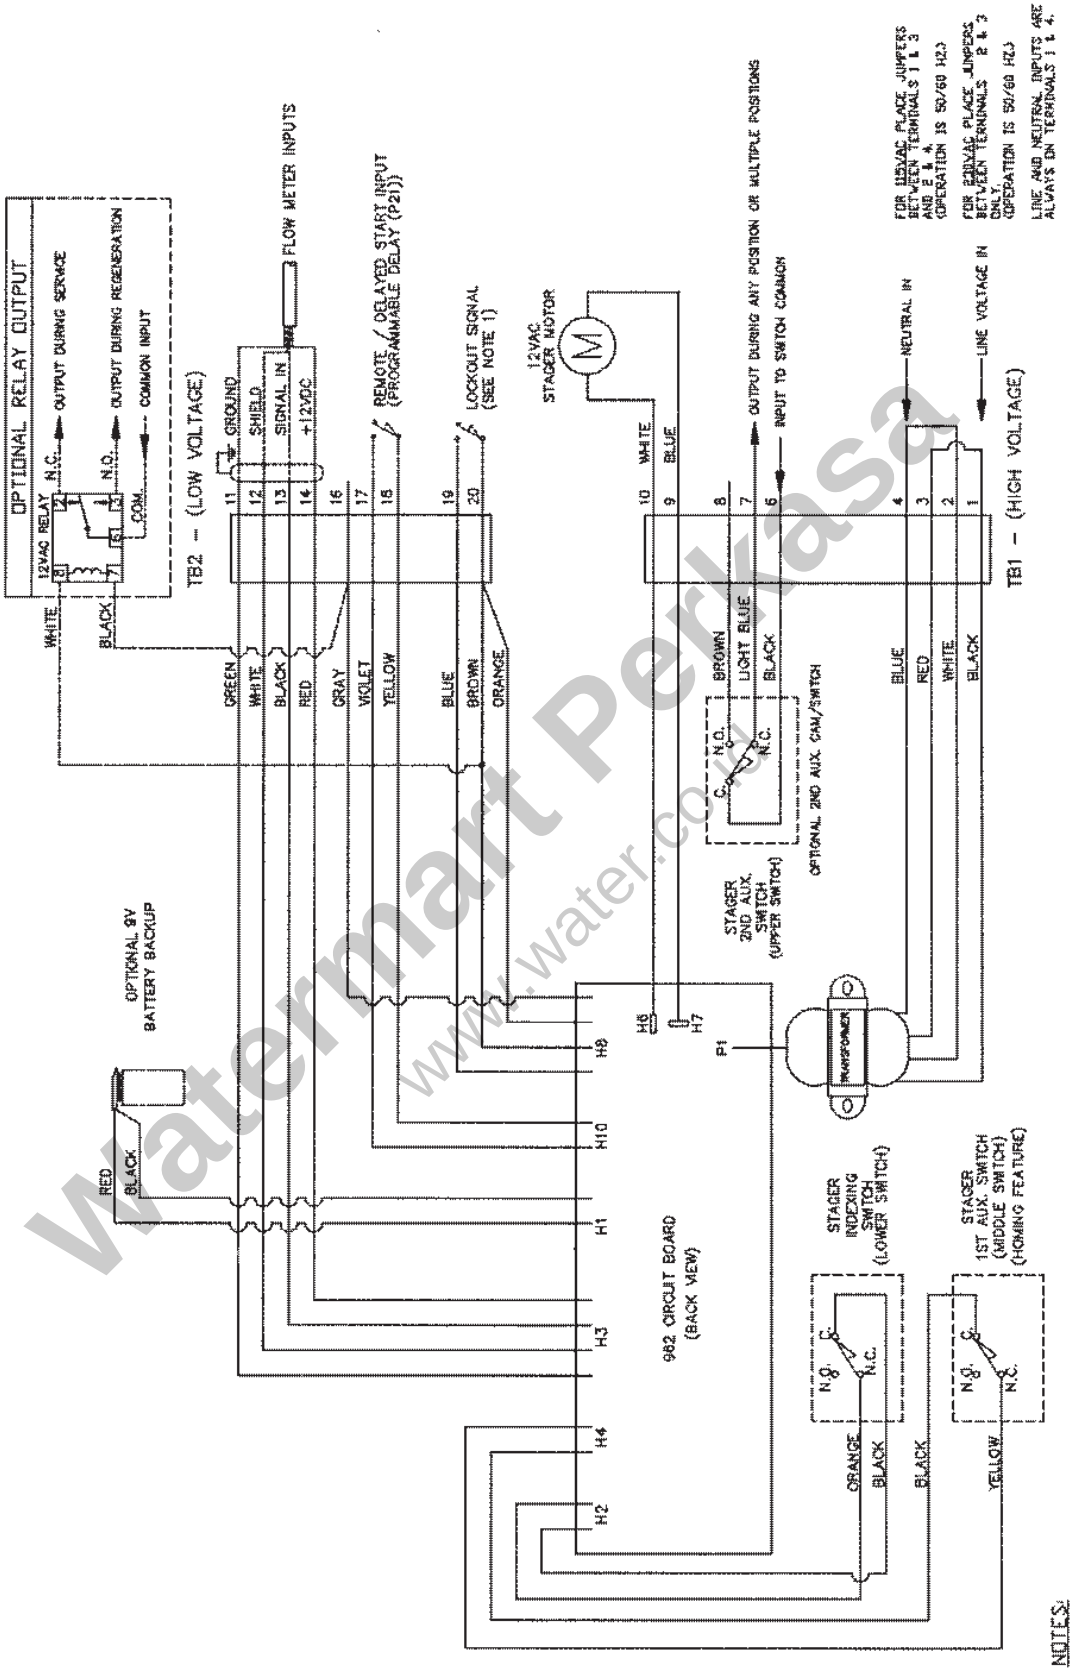


Figure 10 E948/E951 Standard Wiring Design

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Watermart Perkasa
www.water.co.id

16605 West Victor Rd. New Berlin, WI 53151
P: 262-326-0100 | www.aq-matic.com | techsupport@aq-matic.com
© 2016 AQ Matic Valve and Controls Company, Inc. All rights reserved.
All AQ Matic trademarks and logos are owned by AQ Matic or its affiliates. All other registered and unregistered trademarks and logos are the property of their respective owners. Because we are continuously improving our products and services, AQ Matic reserves the right to change specifications without prior notice. AQ Matic is an equal opportunity employer.

1076301 Rev. H MA2016

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

AQUAMATIC® NX48 AND NX51 SERIES
COMMERCIAL STAGER CONTROLLERS

FULL-FUNCTION PROGRAMMING WITH CAPABILITY TO LINK MULTIPLE STAGERS

MADE IN THE USA
OF FOREIGN & DOMESTIC PARTS



FEATURES/BENEFITS

LED Status Indicator
- Solid Blue: In Service
- Flashing Blue: Regen Queued
- Solid Green: Regen
- Flashing Green: Standby
- Solid Red: Error

Auxiliary inputs and outputs
- Remote signal start input (certain system types)
- Remote Lockout Input
- Programmable relay output/ chemical pump output

Front panel diagnostics button
- Flow rate
- Peak flow rate
- Totalizer
- Hours between last two regenerations
- Hours since last regeneration
- Adjustable volume remaining
- Valve position
- Software version

2x16 character backlit LCD display

Networks up to four stagers

Field-configurable for system types

Time of day can be automatically copied to the remaining controllers

Can be used simultaneously with time clock, meter immediate, or meter delayed regeneration types

Allows monitoring of flow and volume information in remote signal start applications

Control and stager automatically synchronize to the service position

Accepts input from a variety of flow sensors

During a power outage, critical operating information is stored in memory

Programmable regeneration types for increased flexibility

Reserve is fixed at a programmable percentage of the total capacity

Easy installation with plug-in wiring harnesses

OPTIONS

3-way universal solenoid installed

Auxiliary micro switch cam with signal in service or backwash

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Watermart Perkasa
www.water.co.id

16605 West Victor Rd. New Berlin, WI 53151

P: 262-326-0100 | www.aq-matic.com | techsupport@aq-matic.com

© 2016 AQ Matic Valve and Controls Company, Inc. All rights reserved.

All AQ Matic trademarks and logos are owned by AQ Matic or its affiliates. All other registered and unregistered trademarks and logos are the property of their respective owners. Because we are continuously improving our products and services, AQ Matic reserves the right to change specifications without prior notice. AQ Matic is an equal opportunity employer.

43037 REV F MA2017

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

NXT ELECTRONIC STAGER CONTROLLER MASTER CHART

FILL IN PROPER DESIGNATIONS TO DETERMINE PRODUCT NUMBER: **N X - T - S B**

CONTROLLER — Electronic Controller Series to be Provided
NX = NXT Stager Control

STAGER & PROGRAM — Rotary Pilot Stager to be Provided
48-00 = Softener or Filter, 6 Port (Brass)
51-06 = Softener, Timed Brine Draw & Fill, 8 Port (Brass)
51-10 = Two Tank Filter w/ Sequential Regeneration, 8 Port (Brass)
51-S0 = Softener, N.O. In/Out, N.C. All other valves, 8 Port (Brass)

COMM CABLE — CAT 6 Communication Cable to be Provided
0 = Less Communication Cable
1 = With 25 ft (7.6 m) CAT 6 Communication Cable
This cable used to connect up to 4 NXT Stager Controls
One less cable is required than number of controls in system

TRANSFORMER — Electrical transformer to be Provided
0 = Less transformer *(Customer must supply 24VAC to controller)*
T = Transformer Mounted Inside Enclosure; 24VAC, 40 VA Output
Accepts 115V, 208V, or 240V 50/60 Hz Input Voltages

1st AUX. SWITCH — First Extra Switch to be provided on Rotary Pilot Stager
S = SERVICE Return (Homing) on all NXT Stager Controls

2nd AUX. SWITCH — Second Extra Switch to be provided on Rotary Pilot Stager
0 = NONE
*A to R = CAM POSITION Switch is to be active (I & O not used)
1 = 51-10 Stager with Notch in both Backwash Positions
2 = 51-10 Stager with Notch in both Rinse Positions
* Use a Letter to indicate Cam position Not a Number.

PRESSURE — Program of Stager
0 = STANDARD (Vent to open)
1 = INVERTED (Pressure to open)

SOLENOID — Used to keep a tank in stand-by position
0 = NONE
S = Solenoid included
Only Used for systems:
Twin Alternating System 7
Multiple Tank Alternating System 9
Demand Recall (Progressive Flow) System 14

STAGER REVISION
B = 48 and 51 Series Stagers

REV	ECO DESCRIPTION	BY/DATE
A	Initial Release	J. Josetti
B	Transformer Update	J. Josetti 23-May-17

Watermart Perkasa
www.water.co.id

6/1/2017 2:54 PM

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Watermart Perkasa
www.water.co.id

16605 West Victor Rd. New Berlin, WI 53151
P: 262-326-0100 | www.aq-matic.com | techsupport@aq-matic.com
© 2016 AQ Matic Valve and Controls Company, Inc. All rights reserved.
All AQ Matic trademarks and logos are owned by AQ Matic or its affiliates. All other registered and unregistered trademarks and logos are the property of their respective owners. Because we are continuously improving our products and services, AQ Matic reserves the right to change specifications without prior notice. AQ Matic is an equal opportunity employer.

4510677 REV B

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

NX48 and NX51 NXT Stager Controller

Service Manual



TABLE OF CONTENTS

NXT STAGER DIMENSIONS 2
SYSTEM SPECIFICATIONS 48ES AND 51ES SERIES.....2
SYSTEM DEFINITIONS 3
SYSTEM OPERATION IN SERVICE (SYSTEM 14-DEMAND).....4
TIMER DISPLAY FEATURES.....5
NETWORK/COMMUNICATION CABLES & CONNECTIONS 5
TIMER OPERATION 6
MASTER PROGRAMMING MODE FLOW CHART 7
USER PROGRAMMING MODE FLOW CHART 9
DIAGNOSTIC PROGRAMMING MODE FLOW CHART.....9
PLUMBING DIAGRAMS.....11
SOLENOID USE.....14
STAGER CONTROLLER, 48ES, NEMA 4 24V/50-60Hz ASSEMBLY 15
STAGER CONTROLLER, 51ES, NEMA 4 24V/50-60Hz ASSEMBLY 16
WIRING DIAGRAM 48/51ES STAGER CONTROLLER 17
TROUBLESHOOTING 18
SERVICE ASSEMBLIES 19


IMPORTANT PLEASE READ:

- The information, specifications and illustrations in this manual are based on the latest information available at the time of printing. The manufacturer reserves the right to make changes at any time without notice.
- This manual is intended as a guide for service of the controller only. System installation requires information from a number of suppliers not known at the time of control manufacture. This product should be installed by a plumbing professional.
- This product must be installed in compliance with all state and municipal plumbing and electrical codes. Permits may be required at the time of installation.
- If daytime operating pressure exceeds 80 psi, nighttime pressures may exceed pressure limits. A pressure reducing valve must be installed if pressure exceeds 125 psi.
- Do not install the unit where temperatures may drop below 32°F (0°C) or above 110°F (43°C).
- Do not place the unit in direct sunlight. Black units will absorb radiant heat increasing internal temperatures.
- Do not strike the controller or any of the components.
- Warranty of this product extends to manufacturing defects. Misapplication of this product may result in failure to properly condition water, or damage to product.
- A prefilter should be used on installations in which free solids are present.
- Correct and constant voltage must be supplied to the controller to maintain proper function.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

NXT STAGER DIMENSIONS

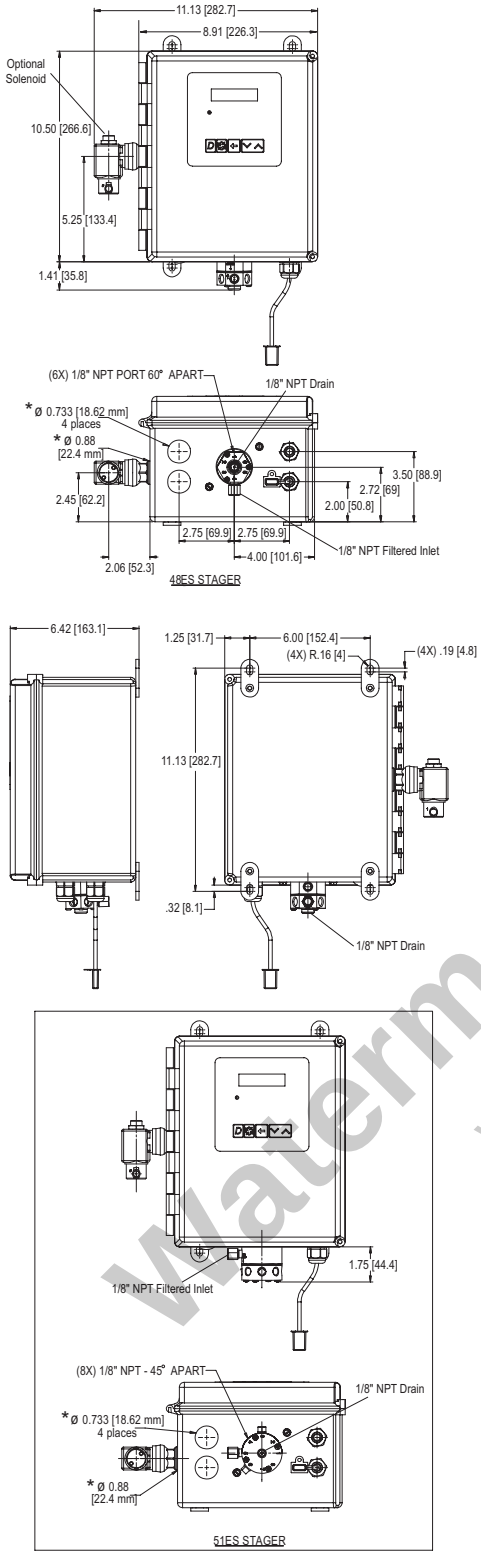

***NOTE: Drill as required. These holes will only be drilled at factory if required.**

Figure 1

SYSTEM SPECIFICATIONS 48 AND 51 NXT SERIES

Generic Meter Guidelines

- Open collector output
- Pulse rate generated must not exceed 100 pulses per second (100 Hz), or 6,000 pulses per minute
- Support for meter outputs in the range of 1-255 gallons (25.5 m^3) for every 1-255 pulses
  Example: 35 gallons/100 pulses
  (=3.5 gallons/10 pulses, = 0.35 gallons/1 pulse)
- Meter must operate at 5 VDC

Electrical Rating

- 115 VAC ±20% input, 24 VAC output w/40 VA (maintain input voltage in this range)
- 230 VAC ±20% input, 24 VAC output w/40 VA (maintain input voltage in this range)
- Max Rated Power 15W

Humidity

- 95% RH, non-condensing

Temperature

- Maximum control fluid temperature 140°F (60°C)
- Operate where ambient temperatures are above 32°F and below 110°F

Pressure

- Maximum control fluid pressure 125 psi (8.5 bar)
- Control fluid can be either water or air and must be equal to or greater than system pressure.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

SYSTEM DEFINITIONS

System Number	System Description	# of Tanks/ Controls	Type	Service Outlet Valve Controlled by...	Operation Discussion
4	Single Unit	1	Time Clock: No Meter Immediate: One Meter Delayed: One Meter Remote Signal Start: No Meter	Stager (no solenoid required)	Single tank configuration. During Regeneration no water available to service unless optional bypass valve #2A installed.
5	Interlocked	2, 3, or 4	Immediate: All Meters Remote Signal Start: No Meter	Stager (no solenoid required)	All tanks in parallel supplying treated water. Each unit in the system will have its own flow meter/sensor input. The control will delay the start of Regeneration if another unit is already in Regeneration. Once that unit has completed a Regeneration cycle, and has returned to Service,the unit with longest regeneration queue time will begin Regeneration. No more than one unit will be in Regeneration at a time.
6	Series Regeneration	2, 3, or 4	Immediate: One Meter Delayed: One Meter Remote Signal Start: No Meter	Stager (no solenoid required)	All tanks in parallel supplying treated water. Only #1 control will monitor flow meter/ sensor input. When a regeneration is required for the system, it will regenerate valve address #1 first, immediately followed by #2, then #3, then #4 if installed. No more than one unit will be in Regeneration at a time.
7	Twin Alternating	2	Immediate: One Meter Remote Signal Start: No Meter	Solenoid (plug stager port 2)	One tank online supplying treated water, one tank in Standby. Only #1 control will monitor its flow meter/sensor input. Regeneration of a unit will begin after the other control has left Standby and returned to Service. When the Regeneration cycle is complete, the regenerated unit will enter Standby. Standby on each tank is controlled by a solenoid connected to the service outlet valve of that tank.
9	Multiple Tank Alternating	2, 3, or 4	Immediate: All Meters Remote Signal Start: No Meter	Solenoid (plug stager port 2)	One, two, or three tanks online supplying treated water, one tank in Standby. Meter/ sensor input is required on each tank. Regeneration of a unit will begin after the other control has left Standby and returned to Service. When the Regeneration cycle is complete, the regenerated unit will enter Standby. Standby on each tank is controlled by a solenoid connected to the service outlet valve of that tank.
14	Demand Recall	2, 3, or 4	Immediate: All Meters	Solenoid (plug stager port 2)	Meter input is required on each tank. Unit #1 will begin In Service with #2, #3, and #4 (if installed) will begin in Standby. At least one unit is In Service at all times. When flow rate to the Primary Service Unit increases to a user specified rate, the next unit in sequence will move from Standby to Service. As the flow rate falls below the user specified rate subsequent tanks will return to Standby. When the Primary Service Unit regenerates, the next unit in sequence will become the new Primary Service Unit. As each units capacity is reached the controller will initiate a Regeneration of that unit. Depending on the number of units in the system, and flow rate demand the regenerated unit will then be placed either into Standby or Service. Only one unit will be in Regeneration at a time.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

SYSTEM OPERATION IN SERVICE (SYSTEM 14-DEMAND)


The system operates as part of a multi-tank regeneration system. This example applies to either a 2, 3 or 4 tank system.

Each tank in the system will have an active flow meter input, even in Standby.


The number of tanks In Service depends on the flow rate.

Examples of a Four-Unit System:


1. One Tank is In Service at all times (the "primary tank").

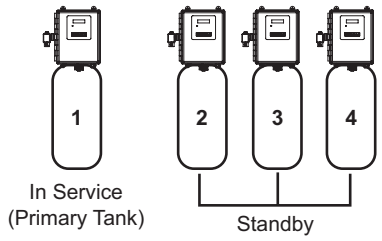


2. The total flow rate to the primary tank increased past the first trip point programmed rate. The flow stayed past the trip point delayed time. The next tank (least volume remaining) changes from Standby to In Service. This then splits the total flow between two meters.

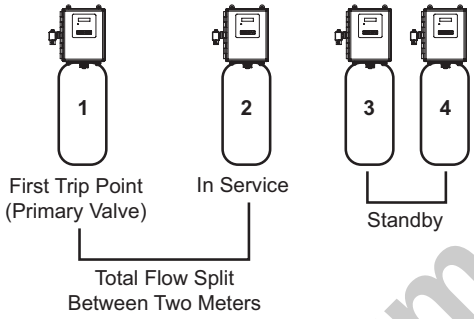


3. The flow rate demand decreased below the first trip point. The tank returns to Standby.

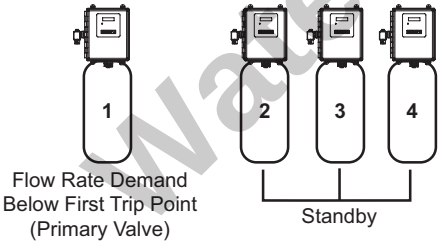


4. Total flow rate demand increased past a second trip point programmed rate. The second and third tank (least volume remaining) changes from Standby to In Service. The total flow is split between the three meters.

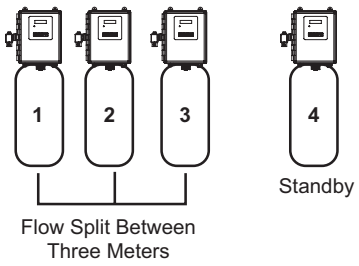

5. The third tank returns to Standby as demand decreases past the second trip point.

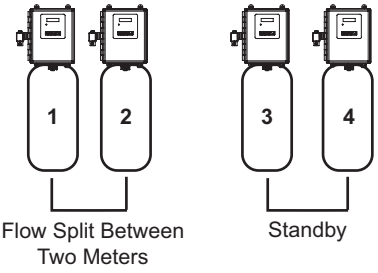


6. Tanks return to Standby due to decreased total flow rate and trip points programmed. The tank with the most remaining volume will be the first to go into Standby.

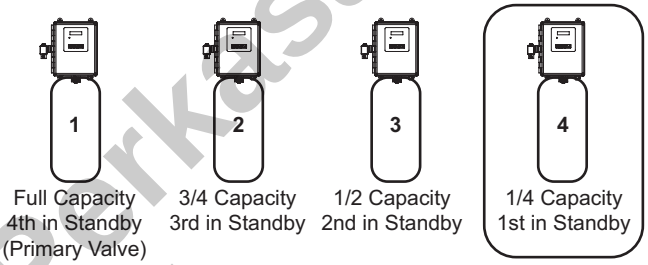

7. The primary tank regenerates. The next tank with the least remaining volume becomes the new primary tank. The tank with the next least volume remaining will be the first trip point programmed rate. Tanks continue operating in this order.

System Operation in Regeneration:

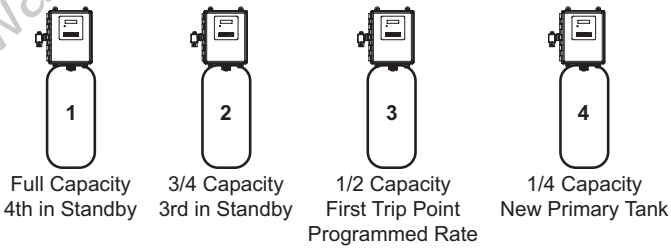

If two tanks are In Service and both reach Volume Remaining = 0, the other two tanks will shift from Standby to In Service. The lead tank with Volume Remaining = 0 will start Regeneration. The second tank with Volume Remaining = 0 will enter Standby. If flow increases past the trip point a third tank needs to enter In Service. The tank in Standby with Volume Remaining = 0 will shift into In Service to maintain a steady flow. Operating for extended periods in this mode may degrade the water quality.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

TIMER DISPLAY FEATURES

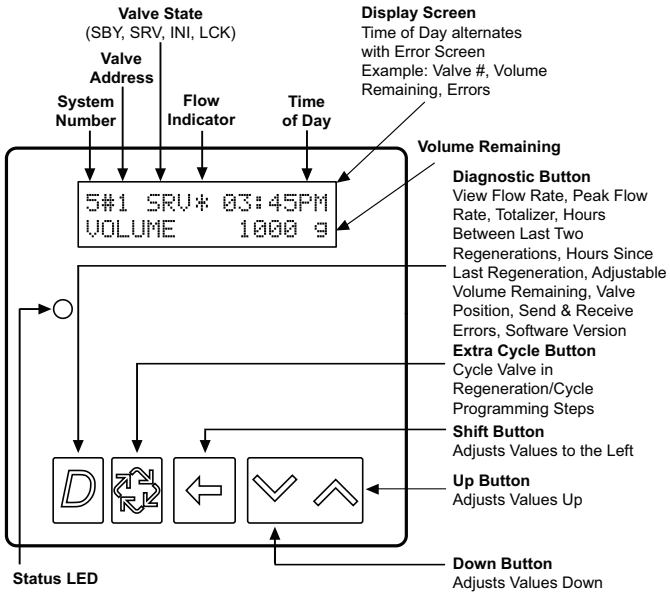


Figure 1

Valve State

INI (Initializing) - INI will display on the screen for 30 to 45 seconds when initializing after a power failure reset or programming.

RGQ (Regeneration Queued) -RGQ indicates that the reserve has been entered in a delayed system and regeneration has been queued. When in the main screen, press the Extra Cycle button to toggle service (SRV) with RGQ.

Service (SRV) - SRV will display when the unit is In Service.

LCK (Lock) - Lock will be displayed when contact closure is applied across the interlock terminals on the circuit board. See the “Network/Communication Cables & Connections” section of this manual.

LED Status Lights

Blue LED - Illuminates while the unit is In Service and no errors exist. The unit will always be In Service unless a regeneration trigger has occurred (green LED light will be displayed). A blinking blue light indicates the timer is In Service, and queued for regeneration.

Green LED - Illuminates when the unit is in Regeneration mode. A blinking green light indicates the timer is in Standby, and not in Regeneration.

Red LED- Illuminates when there is an error.

Flow Indicator

A rotating line (appearing as a rotating star shape) will display on the screen when flow is going through the meter.

NETWORK/COMMUNICATION CABLES & CONNECTIONS

Use a CAT5 Network/Communication cable.

Connect the network/communication cable to either port before programming.

The maximum cable length between timers is 100 feet.

Connect units together from one communication port to the next communication port. The order is not important.

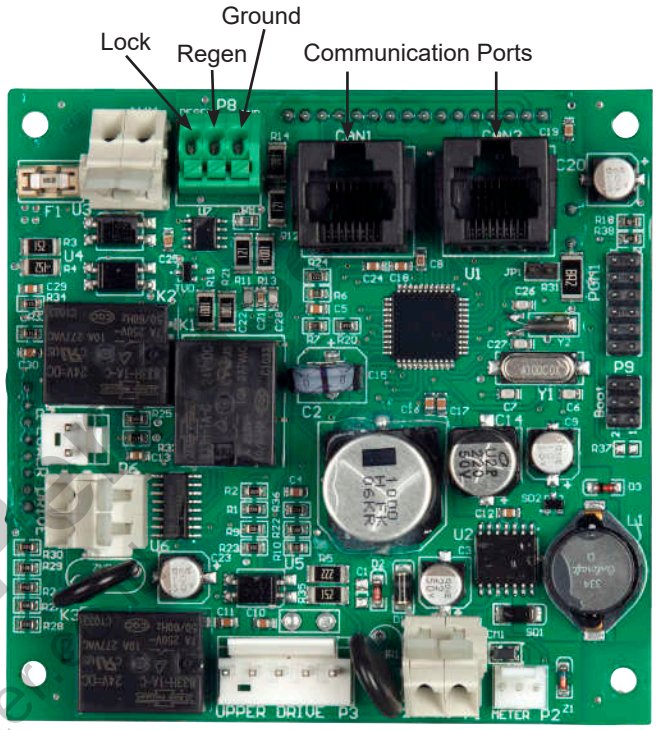


Figure 2 Current NXT Circuit Board

Watermart PT
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

TIMER OPERATION

Set Time of Day


Hold the Up or Down button to change time. While in time change mode press Shift to adjust next digit over. On multiple tank systems change time on #1 control only. All other controls in system will mirror the time on control #1.

Manually Initiating a Regeneration

1. When timer is In Service or Stand By, press the Extra Cycle button on the main screen for five (5) seconds to force a manual regeneration if another unit is not in Regeneration.
2. The timer reaches Regeneration cycle Step #1.
3. Press the Extra Cycle button once to advance valve to the next Regeneration cycle.

Timer Operation During Regeneration

In the Regeneration cycle step display, the timer shows the current Regeneration cycle number the valve is in, or has reached, and the time remaining in that step. Once all regeneration steps are complete the timer returns to In Service and resumes normal operation.

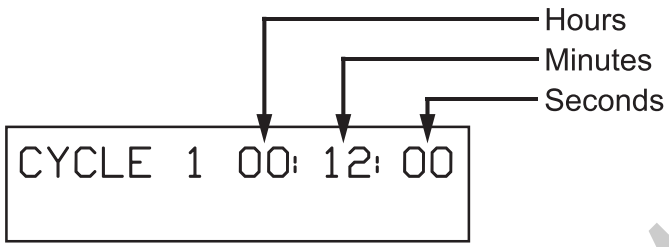

Example: 12 minutes remaining in Cycle 1

Press the Extra Cycle button during a Regeneration Cycle to immediately advance the valve to the next cycle and resume normal timing.

Flow Meter Equipped Timer

During normal operation the Time of Day screen alternates with the Error screen (if errors are present).

As treated water is used, the Volume Remaining display counts down from the calculated system capacity to zero. When zero is reached a Regeneration cycle begins if no other units are in regeneration.

Timer Operation During Programming

The timer enters the Program Mode in Standby or Service Mode as long as it is not in regeneration. While in the Program Mode the timer continues to operate normally monitoring water usage. Timer programming is stored in memory permanently.

Timer Operation During A Power Failure

During a power failure all timer displays and programming are stored for use upon power re-application. The timer retains all values, without loss. The timer is fully inoperative and any calls for regeneration are delayed. The timer, upon power re-application, resumes normal operation from the point that it was interrupted.

NOTE: A flashing Time of Day display indicates a power outage. Hold the Up or Down button to reset time.

Remote Lockout

The timer does not allow the unit/system to go into Regeneration until the regeneration lockout input signal to the unit is cleared. This requires a contact closure to activate the lockout. The recommended gauge wire is 20 with a maximum length of 500 feet.

Regeneration Day Override Feature

If the Day Override option is turned on and the actual number of days since last regeneration exceeds the set regeneration day override value, the Regeneration cycle starts. If other units are in regeneration, it is added to a regeneration queue. This occurs regardless of the remaining volume available.

⚠ WARNING: This unit is not designed to drive/power external devices. Transformer must be grounded. Ground wire must be terminated to the back plate where grounding label is located.

Auxiliary Relay Output

The Auxiliary Relay Output on the circuit board can be programmed to be closed during a window of time within the regeneration sequence. The Aux Relay Output Start time sets the turn-on time referenced to the start of regeneration. The Aux Relay Output End time sets the turn-off time referenced to the start of regeneration. The Auxiliary Relay Output shares the same relay as the Chemical Pump Output. See wiring diagram for connection information.

Chemical Pump Output

When the Chemical Pump Output feature is enabled, the control will calculate volume of water used and close the relay when the set CPO Aux Relay Volume is reached. Once activated, the relay will stay closed for the amount of time set in CPO Aux Relay Time. The Chemical Pump Output only functions while in service, and the CPO volume is reset to zero each regeneration. The Chemical Pump Output shares the same relay as the Auxiliary Relay Output. See wiring diagram for connection information.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

MASTER PROGRAMMING MODE FLOW CHART

CAUTION Before entering Master Programming, please contact your local professional water dealer.

When the Master Programming Mode is entered, parameters can be set to make the timer(s) function as needed.

NOTE: Depending on current option settings, some displays cannot be viewed or set.

Entering Master Programming Mode

1. Press and hold the Shift and Up buttons for 5 seconds.

   OR

2. Set the time of day display to 12:01 PM or 12:01HR. Press and hold Up or Down buttons to set the time. Then press the Up and Down buttons at the same time for 5 seconds.

Exiting Master Programming Mode


1. Press the Extra Cycle button once per display until all are viewed. Master Programming Mode is exited and the normal display screen appears.
2. To exit the Master Programming Mode without saving changes, press the Diagnostic button.


NOTE: If no keypad activity is made for 5 minutes while in the Master Programming Mode, or if there is a power failure, no changes will be saved, and the unit will go back to the main display screen.

Resets

Soft Reset: Press and hold the Up and Down buttons for 25 seconds until 12:00PM (or 12:00HR) appears. This resets all parameters except for the flow meter totalizer volume.

Master Reset: Hold the Extra Cycle button while powering up the unit. This resets all of the parameters in the unit. Check and verify the choices selected in Master Programming Mode.

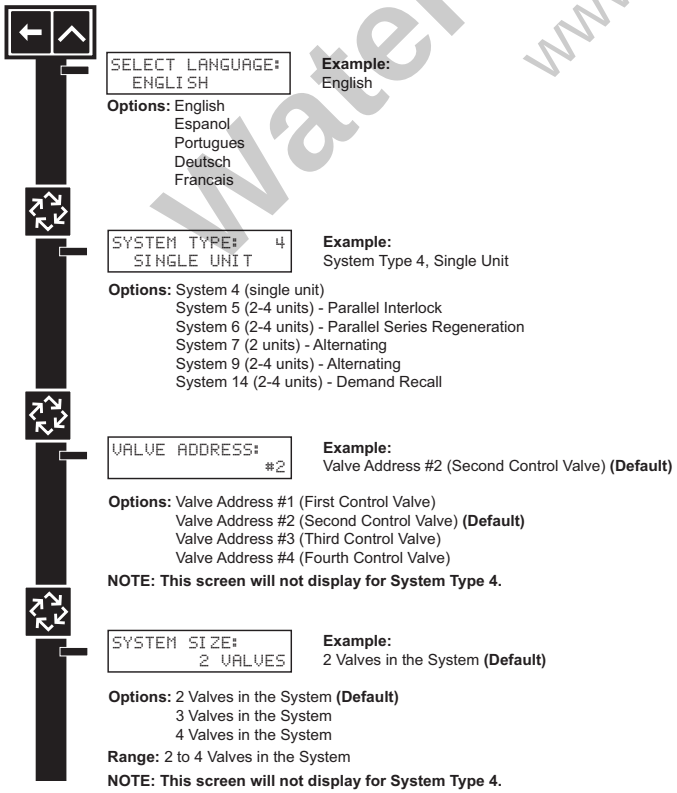

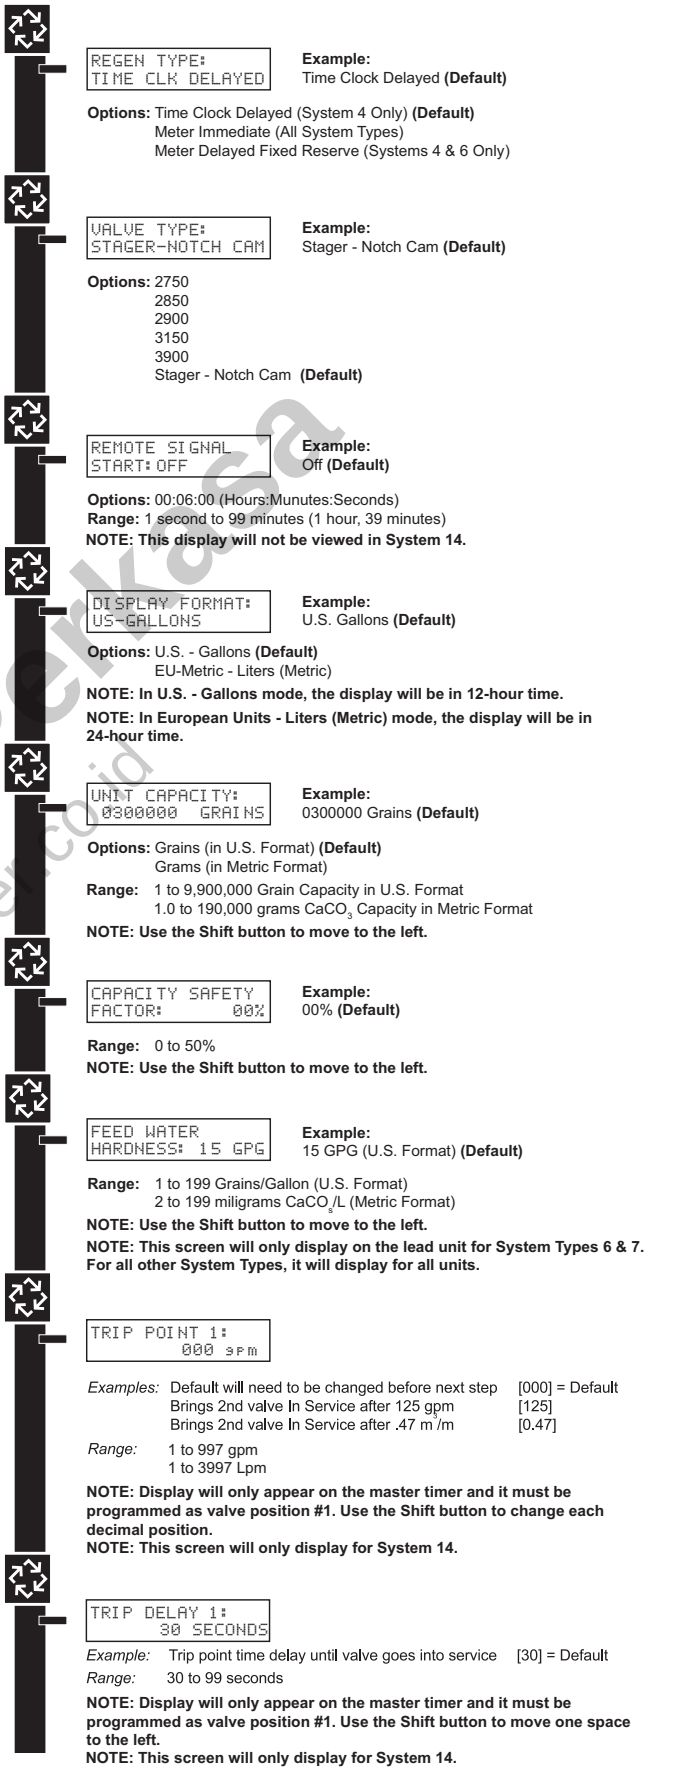

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

MASTER PROGRAMMING MODE FLOW CHART *continued*

TRIP POINT 2:
gpm

Examples: Brings 3rd valve In Service after 250 gpm [250]
Brings 3rd valve In Service after .95 m³/m [0.95]

Range: 2 to 998 gpm
1 to 3997 Lpm

NOTE: Display will only appear on the master timer and it must be programmed as valve position #1. System size must be 3 or 4 to appear. Use the Shift button to move one space to the left.
NOTE: This screen will only display for System 14.

TRIP DELAY 2:
30 SECONDS

Example: Trip point time delay until valve goes into Service [30] = Default

Range: 30 to 99 seconds

NOTE: Display will only appear on the master timer and it must be programmed as valve position #1. System size must be 3 or 4 to appear. Use the Shift button to move one space to the left.
NOTE: This screen will only display for System 14.

TRIP POINT 3:
gpm

Examples: Brings 4th Valve In Service after 350 gpm [350]
Brings 4th Valve In Service after 1.32 m³/m [1.32]

Range: 3 to 999 gpm
1 to 3997 Lpm

NOTE: Display will only appear on the master timer and it must be programmed as valve position #1. System size must be 4 to appear. Use the Shift button to move one space to the left.
NOTE: This screen will only display for System 14.

TRIP DELAY 3:
30 SECONDS

Example: Trip point time delay until valve goes to Service [30] = Default

Range: 30 to 99 seconds

NOTE: Display will only appear on the master timer and it must be programmed as valve position #1. System size must be 4 to appear. Use the Shift button to move one space to the left.
NOTE: This screen will only display for System 14.

REGENERATION DAY
OVERRIDE: OFF

Example:
Off **(Default for Meter)**
On **(Default for Time Clock)**

REGENERATION DAY
OVERRIDE: 01 DAYS

Example:
1 Day

Options: Off **(Default for Meter)** or On **(Default for Time Clock)**

Range: 1 to 99 Days

REGENERATION
TIME: 02:00AM

Example:
2:00 A.M. **(Default)**

Options: A.M. (U.S. Format)
HR (Metric Format)

NOTE: Regeneration time will not appear unless Regeneration Day Override is on.

CYCLE 1 00:10:00

Example: Backwash
00:10:00 **(Default 48-00 Stager & 51-09 Stager)**
(Hours:Minutes:Seconds)

CYCLE 2 01:00:00

Example: Brine
01:00:00 **(Default 48-00 Stager & 51-09 Stager)**
(Hours:Minutes:Seconds)

Options: 01:00:00 for Conditioner for the 48-00 Stager & 51-09 Stager **(Default)**
00:00:00 for Filter for the 48-00 Stager

CYCLE 3 00:10:00

Example: Fast Rinse
00:10:00 **(Default 48-00 Stager & 51-09 Stager)**
(Hours:Minutes:Seconds)

CYCLE 4 OFF

Example:
Off **(Default 48-00 Stager)**

CYCLE 4 00:12:00

Example: Refill
00:12:00 **(Default 51-09 Stager)**
(Hours:Minutes:Seconds)

CYCLE 5 OFF

Example:
Off **(Default 51-09 Stager)**

NOTE: This screen will only display when cycle 4 is not OFF.

AUXILIARY RELAY:
DISABLED

Example:
Auxiliary Relay is Disabled

Options: Enabled
Disabled **(Default)**

AUX RELAY OUTPUT
START 1 00:00:00

Example:
Auxiliary Relay Output Start 1 at
0 hours, 0 minutes, & 0 seconds

Range: 00:00:00 to 18:00:00

NOTE: Only displayed if Auxiliary Relay is enabled in previous screen. Auxiliary Relay will only display if Chemical Pump is OFF for System Types 6 & 7.

AUX RELAY OUTPUT
END 1 00:00:00

Example:
Auxiliary Relay Output End 1 at
0 hours, 0 minutes, & 0 seconds

Range: 00:00:00 to 18:00:00

CHEMICAL PUMP:
DISABLED

Example:
Chemical Pump is Disabled

Options: Enabled
Disabled **(Default)**

NOTE: This screen will only display on the lead unit for System Types 6 & 7. For all other System Types, it will display for all units.

CPO AUX RELAY
VOLUME: 000 9

Example:
Energize Chemical Pump relay every 50 gals (50)
Energize Chemical Pump relay every 200 L (200)

Range: 1 to 999 gallons in U.S. Format
1 to 9999 L in Metric Format

CPO AUX RELAY
TIME: 00:00:00

Example:
Each time chemical pump relay is on, run for
30 seconds (00:00:30)

Range: 00:00:00 to 02:00:00

FLOW METER:
1.0 PADDLE

Example:
1.0 Paddle Flow Meter

Options: 1.0 Paddle
1.0 Turbine
1.5 Paddle
1.5 Turbine
2.0 Paddle
3.0 Paddle
Generic

NOTE: Default flow meter type is based on the valve type. This screen will only display on the lead unit for System Types 6 & 7. All other system types it will display for all units.

MAXIMUM FLOW
RATE: 0000 gpm

Example:
Maximum Flow Rate of 0 gpm

Range: 20 - 2000 gpm (U.S. Format)
20 - 2000 Lpm (Metric Format)

NOTE: Only displayed if "Generic" is chosen for the flow meter.

ADD 01 GALLONS
EVERY 001 PULSES

Example:
Add 1 Gallon for Each Pulse in U.S. Format

Options: Gallons (U.S. Format)
Liters (Metric Format)

Range: 1 - 99 Gallons (U.S. Format)
0.1 - 09.9 L (Metric Format)
Pulses: 1 - 99

NOTE: Only displayed if "Generic" is chosen for the flow meter.

PROGRAMMING UNIT
PLEASE WAIT...

Example:
Master Programming Mode is Exiting


Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

USER PROGRAMMING MODE FLOW CHART

Entering User Programming Mode


Hold the Up and Down buttons for 5 seconds.

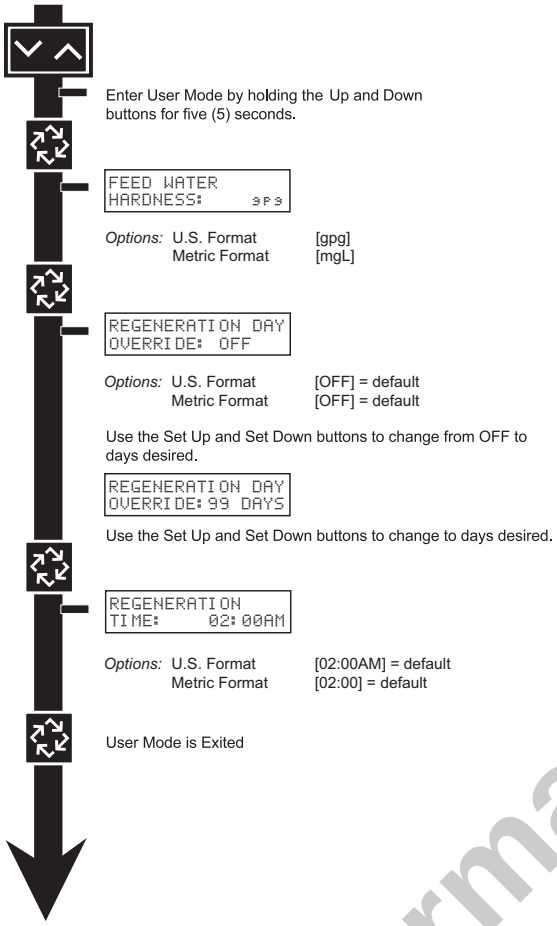

DIAGNOSTIC PROGRAMMING MODE FLOW CHART

Entering Diagnostic Programming Mode

1. Push and release the "D" button.
2. Press the Extra Cycle button once per display until all displays are viewed and Normal Display is resumed.
3. Push and release the"D" button at anytime during diagnostic mode and the timer will exit the mode.
4. Depending on the current controller programming, certain displays may not be able to be viewed or set.

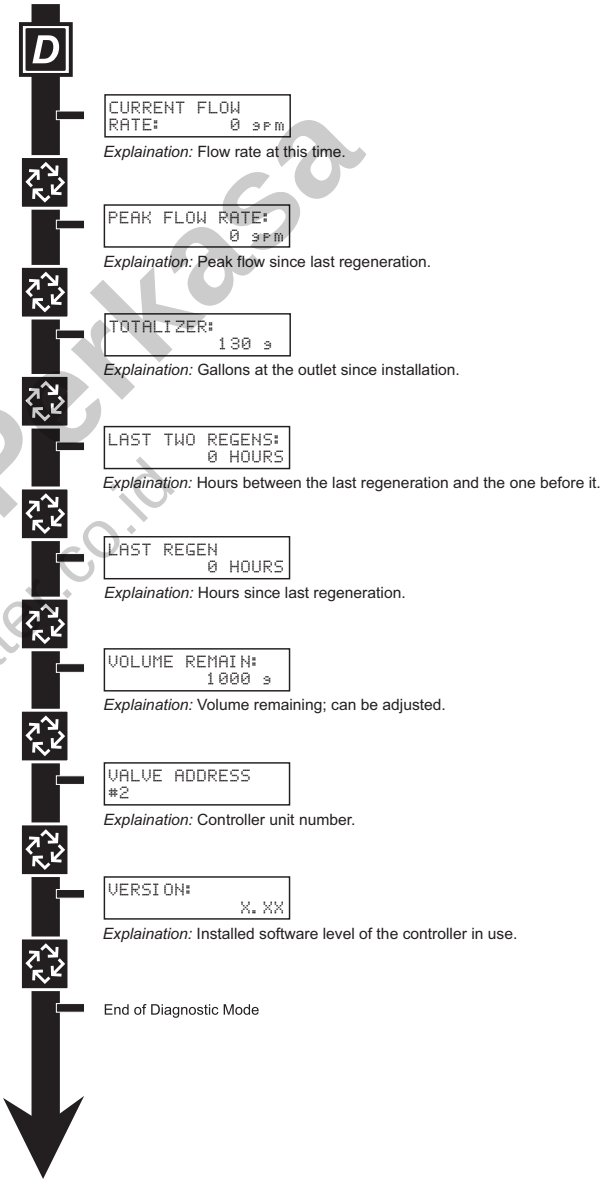

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

NXT Multi Language
Programming Parameters and Ranges

System Type	4 Time Clock	4 Metered Immediate	4 Metered Delayed	5 Interlock				6 Series				7 Alternating		9 Alternating				14 Demand Recall				Programming Parameter Ranges	
																						Gallons	Liters
Valve Address				1	2	3	4	1	2	3	4	1	2	1	2	3	4	1	2	3	4	1 thru 4	
Select Language	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	English, Espanol, Portugues, Deutsch, Francais	
System Size				x				x				x		x				x				1 thru 4	
Regen Type	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	Time Clock, Metered Delayed, Metered Immediate	
Valve Type	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	2750, 2850, 2900, 3150, 3900, Stager	
Regenerant Flow	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	Downflow, Upflow, Upflow Fill First	
Remote Signal Start	x	x	x	x	x	x	x	x				x		x	x	x	x					Off, 00:00:01 - 01:39:00	
Display Format	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	US - Gallons	EU - Metric-Liters
Unit Capacity		x	x	x	x	x	x	x				x	x	x	x	x	x	x	x	x	x	1 - 9900000 Grains	1 - 198000 gCaCO3
Capacity Safety Factor		x	x	x	x	x	x	x				x	x	x	x	x	x	x	x	x	x	0- 50%	
Feed Water Hardness		x	x	x	x	x	x	x				x	x	x	x	x	x	x	x	x	x	1 - 199 Grains/Gallons	1 - 1999 mgL
Trip Point 1																		x				0 - 997gpm	0 - 3997 Lpm
Trip Delay 1																		x				30 - 99 Seconds	30 - 99 Seconds
Trip Point 2																		x				Trip Point 1 + 1 - 998 gpm	Trip Point 1 + 1 - 3998 Lpm
Trip Delay 2																		x				30 - 99 Seconds	30 - 99 Seconds
Trip Point 3																		x				Trip Point 2 + 1 - 999 gpm	Trip Point 2 + 1 - 3999 Lpm
Trip Delay 3																		x				30 - 99 Seconds	30 - 99 Seconds
Regeneration Day Override	x	x	x	x	x	x	x	x				x		x	x	x	x	x	x	x	x	Off, 1 - 99	
Regeneration Time	x	o	o	o	o	o	o	o				o	o	o	o	o	o	o	o	o	o	12:00 a.m. - 11:59 p.m.	00:00 - 23:59 Hour
Cycle 1	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	00:00:00 - 04:00:00	
Cycle 2	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	Off, 00:00:00 - 04:00:00	
Cycle 3	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	Off, 00:00:00 - 04:00:00	
Cycle 4	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	Off, 00:00:00 - 04:00:00	
Cycle 5	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	Off, 00:00:00 - 04:00:00	
Auxiliary Relay	x	x	x	x	x	x	x	u	x	x	x	u	x	x	x	x	x	x	x	x	x	Enabled, Disabled	
Aux Relay Output Start	c	c	c	c	c	c	c	c	c	c	c	c	c	c	c	c	c	c	c	c	c	00:00:01 to Total Regeneration Time - 1	
Aux Relay Output End	c	c	c	c	c	c	c	c	c	c	c	c	c	c	c	c	c	c	c	c	c	Start Time + 1 to Total Regeneration Time	
emical Pump		x	x	x	x	x	x	u				u		x	x	x	x	x	x	x	x	Enabled, Disabled	
CPO Aux Relay Volume		c	c	c	c	c	c	c				c		c	c	c	c	c	c	c	c	1 - 999 gallons	0001 - 9999 Liters
CPO Aux Relay Time		c	c	c	c	c	c	c				c		c	c	c	c	c	c	c	c	00:00:01 - 02:00:00	00:00:01 - 02:00:00
w Meter		x	x	x	x	x	x	x				x		x	x	x	x	x	x	x	x	1" 1.5" Paddle or Turbine, 2" Paddle, 3" Paddle, Generic	
Generic		x	x	x	x	x	x	x				x		x	x	x	x	x	x	x	x		
Maximum Flow Rate		a	a	a	a	a	a	a				a		a	a	a	a	a	a	a	a	20 - 2000 GPM	20 - 2000 LPM
Add _ _ _ Gallons or Liters		a	a	a	a	a	a	a				a		a	a	a	a	a	a	a	a	1 - 255 Gallons	001 - 255 Liters
Every _ _ _ Pulses		a	a	a	a	a	a	a				a		a	a	a	a	a	a	a	a	1 - 255	1 - 255

tes

o - Regeneration Time will only be viewed if Regeneration Day Override is used.

u - If Auxiliary Relay is Enabled then Chemical Pump Relay will not be viewed or if Chemical Pump Relay is Enabled then Auxiliary Relay will not be viewed.

c - All Relay Output parameters programming will be viewed if Enabled.

a - If Generic Flow Meter is chosen, then programming parameters will be viewed.

www.watersmart.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Stager Operation

Stagers are motor driven, rotary multi-port valves used to control a set of valves in a predefined sequence. They function by internally connecting inlet pressure to a defined set of control ports and allowing other control ports be vented through a drain. Control ports are used to open and close valves in a preset sequence. As the stager advances to various positions, different valves are open and closed in a system. The control port pressure and vent sequence is preset at the factory and cannot be field altered.

Stager Installation

1. Connect a constant pressure water or air source to the 1/8" NPT stager inlet. Control fluid pressure must be equal to or greater than system pressure. To ensure long trouble free operation, a 100 micron filter in the control pressure line is recommended.
2. Stager drain port should be left open or discharged to unrestricted or open drain. DO NOT plug or restrict drain port.
3. Connect the 1/8" NPT control ports to appropriate valves. Refer to tubing schematic provided in the Plumbing Diagrams section of this manual. Tubing inside diameter should be 1/8" or larger.

Inverted Type Stagers

Stagers that are ordered inverted would be used on systems with all normally closed valves. Inverted Stagers send pressure signals to open valves and vent signals to close valves.

Filter Operation Using 48-00 Stagers


When using a 48-00 Stager to operate a filter:

1. Plug stager port #5 using a 1/8" pipe plug


2. Program cycle 2 time to 0:00:00 or the desired settle time

PLUMBING DIAGRAMS

4 Position Softener (48-00 Stager)

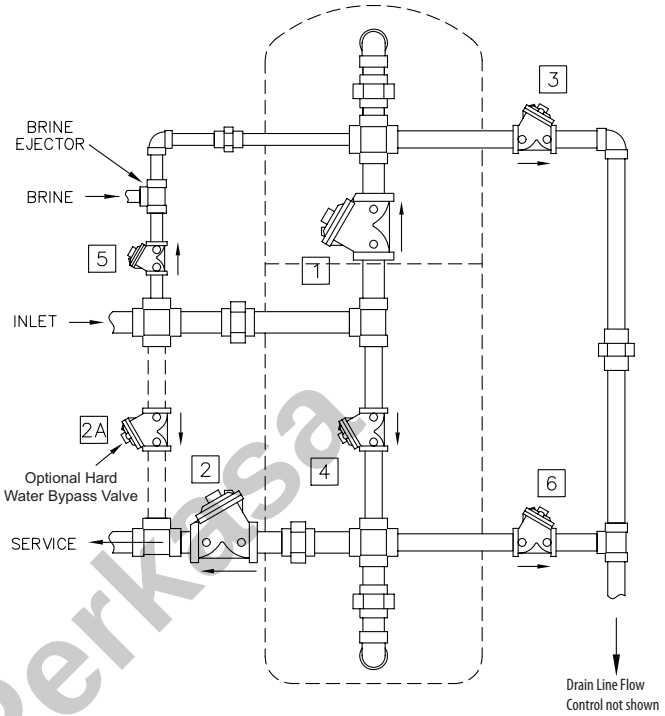

4 POSITION SOFTENER

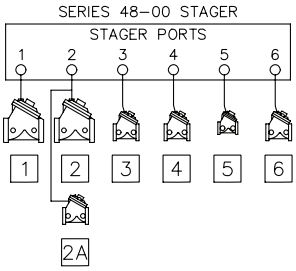

NOTCH	POS.	FUNCTION	PORTS VENTED[B]	VALVES OPEN[A]
A	4	SERVICE	1,2	1,2
B				
C	1	BACKWASH	3,4	3,4,2A
D				
E	2	BRINE	5,6	5,6,2A
F	3	RINSE	1,6	1,6,2A


Note A: All valves normally open except optional valve 2A.
Note B: Inverted Stager types will have these ports pressurized. Inverted Stager to be used with all valves normally closed except optional valve 2A.

Watermart Perkasa
www.water.co.id


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

PLUMBING DIAGRAMS *continued*

4 Position Filter (48-00 Stager)

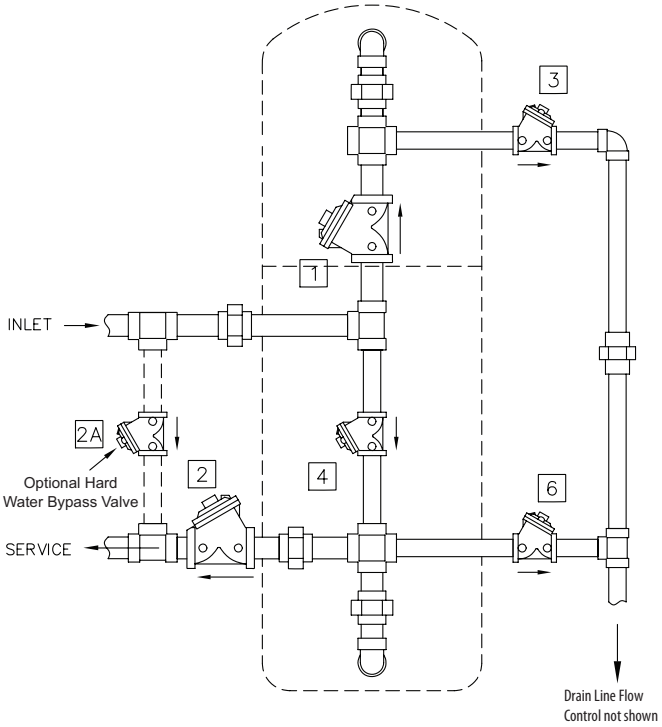


4 POSITION FILTER

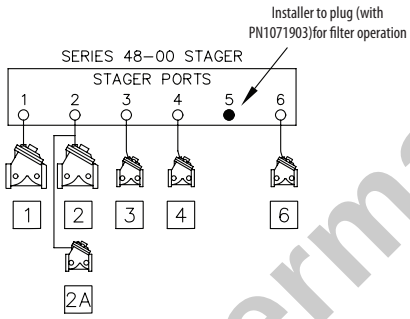


NOTCH	POS.	FUNCTION	PORTS VENTED [B]	VALVES OPEN [A]
A	4	SERVICE	1,2	1,2
B				
C	1	BACKWASH	3,4	3,4,2A
D				
E	2	BRINE [C]	5,6	5,6,2A
F	3	RINSE	1,6	1,6,2A

Note A: All valves normally open except optional valve 2A.
Note B: Inverted Stager types will have these ports pressurized. Inverted Stager to be used with all valves normally closed except optional valve 2A.
Note C: Program Cycle 2 time to 00:00:00 for filter operation.

5 Position Softener w/Timed Brine Refill (51-06 Stager)

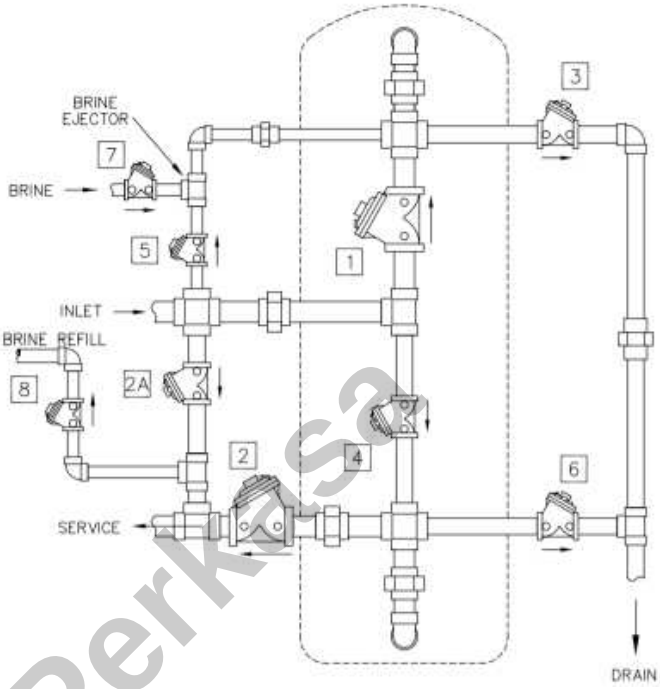

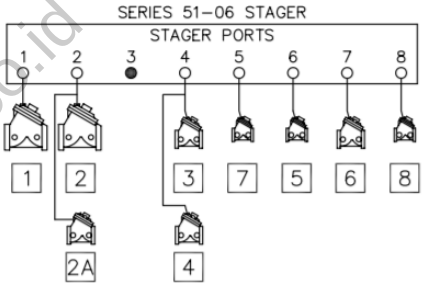

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	0	SERVICE	1,2	1,2
B				
C	1	BACKWASH	4	3,4,2A
D				
E	2	BRINE	5,6,7	5,6,7,2A
F	3	SLOW RINSE	6,7	5,6,2A
G	4	FAST RINSE	1,7	1,6,2A
H	5	BRINE REFILL	1,2,8	1,2,8

NOTE:

1. ALL OTHER PORTS PRESSURIZED.

2. ALL VALVES (EXCEPT NO. 2A) NORMALLY OPEN, PRESSURE TO CLOSE. VALVE 2A NORMALLY CLOSED.

3. VALVE 2A REQUIRED FOR RAW WATER BYPASS DURING REGENERATION.


4. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

PLUMBING DIAGRAMS *continued*


Multiple Tank 4 Position Softener (48-00 Stager)

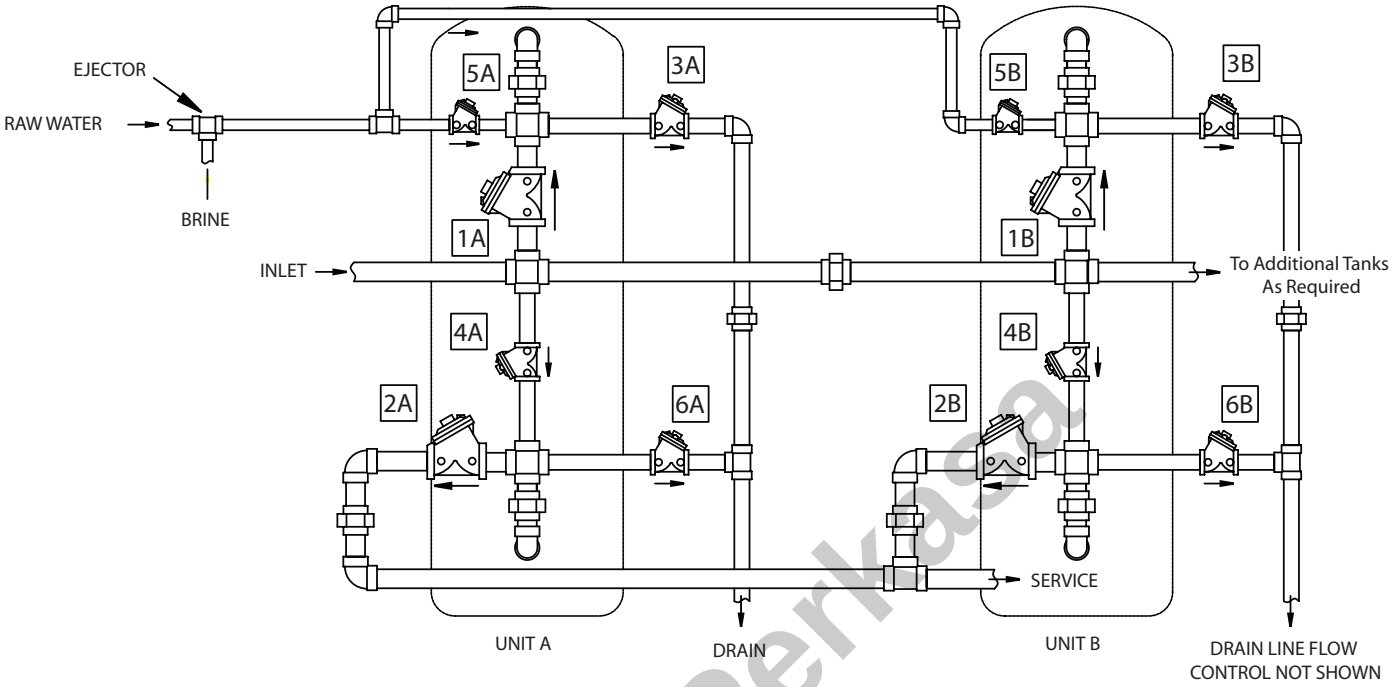

NOTE: All valves normally open, pressure to close.

NOTE: Valve 2 for each tank is controlled by solenoid for system 7, 9, 14

Multiple Tank 5 Position Softener (51-06 Stager)

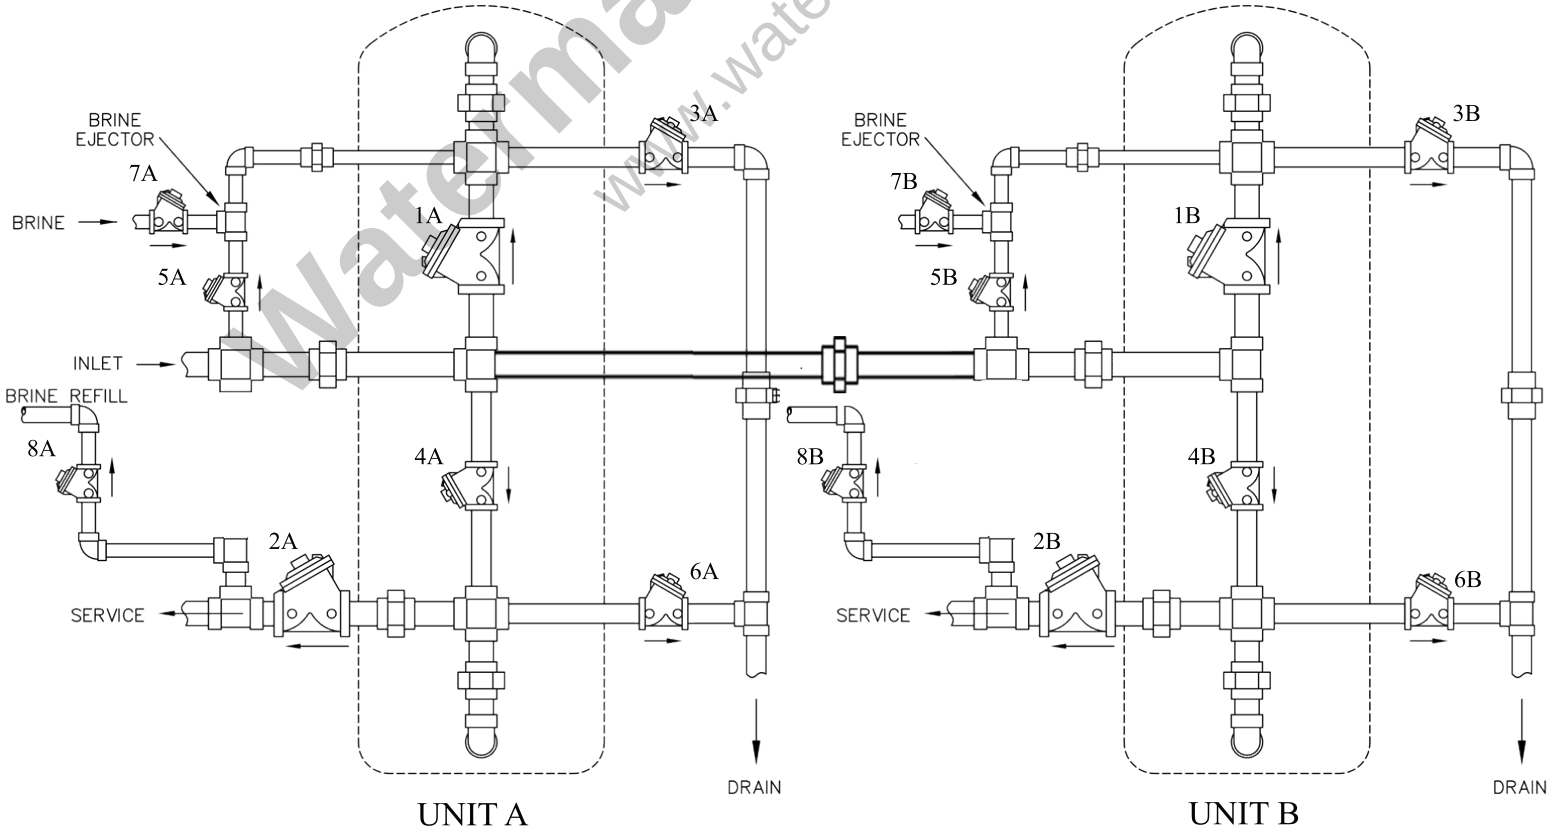

NOTE: All valves normally open, pressure to close.


NOTE: Valve 2 for each tank is controlled by solenoid for system 7, 9, 14

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

SOLENOID USE

Solenoids only required for Systems 7, 9 and 14

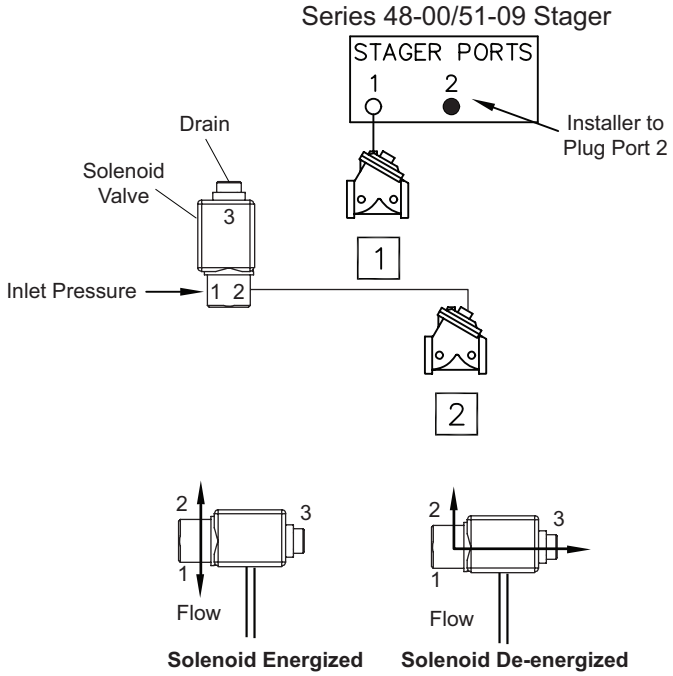

Energized To Close

The NXT Stager control can operate an optional 24 VAC solenoid to control when a tank is off line. This solenoid is electrically connected to the "lower drive" connection on the circuit board, and control pressure is run through the solenoid to the service outlet diaphragm valve.

The solenoid installed at the factory is a universal type. It is plumbed in an energize to close configuration when service outlet valve is normally open.

When a tank enters Regeneration or Standby the solenoid is energized. Pressure from solenoid port 1 passes to port 2. The diaphragm valve #2 will close.

When a tank enters In Service the solenoid is de-energized. The inlet pressure to solenoid port 2 is stopped. The diaphragm valve is vented through solenoid port 2 to port 3 (drain). The valve #2 opens.


Inverted Stagers Only - Energize to Open


If the service outlet vavle is normally closed, connect constant pressure source to solenoid port 3. Connect solenoid port 2 to service outlet valve. Solenoid port 1 is drain.


Watermart Perkasa
www.water.co.id


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


STAGER CONTROLLER, 51 & 48, NXT, NEMA 4
24V/50-60Hz ASSEMBLY

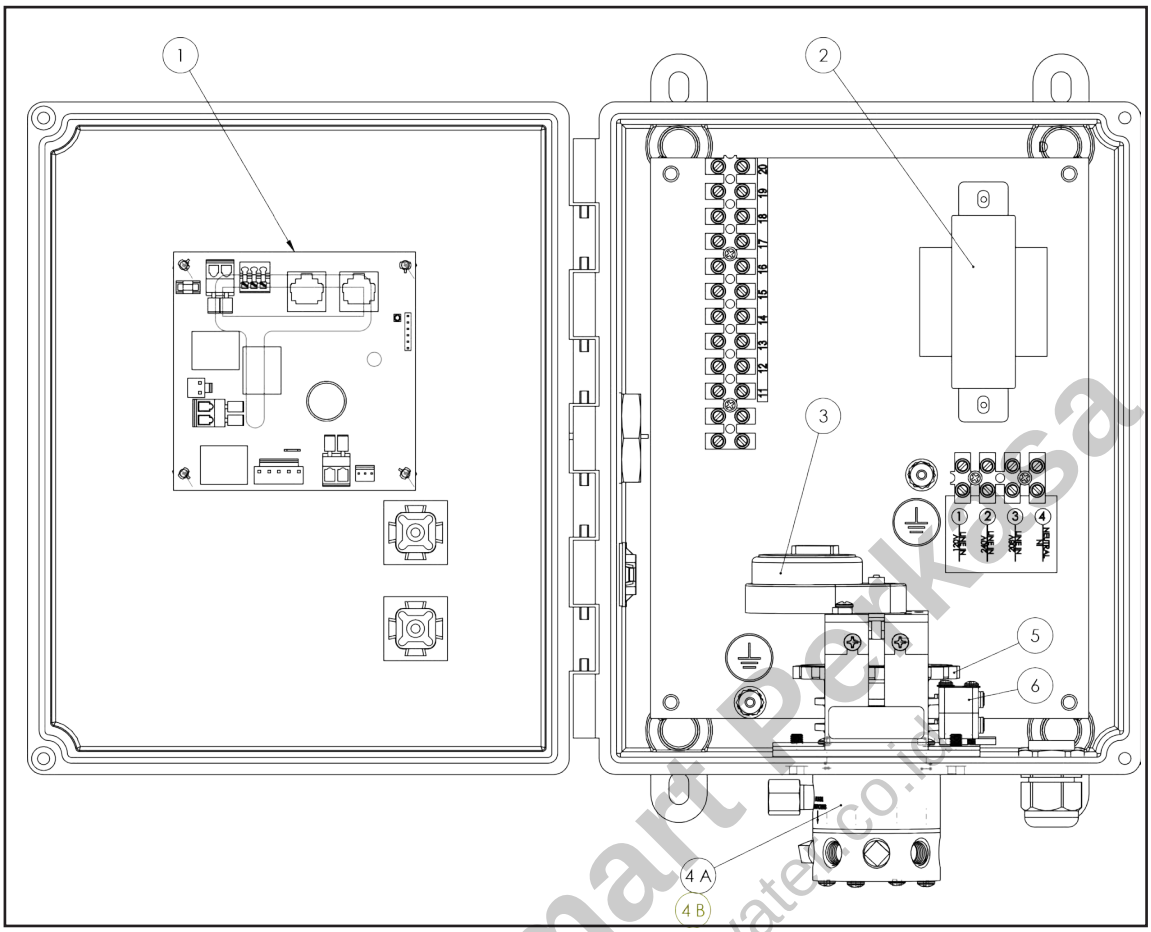


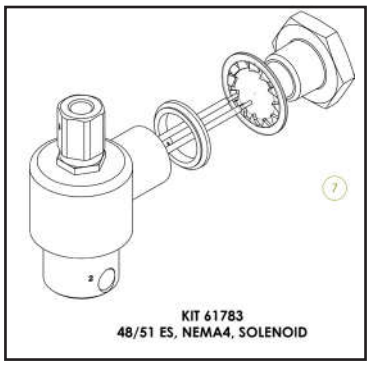


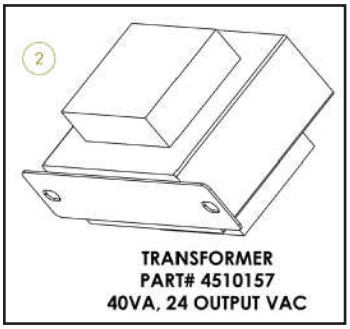


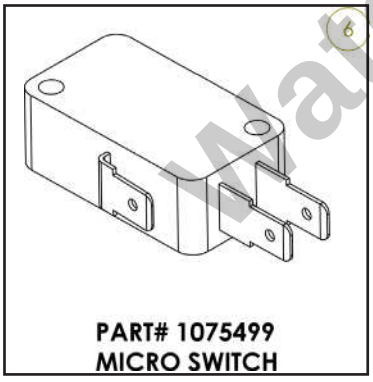

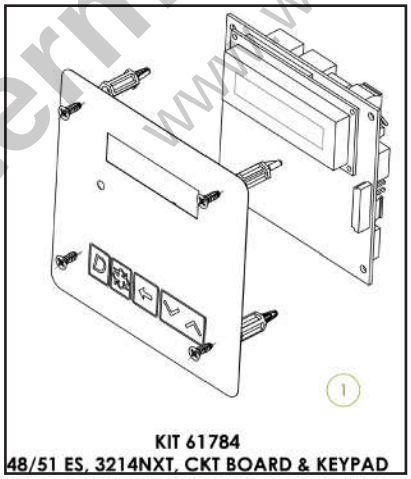

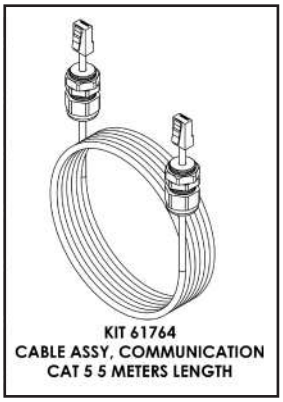

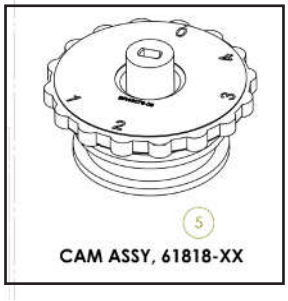

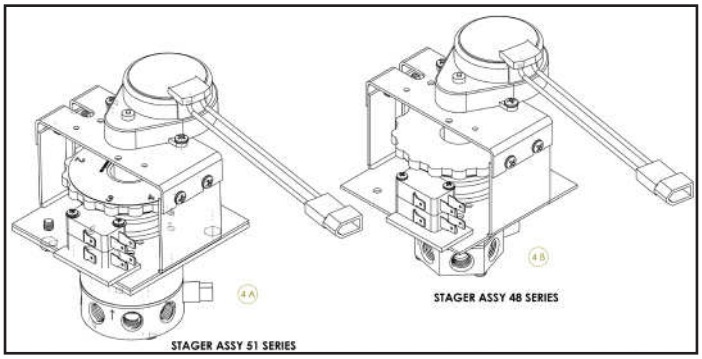


Service Parts Common To Both 48 & 51 NXT Stager Control

61783.....Kit, 48/51 ES NEMA4, Solenoid
61784.....Kit 48/51 ES, 3214 NXT, CKT Board & Keypad
61764.....Cable Assy, Communication, CAT 5, 5 Meters Long
1075499.....Switch, Micro
40941.....Wire Harness, Upper Drive
1075502.....Wire Harness, 2nd Aux Switch
43001.....Motor
4510157.....Transformer
See Service Assemblies Section for Stager and Cam Assemblies

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

WIRING DIAGRAM 48/51 NXT STAGER CONTROLLER

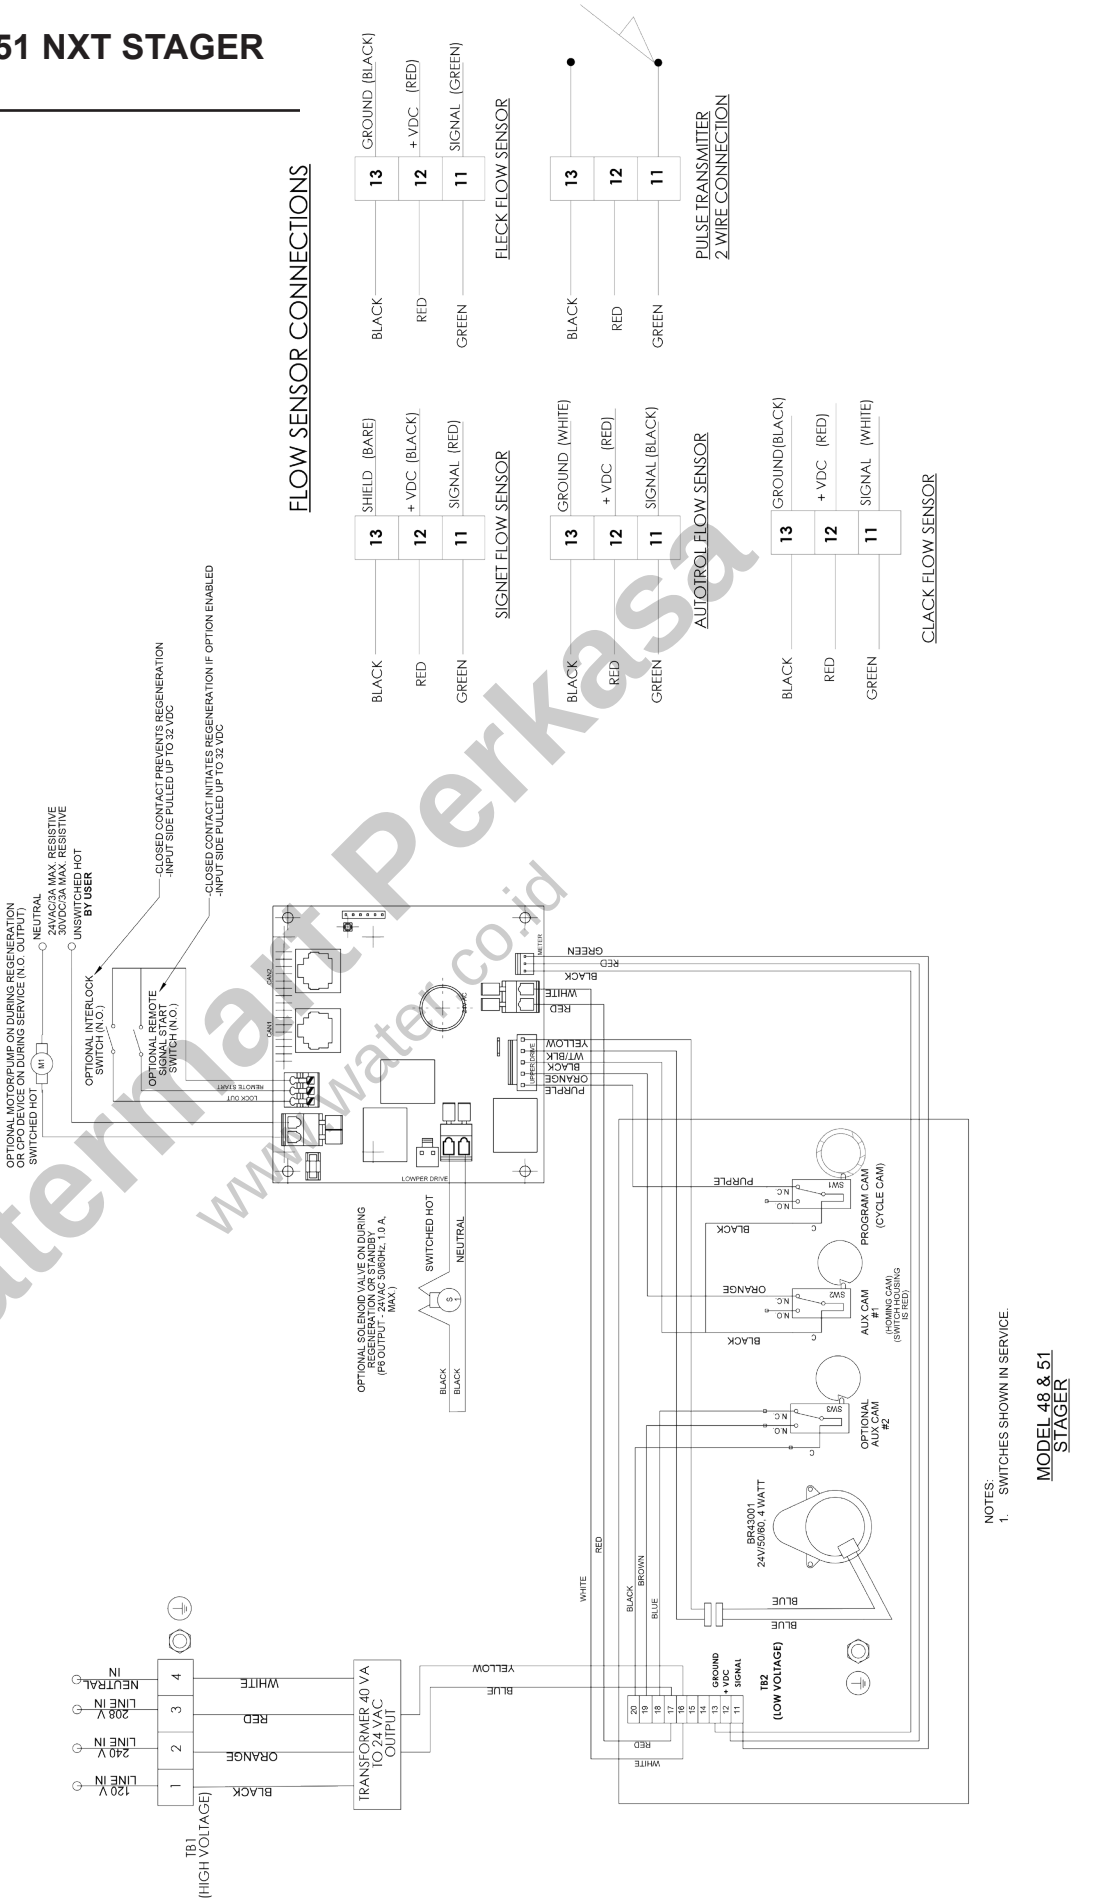

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

TROUBLESHOOTING

Detected Errors

If a communication error is detected, an Error Screen will alternate with the main (time of day) screen every few seconds.

- All units In Service remain in the In Service position.
- All units in Standby go to In Service.
- Any unit in Regeneration when the error occurs completes Regeneration and goes to In Service.
- No units are allowed to start a Regeneration Cycle while the error condition exists, unless they are manually forced into Regeneration.
- When an error is corrected and the error no longer displays (it may take several seconds for all of the units in a system to stop displaying the error message), the system returns to normal operation.

NOTE: During the error condition the control continues to monitor the flow meter and update the volume remaining. Once the error condition is corrected all units return to the operating status they were in prior to the error. Regeneration queue is rebuilt according to the normal system operation. Or, if more than one unit has been queued for regeneration, then the queue is rebuilt according to which one communicates first.

Message Displayed	Cause For Error	Correction
Flashing time	Power outage.	Program time by holding UP on Unit #1.
Detected Error = Matching Address	Two or more units programmed with the same valve address number.	Program each unit with unique valve address number in Master Programming.
Detected Error = Program Mismatch	Master program parameters do not match between two or more controls.	Confirm Master Programming for each unit.
Detected Error = No Message #1	No power to Control #1.	Power Control #1.
	Communication Cable to Valve Address #1 bad or missing.	Connect or replace Communication Cable.
Detected Error = No Message #2	No power to Control #2.	Power Control #2.
	Communication Cable to Valve Address #2 bad or missing.	Connect or replace Communication Cable.
Detected Error = No Message #3	No power to Control #3.	Power Control #3.
	Communication Cable to Valve Address #3 bad or missing.	Connect or replace Communication Cable.
Detected Error = No Message #4	No power to Control #4.	Power Control #4.
	Communication Cable to Valve Address #4 bad or missing.	Connect or replace Communication Cable.
Detected Error = E2 Reset Unit	This message appears after a software reset.	Reprogram control using Master Programming section.
Test Mode	Circuit Board was not programmed at factory.	Replace Circuit Board.
Black Squares on screen	Bad Circuit Board.	Replace Circuit Board.
INI on screen for more than 2 minutes	Circuit board not getting feedback from cycle switch.	Inspect Motor - should be rotating.
		Connect wire harness to cycle switch.
		Check Cycle Micro Switch.
CHG on screen for more than 2 minutes	Control programmed incorrectly as 2900 or 3900 valve type.	Reprogram unit as Stager Valve type.

SERVICE ASSEMBLIES

48-00 ES Stager Assembly

61808-01 .....Stager Assy, 48-00, NXT 24VAC, HMG No 2nd Aux Switch
61808-02 .....Stager Assy, 48-00, NXT 24VAC, SA, 2nd Aux Notched in Service
61808-03 .....Stager Assy, 48-00, NXT 24VAC, SC, 2nd Aux Notched In Backwash
61808-10 .....Stager Assy, 48-00, Inverted, NXT 24VAC, HMG No 2nd Aux Switch
61808-20 .....Stager Assy, 48-00, Inverted, NXT 24VAC, SA, 2nd Aux Notched in Service
61808-30 .....Stager Assy, 48-00, Inverted, NXT 24VAC, SC, 2nd Aux Notched In Backwash
1074817.....Kit, Internal Parts, 48-00 Stager
61817-01 .....Cam Assy, 48-00 NXT, HMG, no 2nd Aux Cam
61817-02 .....Cam Assy, 48-00 NXT, SA, 2nd Aux Notched in Service
61817-03 .....Cam Assy, 48-00 NXT, SC, 2nd Aux Notched in Backwash

51-06 ES Stager Assembly

61967-01 .....Stager Assy, 51-06, NXT 24VAC, HMG, No 2nd Aux Switch
61967-02 .....Stager Assy, 51-06, NXT 24VAC, SA, 2nd Aux Notched in Service
61967-03 .....Stager Assy, 51-06, NXT 24VAC, SC, 2nd Aux Notched in Backwash
61967-04 .....Stager Assy, 51-06, NXT 24VAC, SH, 2nd Aux Notched in Refill
1074888.....Kit, Internal Parts, 51-06 Stager
61968-01 .....Cam Assy, 51-06 NXT, HMG, No 2nd Aux Switch
61968-02 .....Cam Assy, 51-06 NXT, SA, 2nd Aux Notched in Service
61968-03 .....Cam Assy, 51-06 NXT, SD, 2nd Aux Notched in Backwash

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

SPECIFICATIONS

NXT GENERIC METER GUIDELINES

Open collector output

Pulse rate generated must not exceed 100 pulses per second (100 Hz), or 6,000 pulses per minute

Support for meter outputs in the range of 1-255 gallons (25.5 m^3) for every 1-255 pulses
Example: 35 gallons/100 pulses
(= 3.5 gallons/10 pulses, = 0.35 gallons/1 pulse)

Meter must operate at 5 VDC

NXT

SYSTEM #	SYSTEM DESCRIPTION	STAGERS	TYPE
4	Single Unit	1	Time Clock: No Meter Immediate: One Meter Delayed: One Meter Remote: No Meter
5	Interlocked	2, 3, 4	Immediate: All Meters Remote: No Meter
6	Series	2, 3, 4	Immediate: One Meter Delayed: One Meter Remote: No Meter
7	Alternating	2	Immediate: One Meter Remote: No Meter
9	Alternating	2, 3, 4	Immediate: All Meters Remote: No Meter
14	Demand Flow	2, 3, 4	Immediate: All Meters

ELECTRICAL RATING

24V AC Transformers
115V AC +/- 20% input — 230V AC +/- 20% input

24V AC output w/40V A — 24V AC output w/108V A

HUMIDITY

95% RH, non-condensing

Watermart Perkasa
www.water.co.id

AQ Matic

16605 West Victor Rd. New Berlin, WI 53151
P: 262–326–0100 | www.aq–matic.com | techsupport@aq–matic.com

© 2016 AQ Matic Valve and Controls Company, Inc. All rights reserved.

All AQ Matic trademarks and logos are owned by AQ Matic or its affiliates. All other registered and unregistered trademarks and logos are the property of their respective owners. Because we are continuously improving our products and service specifications without prior notice. AQ Matic is an equal opportunity employer.

43163 REV E MA2016

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

AQUAMATIC® EASY NEST KIT

SIMPLIFYING VALVE NESTS

MADE IN THE USA
OF FOREIGN & DOMESTIC PARTS



FEATURES/BENEFITS

No-hassle selection documentation for specifying, engineering and building the valve nest system

Easy nest kits include diaphragm valves, control, pilot tubing, tubing fittings for the valve, injector (for softener system), and suggested application drawings for assembly of the unit

Filter and softener configurations available

Service flow rates: 80-1300 gpm (18-295 m^3/h)* per tank

Backwash flow rates: 35-392 gpm (8-89 m^3/h) for a softener system* 35-1200 gpm (8-272 m^3/h) for a filter system*

All components can be serviced while the valve is in-line

Unique Y-pattern design with large seat opening and high lift disc permits higher flow rates at lower pressure loss than other comparable valves

Larger diaphragm area compared to seat area permits drip-tight closing without any springs

Pre-formed, stress-relieved diaphragm minimizes fatigue, maximizes valve responsiveness and diaphragm lifetime

Diaphragm acts as an actuator, eliminating the need for electric or pneumatic actuators

OPTIONS

Available in either composite or metal valve configurations

Electronic 962 stager control

TYPICAL APPLICATIONS

Tank Sizes Coverage
36"-120" for softeners and filters

* Flow rates shown are valve only, not the completed system

Watermart Perkasa
www.water.co.id

16605 West Victor Rd. New Berlin, WI 53151
P: 262–326–0100 | www.aq–matic.com | techsupport@aq–matic.com
© 2016 AQ Matic Valve and Controls Company, Inc. All rights reserved.
All AQ Matic trademarks and logos are owned by AQ Matic or its affiliates. All other registered and unregistered trademarks and logos are the property of their respective owners. Because we are continuously improving our products and services, AQ Matic reserves the right to change specifications without prior notice. AQ Matic is an equal opportunity employer.

1230817 REV D MA2016

AQUAMATIC®
EASY NEST KITS

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

AQUAMATIC® EASY NEST KITS

OPERATING SPECIFICATIONS

Valve Body	Cast Iron or Glass-filled Noryl
Diaphragm	Buna N/Polyamide
Injector	PVC
Control Enclosures (Electronic)	NEMA 4X Fiberglass
Operating Pressure	20 to 120 psi (1.38 to 8.27 bar)
Operating Temperature	35° to 120°F (2° to 38°C)
Operating Voltages	115V, 50/60 Hz; 220V, 50/60 Hz

PERFORMANCE RANGE (SINGLE TANK SYSTEMS)

Service Flow Rates	80 to 1300 gpm (18 to 295 m^3/h) per tank
Backwash Flow Rates (Softeners)	35 to 392 gpm (8 to 89 m^3/h)
Backwash Flow Rates (Filters)	35 to 1200 gpm (18 to 272 m^3/h)
System Sizes	36" to 120"diameter tanks

CONFIGURATIONS

System Configurations

Single Tank Softeners	4 Position
Multi-Tank Softeners	2, 3, and 4 Tank, Parallel; 2 Tank Alternating Softeners
Single Tank Filters	3 Position
Multi-Tank Filters	2, 3, and 4 Tank, Sequential

Control Configurations

Electronic	Demand and Time Clock (Battery Back-up)
Programmable Regeneration Range tion	0-255 Minutes Regenera- (Each Cycle)
Stager Valves	6, 8 and 16 Ports

Piping Configurations

Valves Cast Iron	3/4"- 3" Female Thread, NPT, BSP, JIS; 3"- 6" Flanged
Noryl (Plastic)	1" - 3" Union, Female Solvent Weld; 2"- 3" Female Solvent Weld or Flange
Injectors	1/2"- 2" Female NPT Thread, Solvent Weld
Stager Tubing	1/4" Poly Tubing

AVAILABLE STANDARD SOFTENER CONFIGURATIONS

MODEL #	PART #	TANK DIAMETER IN. (CM)	RESIN AMOUNT FT^3 (LITERS)	PIPE SIZE	SERVICE FLOW RATE @ PRESSURE DROP		BACKWASH FLOW RATE @ PRESSURE DROP	
					GPM @ PSI	M^3/HR @ BARS	GPM @ PSI	M^3/HR @ BARS
CAST IRON VALVESW								
S425-36	1078826	36 (92)	20 (565)	2"	100 @ 6.4	22.7 @ .4	36 @ 2.3	8.1 @ 0.2
S425-42	1078783	42 (106)	30 (850)	2"	150 @ 14.3	34 @ 1.0	48 @ 4.4	10.9 @ 0.3
S426-48	1078784	48 (120)	40 (1130)	2"	180 @ 14.0	40.9 @ 1.0	63 @ 7.5	14.3 @ 0.5
S426-54	1078785	54 (135)	50 (1415)	2.5"	220 @ 13.7	50 @ .0.9	80 @ 12.2	18 @ 0.8
S427-60	1078786	60 (150)	60 (1700)	3"	300 @ 10.0	68 @ 0.7	98 @ 6.3	22.2 @ 0.4
S427-63	1078828	63 (160)	70 (1980)	3"	325 @ 11.6	73.8 @ 0.8	108 @ 7.5	24.5 @ 0.5
S428-72	1078787	72 (180)	85 (2400)	4"	425 @ 4.8	96.6 @ 0.3	140 @ 8.5	31.8 @ 0.6
S428-78	1078788	78 (200)	100 (2830)	4"	500 @ 6.6	113.6 @ 0.5	165 @ 11.8	37.5 @ 0.8
S428-84	1078789	84 (215)	125 (3540)	4"	625 @ 10.0	142 @ 0.7	192 @ 10.5	43.6 @ 0.7
S428-90	1078790	90 (230)	140 (3965)	4"	700 @ 13.0	159 @ 0.9	220 @ 13.8	50 @ 1.0
S429-96	1078791	96 (245)	165 (4670)	6"	825 @ 4.0	187.5 @ 0.3	255 @ 7.6	58 @ 0.5
S429-102	1078792	102 (260)	185 (5240)	6"	925 @ 4.2	210 @ 0.3	285 @ 9.2	64.7 @ 0.6
S429-108	1078793	108 (275)	210 (5945)	6"	1100 @ 6.0	250 @ 0.4	320 @ 11.5	72.7 @ 0.8
S429-114	1078794	114 (290)	235 (6655)	6"	1200 @ 7.0	272 @ 0.5	355 @ 3.5	80.6 @ 0.2
S429-120	1078795	120 (305)	260 (7360)	6"	1300 @ 8.3	295 @ 0.6	390 @ 5.0	88.6 @ 0.3
COMPOSITE VALVES SERIES K52								
S524-36	1078796	36 (92)	20 (565)	1.5"	80 @ 9.0	18.1 @ 0.6	35 @ 11	7.9 @ 0.8
S526-42	1078797	42 (106)	30 (850)	2.5"	150 @ 4.5	34 @ 0.3	48 @ 4.0	10.9 @ 0.3
S526-48	1078798	48 (120)	40 (1130)	2.5"	180 @ 7.0	41 @ 0.5	63 @ 5.6	14.3 @ 0.4
S526-54	1078799	54 (135)	50 (1415)	2.5"	220 @ 10	50 @ 0.7	80 @ 10	18 @ 0.7
COMPOSITE VALVES SERIES K53								
S534-36	1078800	36 (92)	20 (565)	1.5"	100 @ 8.7	22.7 @ .60	35 @ 7.5	7.9 @ 0.5
S535-42	1078801	42 (106)	30 (850)	2"	150 @ 6.4	34 @ .44	48 @ 2.0	10.9 @ 0.1
S535-48	1078802	48 (120)	40 (1130)	2"	180 @ 9.2	41 @ .63	63 @ 4.0	14.3 @ 0.3
S537-54	1078803	54 (135)	50 (1415)	3"	220 @ 2.4	50 @ .16	80 @ 7.0	18 @ 0.5
S537-60	1078829	60 (150)	60 (1700)	3"	300 @ 4.5	68.1 @ .31	98 @ 8.4	22.2 @ 0.6
S537-63	1078804	63 (160)	65 (1840)	3"	325 @ 5.3	73.8 @ .36	110 @ 4.0	25 @ 0.3
S537-72	1078805	72 (182)	90 (2550)	3"	425 @ 9.0	96.6 @ .62	140 @ 7.0	31.8 @ 0.5

AVAILABLE STANDARD FILTER CONFIGURATIONS

MODEL #	PART #	TANK DIAMETER IN. (CM)	PIPE SIZE	SERVICE AND BACKWASH FLOW RATE @ PRESSURE DROP					
				5 GPM/FT^2		10 GPM/FT^2		15 GPM/FT^2	
				GPM @ PSI	M^3/HR @ BARS	GPM @ PSI	M^3/HR @ BARS	GPM @ PSI	M^3/HR @ BARS
CAST IRON VALVES									
F425-42	1078806	42 (106)	2"	48 @ 1.5	10.9 @ 0.1	96 @ 5.8	21.8 @ 0.4	145 @ 13.2	33 @ 0.9
F426-48	1078807	48 (120)	2"	62 @ 1.7	14 @ 0.1	125 @ 6.7	28 @ 0.5	190 @ 15	43.2 @ 1.0
F426-54	1078808	54 (135)	2.5"	80 @ 2.8	18.1 @ 0.2	160 @ 7.2	36.2 @ 0.5	240 @ 16	54.5 @ 1.1
F427-60	1078809	60 (150)	3"	97 @ 1.1	22.0 @ 0.1	195 @ 4.3	44 @ 0.3	295 @ 9.5	67 @ 0.6
F428-72	1078810	72 (180)	4"	140 @ 0.5	31.8 @ 0.03	280 @ 2.5	63.6 @ 0.2	425 @ 5.5	96.6 @ 0.4
F428-78	1078811	78 (200)	4"	165 @ 0.7	36.3 @ 0.05	330 @ 3.2	75 @ 0.2	500 @ 7.5	113 @ 0.5
F428-84	1078812	84 (215)	4"	190 @ 1.0	43 @ 0.07	380 @ 4.4	87.5 @ 0.3	580 @ 10.0	132 @ 0.7
F428-96	1078813	96 (245)	4"	250 @ 1.6	56.8 @ 0.1	500 @ 7.4	113.6 @ 0.5	750 @ 16.0	170 @ 1.1
F429-108	1078814	108 (275)	6"	315 @ 0.5	71 @ 0.03	635 @ 2.0	143.6 @ 0.1	960 @ 4.5	218 @ 0.3
F429-120	1078815	120 (305)	6"	390 @ 0.8	88.6 @ 0.06	780 @ 3.0	177 @ 0.2	1180 @ 7.4	268 @ 0.5
COMPOSITE VALVES SERIES K52									
F524-36	1078816	36 (90)	2"	35 @ 1.7	8.0 @ 0.1	70 @ 6.8	16 @ 0.5	105 @ 15	23.8 @ 1.0
F526-42	1078817	42 (105)	2.5"	48 @ 0.46	11 @ 0.03	96 @ 2.0	22 @ 0.1	145 @ 4.2	33 @ 0.3
F526-48	1078818	48 (120)	3"	62.5 @ 0.8	14.2 @ 0.06	125 @ 3.2	28.4 @ 0.2	190 @ 7.3	43.2 @ 0.5
F526-54	1078819	54 (135)	3"	80 @ 1.3	18.1 @ 0.1	160 @ 5.2	36.2 @ 0.4	240 @ 11.5	54.5 @ 0.8
COMPOSITE VALVES SERIES K53									
F534-36	1078820	36 (90)	1.5"	35 @ 1.2	8 @ .08	70 @ 4.3	16 @ 0.3	105 @ 9.6	23.8 @ 0.7
F535-42	1078821	42 (105)	2"	48 @ 0.6	11 @ 0.04	96 @ 2.7	22 @ 0.2	145 @ 6.0	33 @ 0.4
F535-48	1078822	48 (120)	2"	62.5 @ 1.1	14.2 @ 0.08	125 @ 4.5	28.4 @ 0.3	190 @ 10.5	43.2 @ 0.7
F537-54	1078823	54 (135)	3"	80 @ 0.4	18.1 @ 0.03	160 @ 1.6	36.2 @ 0.1	240 @ 3.5	54.5 @ 0.2
F537-60	1078829	60 (150)	3"	98 @ 0.6	22.2 @ 0.04	195 @ 2.2	44.3 @ 0.2	295 @ 5.4	67 @ 0.4
F537-63	1078824	63 (160)	3"	107 @ 0.7	24 @ 0.05	215 @ 2.7	48 @ 0.2	325 @ 7.0	73.8 @ 0.5
SF37-72	1078825	72 (180)	3"	140 @ 1.2	31.8 @ 0.08	280 @ 5.0	63.6 @ 0.3	425 @ 11.4	96.6 @ 0.8


NOTE: Data supplied herein is provided as a guide only. Actual results may vary depending upon actual water conditions and system layout. Flow rates shown are valves only, not completed systems.

ELECTRONIC CONTROLLERS

PART NUMBER	DESCRIPTION
1078837	Single tank, 4 position softener
1078838	Single tank, 3 position filter
1078839	2 tank sequential filter
1078840	3 tank sequential filter
1078841	4 tank sequential filter
1078842	2 tank alternating softener
1078843	2 tank alternating softener w/rinse


STANDARD SYSTEM LAYOUTS

TWO TANK ALTERNATING SOFTENERS

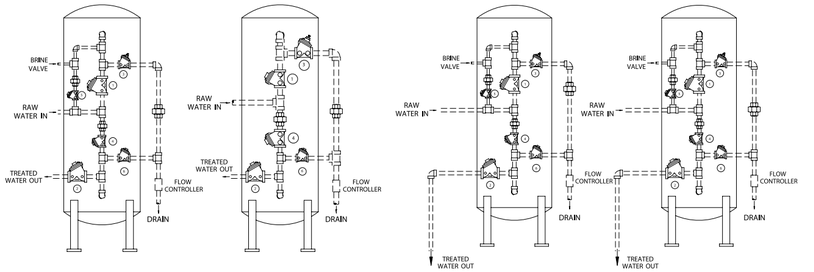

SOFTENER FILTER UNIT A UNIT B

FOUR TANK ALTERNATING SOFTENERS

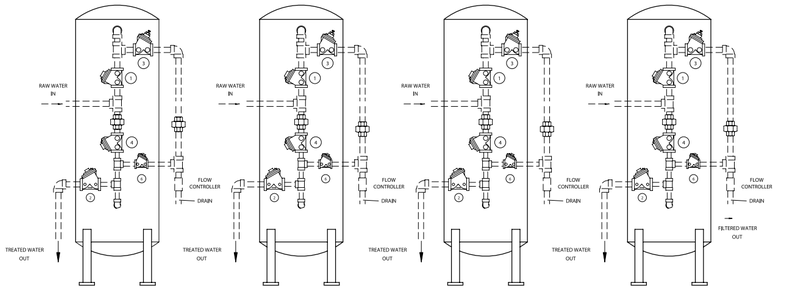

UNIT A UNIT B UNIT C UNIT D

All systems are designed for guideline purposes only. Final authorship of engineering design and application is the resp

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

AQUAMATIC® EASY NEST
KITS INSTALLATION SUGGESTIONS



Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

TABLE OF CONTENTS

TABLE OF CONTENTS....2
GENERAL RECOMMENDATIONS....2
TROUBLESHOOTING GUIDE....3
EXISTING EASY NEST SYSTEM TROUBLESHOOTING GUIDE....4
COMPONENT TROUBLESHOOTING....6

GENERAL RECOMMENDATIONS

Hydraulics

- Vacuum breakers should be installed to prevent siphoning.
- Flexible connectors should follow FRP tank manufacturer's recommendations.

Electrical

- Supply of electricity should be compatible with the voltage required by the controller.
- Comply with local electrical codes and ensure an uninterrupted supply of power is available.

Plumbing

- Proper piping practices should be used on media tanks.
- Comply with local plumbing codes and follow common practices while plumbing the components.
- Plumber tape should be used on threads for cast iron Easy Nest Kits.
- Do not use plumber tape on plastic Easy Nest Kits.

Floor Drain

- Units should be located close to a clean working drain.
- The drains capacity should be checked for accepting backwash and Fast Rinse flows.
- An air gap should be installed on the drain to prevent backflow contamination.
- The systems drain line should be less than a 15 foot pipe length equivalent.
- Elevation of the drain line should be less than five feet above the injector.

Floor

- The floor should be able to support the installation weight of the system and be fairly level.

Isolating/Bypass Valving

- A manual bypass around the system for easy servicing and emergencies is recommended.

Matching Flanges

- Companion flanges are not included for large valves.

Upper and Lower Distributors/False Bottom

- Follow component manufacturers recommendations.

CALIFORNIA PROPOSITION 65 WARNING

⚠ WARNING: This product contains chemicals known to the State of California to cause cancer or birth defects or other reproductive harm.

Media Tanks

- Steel and FRP tanks can be used if proper piping practices are followed.

New System Check Out and Troubleshooting Guide

This is a guide for starting a system after all of the initial installation is completed:

- Plumbing is complete including raw water supply (inlet), Service (outlet), drain (including Drain Line Flow Control), and regenerate draw line. The brine tank and brine valve are installed, however no salt has been added at this time. A sufficient amount of water should be added to the brine tank so the water level is above the salt grid (if installed).
- The media tanks are loaded and the tanks are filled with water.
- Control Pressure to stager is connected to a constant source that is equal or larger than line pressure. Drain port of stager is open to atmosphere. For trouble-free operation, the use of a 5-micron filter, in the control pressure line is recommended.
- All necessary diaphragm valve/stager tubing has been connected.
- The control has power available but is not powered up at this time.

System Check Out

1. Manually advance stager to the Backwash Position by rotating the cam counterclockwise.
2. Open feed water supply valve fully (tanks have already been filled with water prior to this step). Water should flow to drain at Backwash flow rate, which is determined by a Drain Line Flow Control installed in the drain line. Water to Service should stop after several seconds. If water continues to Service refer to Section 1 of the Troubleshooting guide.
3. Backwash system until water to drain runs clear. Observe that no media is being washed to drain. If media is being washed to drain, turn feed water supply off immediately and refer to Section 2 of the Troubleshooting guide.
4. Manually advance stager to Draw/Slow Rinse position. Flow of water to drain should decrease substantially. Water level in the brine tank should begin to go down. After verifying draw rate, please move to next step.
   - If flow to drain does not decrease, refer to Section 3 of the Troubleshooting guide.
   - If level in brine tank does not go down, refer to Section 4 of the Troubleshooting guide.
5. Manually advance stager to Fast Rinse. Flow to drain should increase to the level it was during Backwash. If the flow does not increase, refer to Section 5 of the Troubleshooting guide.
6. Manually advance stager to Service position.
7. Apply power to controller.
8. If Electronic controller (with 962 timer) is used, follow instructions as outlined in 962 programming manual.
9. System Check Out is complete and may be placed into service.
10. Open Service outlet valve.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

TROUBLESHOOTING GUIDE

Section	Symptom	Probable Cause	Correction
1	Water to service, no water to drain or water to both service and drain.	Tubing from stager to diaphragm valves may be incorrect. Refer to nest diagram, valves 3 and 4 tubing should not have pressure to them, all others should have pressure.	Refer to Manual to identify and correct tubing mistake.
2	Media washing to drain.	No drain line flow control is installed or drain line flow control is not sized correctly for media and/or water temperature.	Check for drain line flow control in drain line. Refer to media specification sheet for proper backwash rate.
3	Flow to drain does not decrease in draw cycle.	Tubing from stager to diaphragm valves may be incorrect. Refer to nest diagram, tubing going to valves 5 and 6 should not have pressure to them, all others should have pressure.	Refer to manual to identify and correct tubing mistake.
4	Level in brine tank does not go down.	Tubing from stager to diaphragm valves may be incorrect. Refer to nest diagram, tubing on valves 5 and 6 should not have pressure to them, all others should have pressure. Brine valve may be preventing draw.	Refer to manual to identify and correct tubing mistake. If tubing is correct, examine brine valve instruction sheet for troubleshooting information regarding the brine valve.
5	Flow to drain does not increase to the level it was during Backwash.	Tubing from stager to diaphragm valves may be incorrect. Refer to nest diagram, tubing on valves 1 and 6 should not have pressure to them, all others should have pressure.	Refer to manual to identify and correct tubing mistake.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

EXISTING EASY NEST SYSTEM
TROUBLESHOOTING GUIDE

Preliminary Checklist

Check to make sure:

- Vent ports on the diaphragm valves are not plugged or obstructed.
- Stager drain port is open to atmosphere.
- Controller has uninterrupted power source.
- Control pressure is equal to or greater than the system pressure and is a constant source.
- Systems using Easy Nest Kits consist of Normally Open type Diaphragm Valves controlled by pressure/vent signals from the stager control ports. Check for stager signal (pressured/vented) on valves by disconnecting tubing from the stager port connected to the valve. If upper diaphragm chamber (valve cap) is pressurized, valve should be closed and if vented, it should be open.

Problem	Possible Cause	Solution
Failure to draw brine.	Rinse outlet, valve No. 6, not opening.	Check for control signal on valve No. 6. If pressured, check stagers operation. If vented, disassemble and repair valve.
	Back pressure on injector.	Drain line flow controller restricted or too small.
	Low water pressure.	Inlet pressure must be at least 30 psi.
	Service inlet, valve No. 1, not closing.	Check for control signal on valve No. 1. If pressured, check stagers operation. If vented, disassemble and repair valve.
	Backwash inlet, valve No. 4, not closing.	Check for control signal on valve No. 4. If pressured, check stagers operation. If vented, disassemble and repair valve.
Mineral discharge to service.	Bottom distributor in media tank damaged or broken	Check and replace distributor.
Mineral discharge to drain.	Backwash flow control missing	Check drain line of flow controller.
	Backwash flow control oversized	Check for proper sizing of flow controller.
	Change in water pressure (If fixed orifice type, backwash flow controller is used)	If system has pressure fluctuation, install properly sized flow control in the drain line.
Change in water temperature.	Water temperature.	If water temperature is changed, adjust backwash flow rate per specification supplied by media manufacturer.
Low service flow rate and/or high pressure loss.	Service inlet and outlet, valve No. 1 and 2, not opening.	Disconnect tubing from stager ports 1 and 2. If pressured, stager is malfunctioning, repair stager. If stager port 1 and 2 are vented, check valve No. 1 and 2, repair valves.
Poor quality water to service.	Backwash inlet, valve No. 4, not closing.	Disconnect tubing from stager port No. 4. If pressured, stager is malfunctioning. If vented, check valve No. 5 and repair.
	Unit not regenerating.	Check controller operation and regeneration frequency setting.
	No brine draw.	Check brine valve operation.
	Lack of brine/salt in brine tank.	Check salt level. Fill brine tank, if necessary.
Unit will not regenerate automatically.	No electric power to timer.	Check electrical power supply for interruption.
	No flow indications (E9XX controller only).	Check flow meter.
	Control not programmed correctly.	Program control, see control manual.
Leak to drain.	Backwash outlet and/or rinse outlet valve not closing.	Disconnect tubing from stager ports 3 and 6. If vented, stager malfunctioning. If pressured, check valve and repair.
	Insufficient or lack of control pressure to stager.	Check control pressure to the stager, must be equal to or greater than line pressure to valves.
Salt in service line.	Not enough rinse time.	Check slow rinse and fast rinse time, adjust if necessary.
	Brine draw rate too slow.	Back pressure on injector.
	Back pressure on injector.	Check backwash flow controller or obstruction and remove obstruction.
	Salt dosage too high.	Check and adjust salt dosage.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

EXISTING EASY NEST SYSTEM
TROUBLESHOOTING GUIDE *CONTINUED*

Problem	Possible Cause	Solution
Brine tank overflow.	Brine valve malfunctioning.	Repair or replace brine valve.
Valve operation erratic or slow.	Insufficient control pressure to stager.	Check control pressure to the stager, must be equal to or greater than line pressure.
	Stager drain port restricted or plugged.	Check stager drain for restriction and/or obstruction.
Improper or no backwash flow.	Backwash flow controller plugged or obstructed.	Check backwash flow controller for obstruction and remove obstruction.
	Backwash valves 3 and 4 not opening.	Check stager port connected to valves 3 and 4. It should be vented. If pressured, check stager operation. If vented, check and repair diaphragm valve.
Improper or no fast rinse flow.	Backwash flow controller plugged or obstructed.	Check backwash flow controller for obstruction and remove obstruction.
	Rinse outlet, valve No. 6, not opening.	Check stager port connected to valve 6. It should be vented. If pressured, check stager operation. If vented, check and repair diaphragm valve.
Poor water quality.	Service flow rate too high.	Check and adjust flow rate, if necessary.
	Media bed channeling or scaled.	Backwash media to reclassify media bed and check media condition.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

COMPONENT TROUBLESHOOTING

Introduction

The Easy Nest Kit consists of three main components, Diaphragm Valves, Injector (for softeners) and Stager Controller. Troubleshooting guide for all three components is outlined below.

Diaphragm Valves

Problem	Possible Cause	Solution
Valve not closing.	Insufficient control pressure from stager port.	Check stager ports & tubing for obstruction.
	Valve disc damaged.	Disassemble valve and replace disc.
	Vent port plugged or obstructed.	Remove plug from vent port and check vent port for any obstruction, clear obstruction.
Valve operation slow or sluggish.	Tubing from stager is obstructed.	Remove obstruction.
	Vent port obstructed.	Remove obstruction.
Water leak through vent port when valve is closed. Water leak through vent port when valve is open.	Damaged diaphragm.	Replace diaphragm.
	Leak through the dynamic o-ring.	Disassemble valve and replace o-ring.
Water hammer when valve closes.	Excessive control pressure.	Reduce control pressure, must be equal to system pressure.
Valve does not open.	Stager drain port plugged or restricted.	Check and remove restriction from the stager drain port.

Stager

Problem	Possible Cause	Solution
Continuous leak to drain.	Foreign material between stem plate and gasket.	Clean & remove the foreign material.
	Stem plate and/or gasket worn or damaged.	Replace damaged parts.
Stager out of position, or not stopping at correct position. Stager not advancing.	Misaligned or damaged switch.	Align switch replace switch if damaged.
	Damaged motor.	Replace motor.
Stager ports not venting.	Restriction in tubing.	Check and remove restriction.
	Stager drain port plugged or restricted.	Check stager drain port and remove restriction.
No pressure at control ports. Low control pressure at the control ports.	Restricted or plugged control line to the stager. Control pressure must be equal to line pressure of the system.	Remove restriction.

Controller


Refer to the controller manual.


Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

4 POSITION SOFTENER (48-00 STAGER)

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	4	SERVICE	1,2	1,2
B				
C	1	BACKWASH	3,4	3,4,2A
D				
E	2	BRINE	5,6	5,6,2A
F	3	RINSE	1,6	1,6,2A

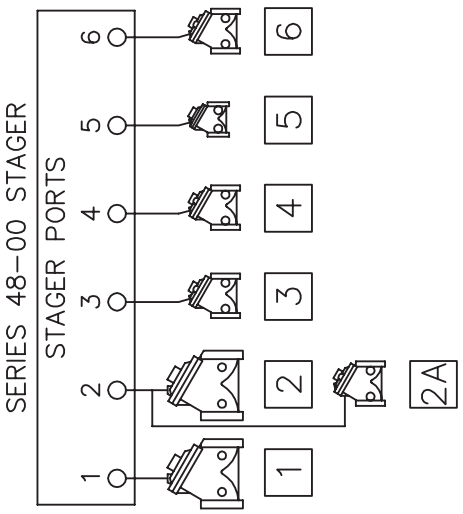

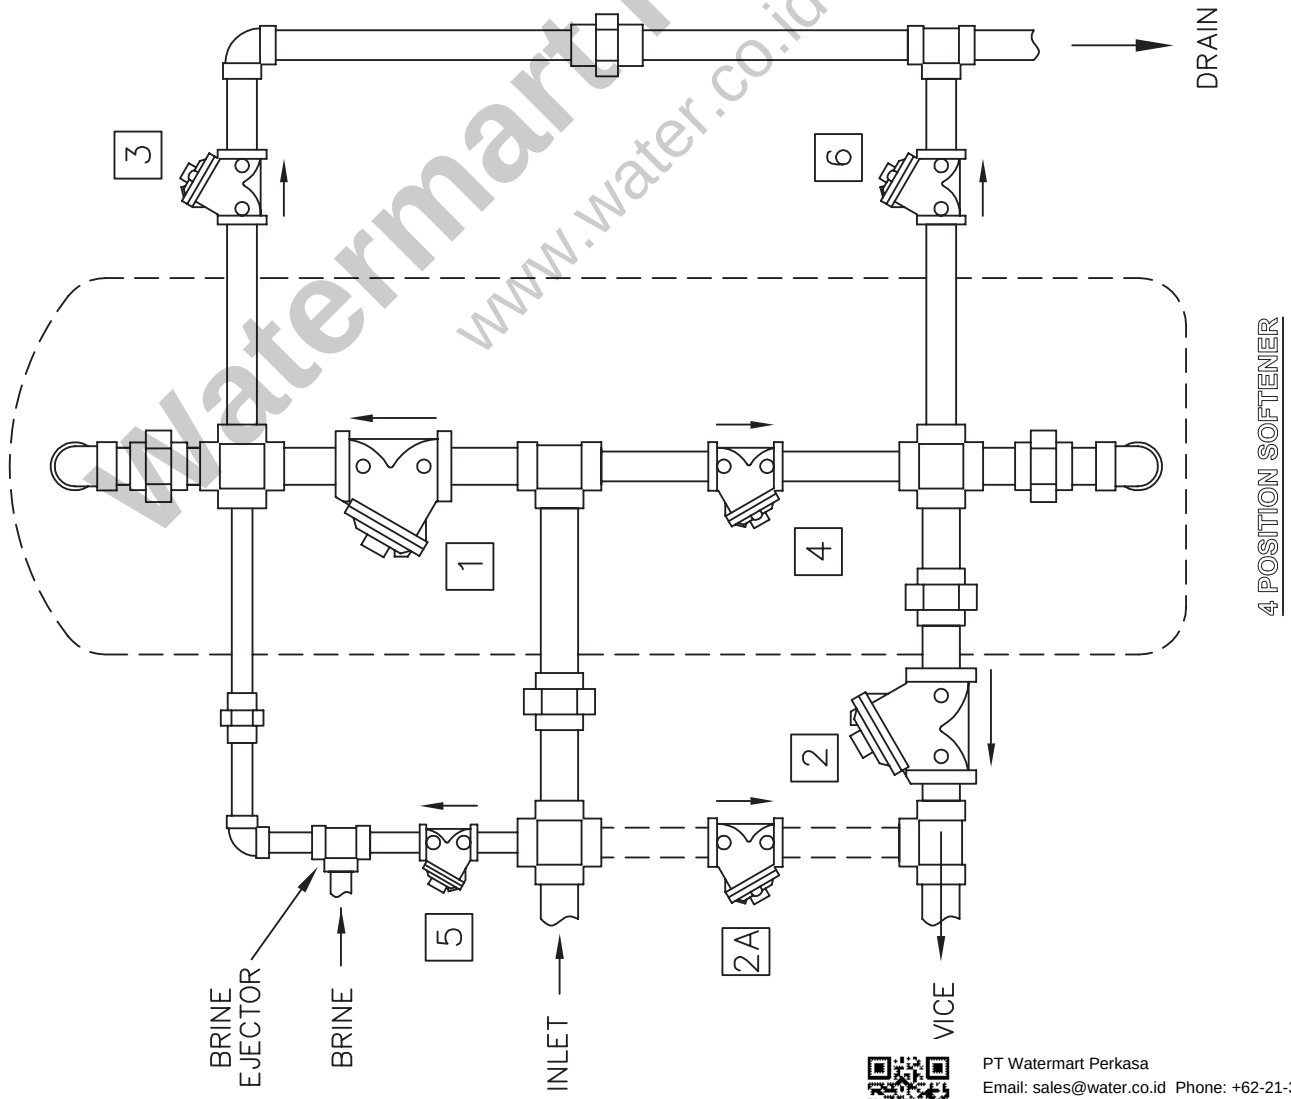


Watermart Perkasa
www.water.co.id


AQUAM

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

3 POSITION FILTER (48-01 STAGER)

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	3	SERVICE	1,2	1,2
B				
C	1	BACKWASH	3,4	3,4,2A
D				
E				
F	2	RINSE	1,6	1,6,2A

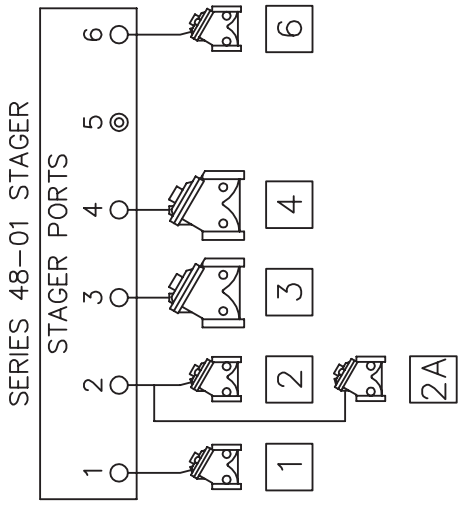


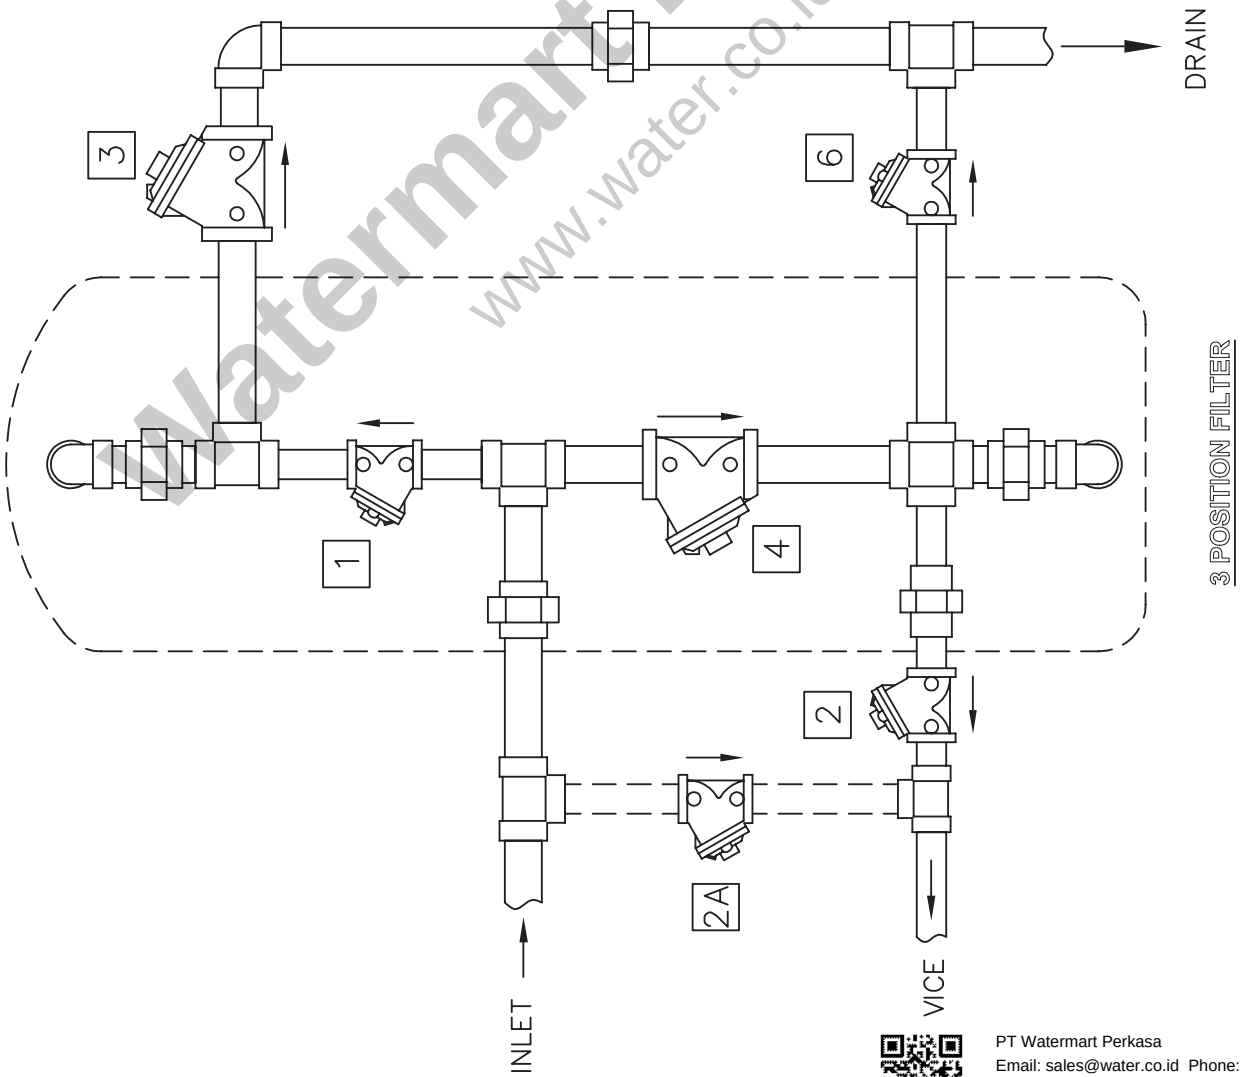


Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

2 TANK SEQUENTIAL FILTER (51-10 STAGER)

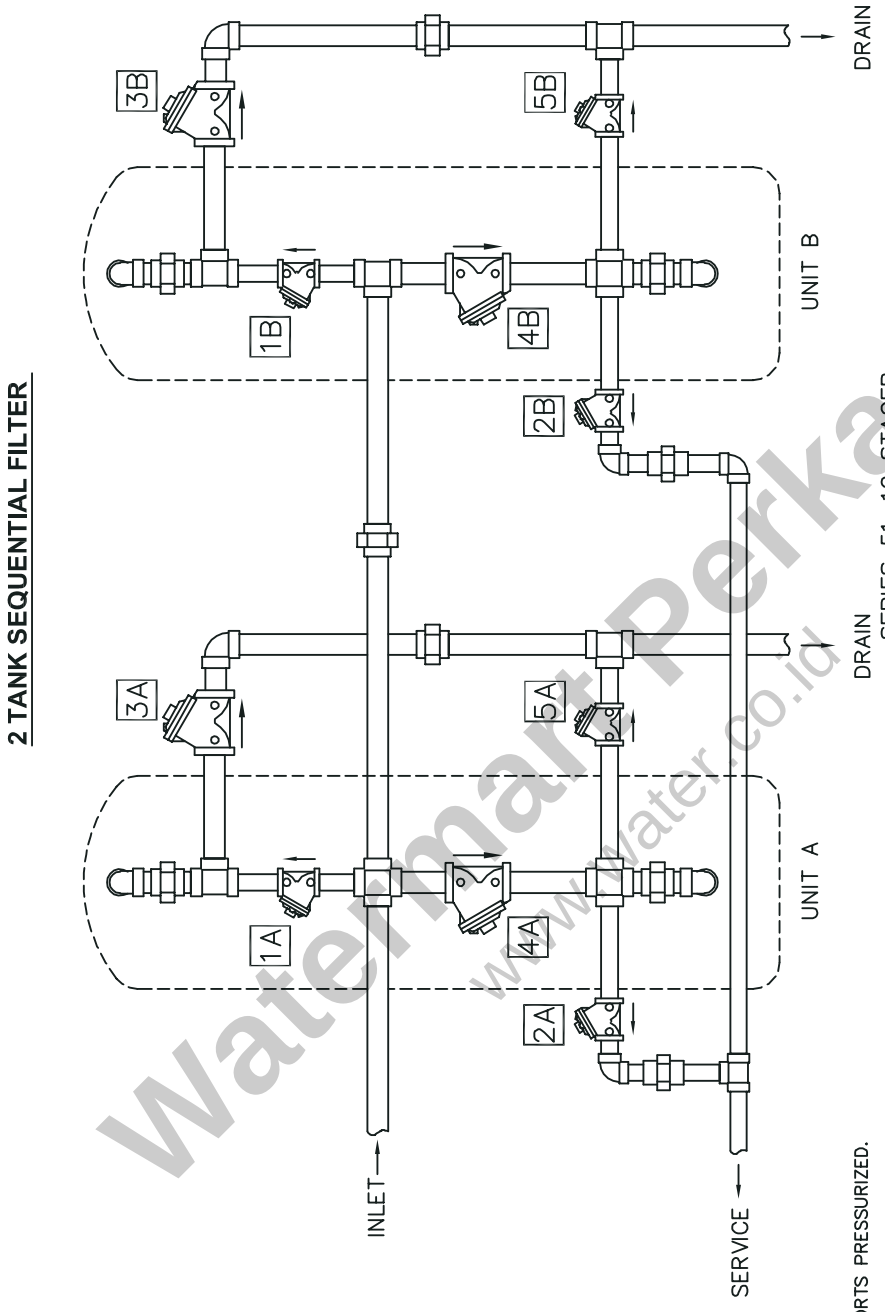

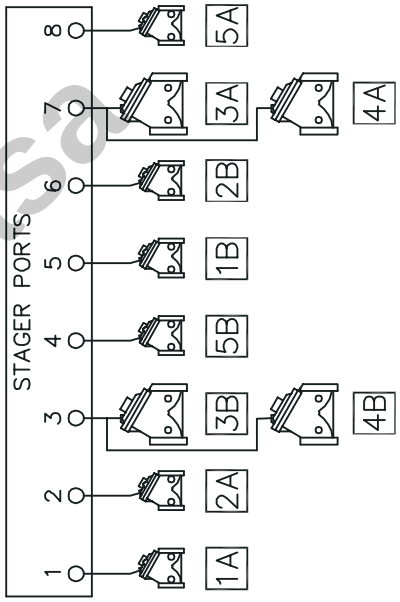

NOTE:


1. ALL OTHER PORTS PRESSURIZED.
2. ALL VALVES NORMALLY OPEN, PRESSURE TO CLOSE.
3. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	0	SERVICE	1,2,5,6	1A,2A,1B,2B
B	.....	.....	.....	.....
C	1	BACKWASH UNIT A	5,6,7	1B,2B,3A,4A
D	2	RINSE UNIT A	1,5,6,8	1A,1B,2B,5A
E	.....	.....	.....	.....
F	.....	.....	.....	.....
G	3	BACKWASH UNIT B	1,2,3	1A,2A,3B,4B
H	4	RINSE UNIT B	1,2,4,5	1A,2A,5B,1B

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

3 TANK SEQUENTIAL FILTER (58-03)

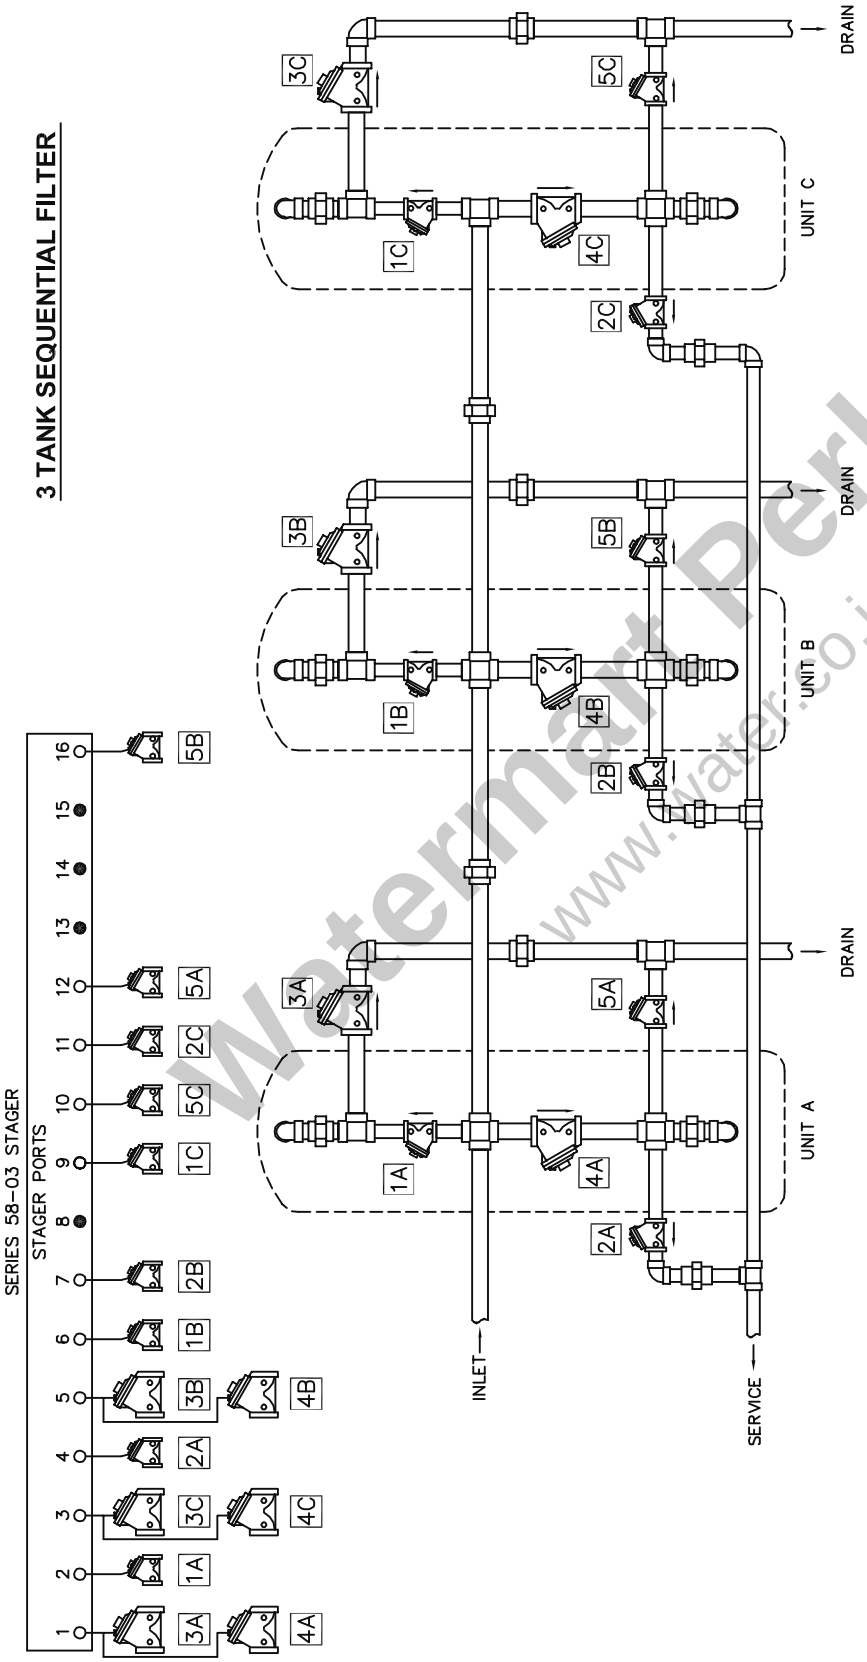


NOTE:
1. ALL OTHER PORTS PRESSURIZED.
2. ALL VALVES NORMALLY OPEN, PRESSURE TO CLOSE.
3. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN	NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
0	SERVICE	2,4,6,7,9,11	1A,2A,1B,2B,1C,2C	J				
				K				
1	BACKWASH UNIT A	1,6,7,9,11	3A,4A,1B,2B,1C,2C	L	5	BACKWASH UNIT C	2,3,4,6,7	1A,2A,1B,2B,3C,4C
2	RINSE UNIT A	2,6,7,9,11,12	1A,5A,1B,2B,1C,2C	M	6	RINSE UNIT C	2,4,6,7,9,10	1A,2A,1B,2B,1C,5C
				N				
				P				
3	BACKWASH UNIT B	2,4,5,9,11	1A,2A,3B,4B,1C,2C	Q				
4	RINSE UNIT B	2,4,6,9,11,16	1A,2A,1B,5B,1C,2C	R				

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

4 TANK SEQUENTIAL FILTER (58-04 STAGER)

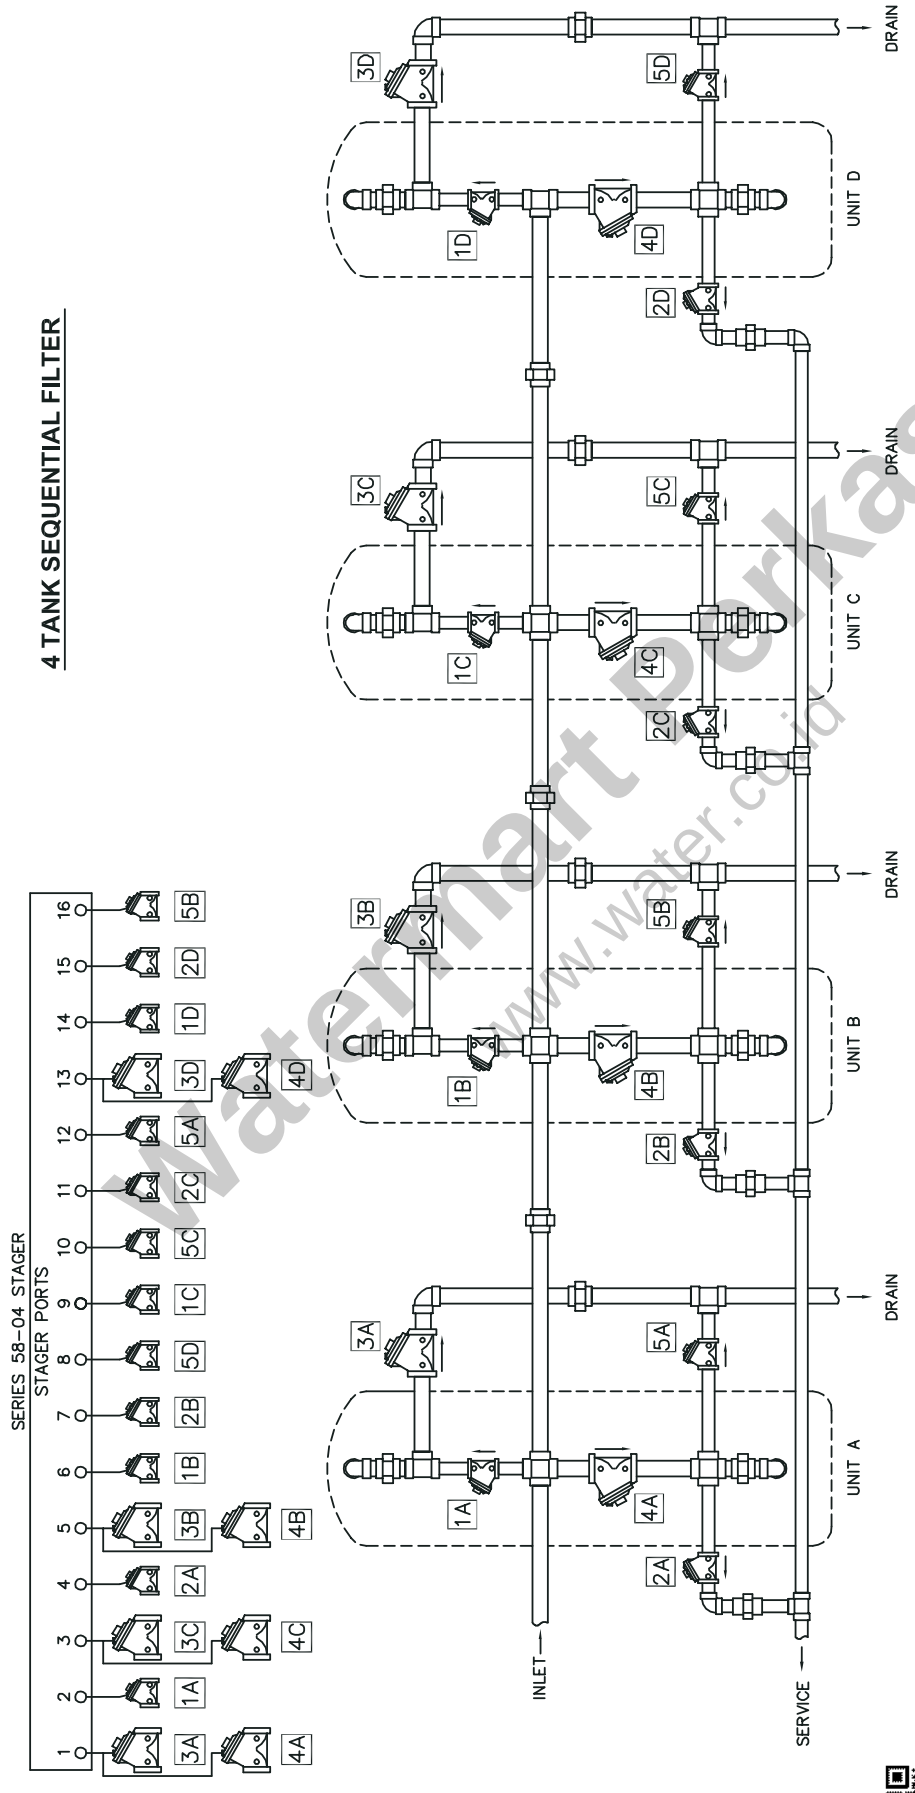


POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN	NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
0	SERVICE	2,4,6,7,9,11	1A,2A,1B,2B,1C,2C,1D,2D	J				
				K				
1	BACKWASH UNIT A	1,6,7,9,11	3A,4A,1B,2B,1C,2C,1D,2D	L	5	BACKWASH UNIT C	2,3,4,6,7	1A,3C,4C,2A,1B,2B,1D,2D
2	RINSE UNIT A	2,6,7,9,11,12	1A,1B,2B,1C,2C,5A,1D,2D	M	6	RINSE UNIT C	2,4,6,7,9,10	1A,2A,1B,2B,1C,5C,1D,2D
				N				
				P				
3	BACKWASH UNIT B	2,4,5,9,11	1A,2A,3B,4B,1C,2C,1D,2D	Q	7	BACKWASH UNIT D	2,4,6,7,9,11,13	1A,2A,1B,2B,1C,2C,(3D,4D)
4	RINSE UNIT B	2,4,6,9,11,16	1A,2A,1B,1C,2C,1D,2D,5B	R	8	RINSE UNIT D	2,4,6,7,8,9,11,14	1A,2A,1B,2B,5D,1C,2C,1D

Watermart Perkasa
www.water.co.id

AQUAMA

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

TWO TANK ALTERNATING SOFTENER (58-TA STAGER)

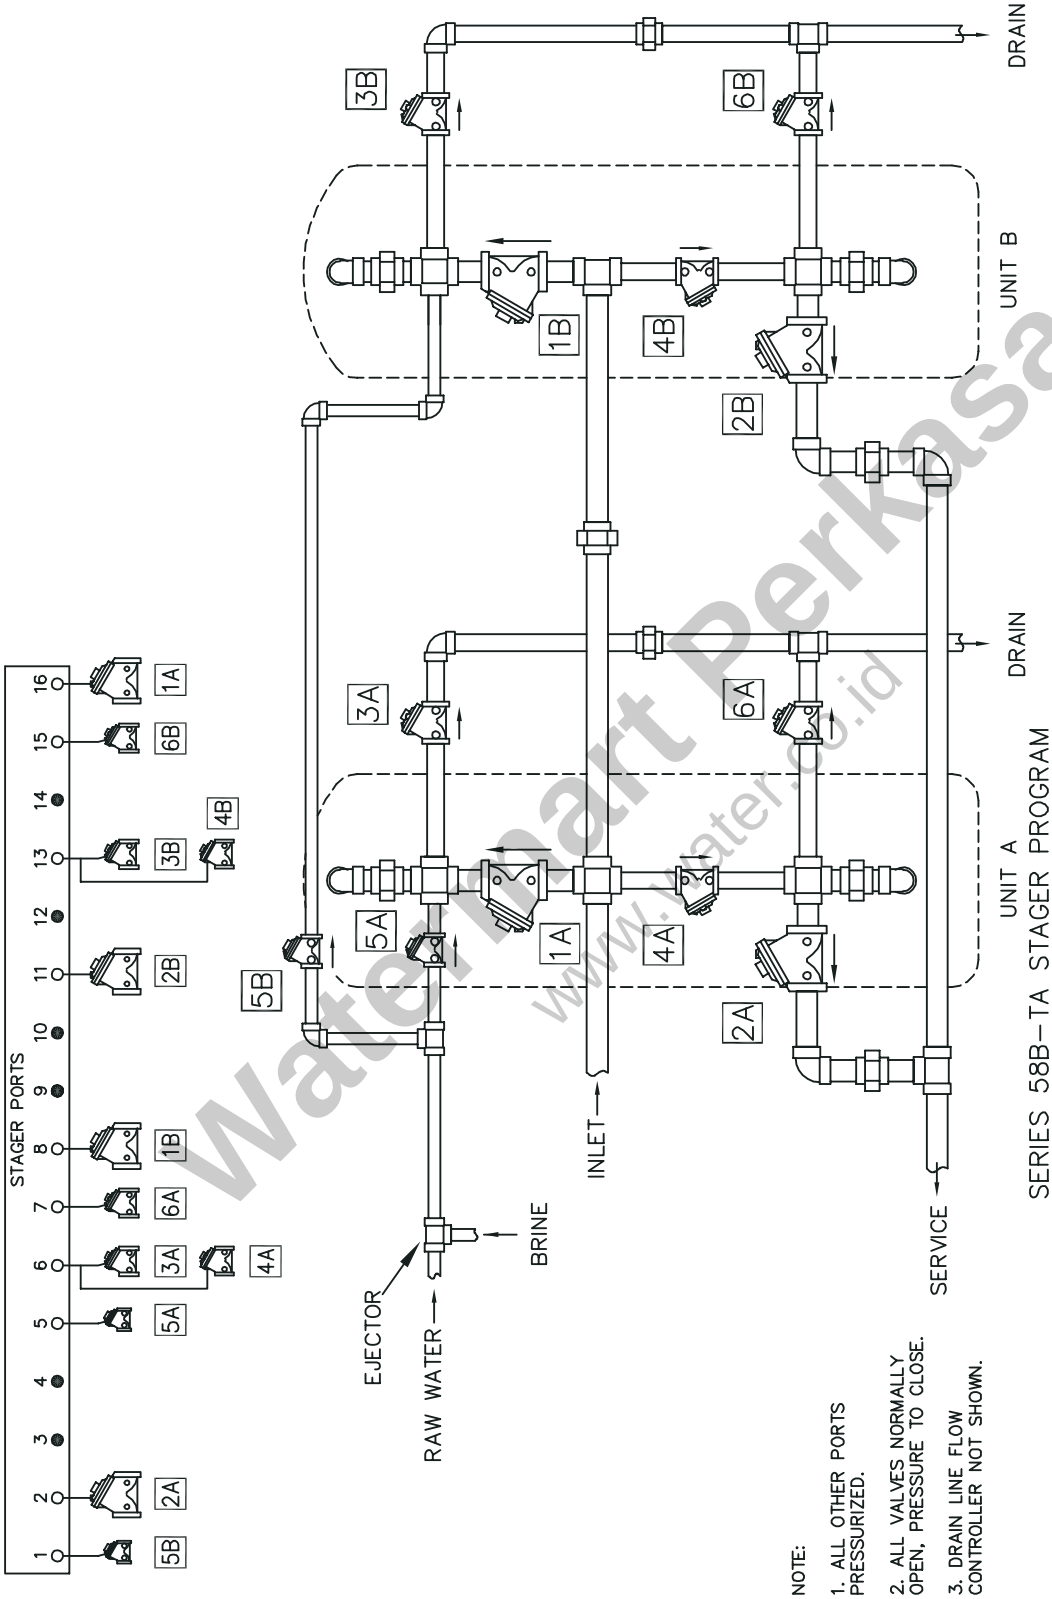

NOTCH	POS.	FUNCTION UNIT A	FUNCTION UNIT B	PORTS VENTED (NOTE 1)	VALVES OPEN
A	0	SERVICE	STANDBY	1,2,8,16	5B,2A,1B,1A
B					
C					
D	1	BACKWASH	SERVICE	6,8,11	3A,4A,2B,1B
E	2	BRINE/SLOW RINSE	SERVICE	5,7,8,11	5A,6A,2B,1B
F					
G					
H	3	FAST RINSE	SERVICE	7,8,11,16	6A,1B,2B,1A

NOTCH	POS.	FUNCTION UNIT A	FUNCTION UNIT B	PORTS VENTED (NOTE 1)	VALVES OPEN
J	4	STANDBY	SERVICE	8,11,16	1B,2B,1A
K					
L					
M					
N					
P	6	SERVICE	BACKWASH	2,13,16	2A,3B,4B,1A
Q	7	SERVICE	BRINE/SLOW RINSE	1,2,15,16	5B,2A,6B,1A
R	8	SERVICE	FAST RINSE	2,8,15,16	2A,1B,6B,1A

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Watermart Perkasa
www.water.co.id

16605 West Victor Rd. New Berlin, WI 53151
P: 262-326-0100 | www.aq-matic.com | techsupport@aq-matic.com

© 2016 AQ Matic Valve and Controls Company, Inc. All rights reserved.


All AQ Matic trademarks and logos are owned by AQ Matic or its affiliates. All other registered and unregistered trademarks and logos are the property of their respective owners. Because we are continuously improving our products and services, AQ Matic reserves the right to change specifications without prior notice. AQ Matic is an equal opportunity employer.

1084369 REV D MA2016

AQUAMA

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


4 POSITION SOFTENER (48-00 STAGER)

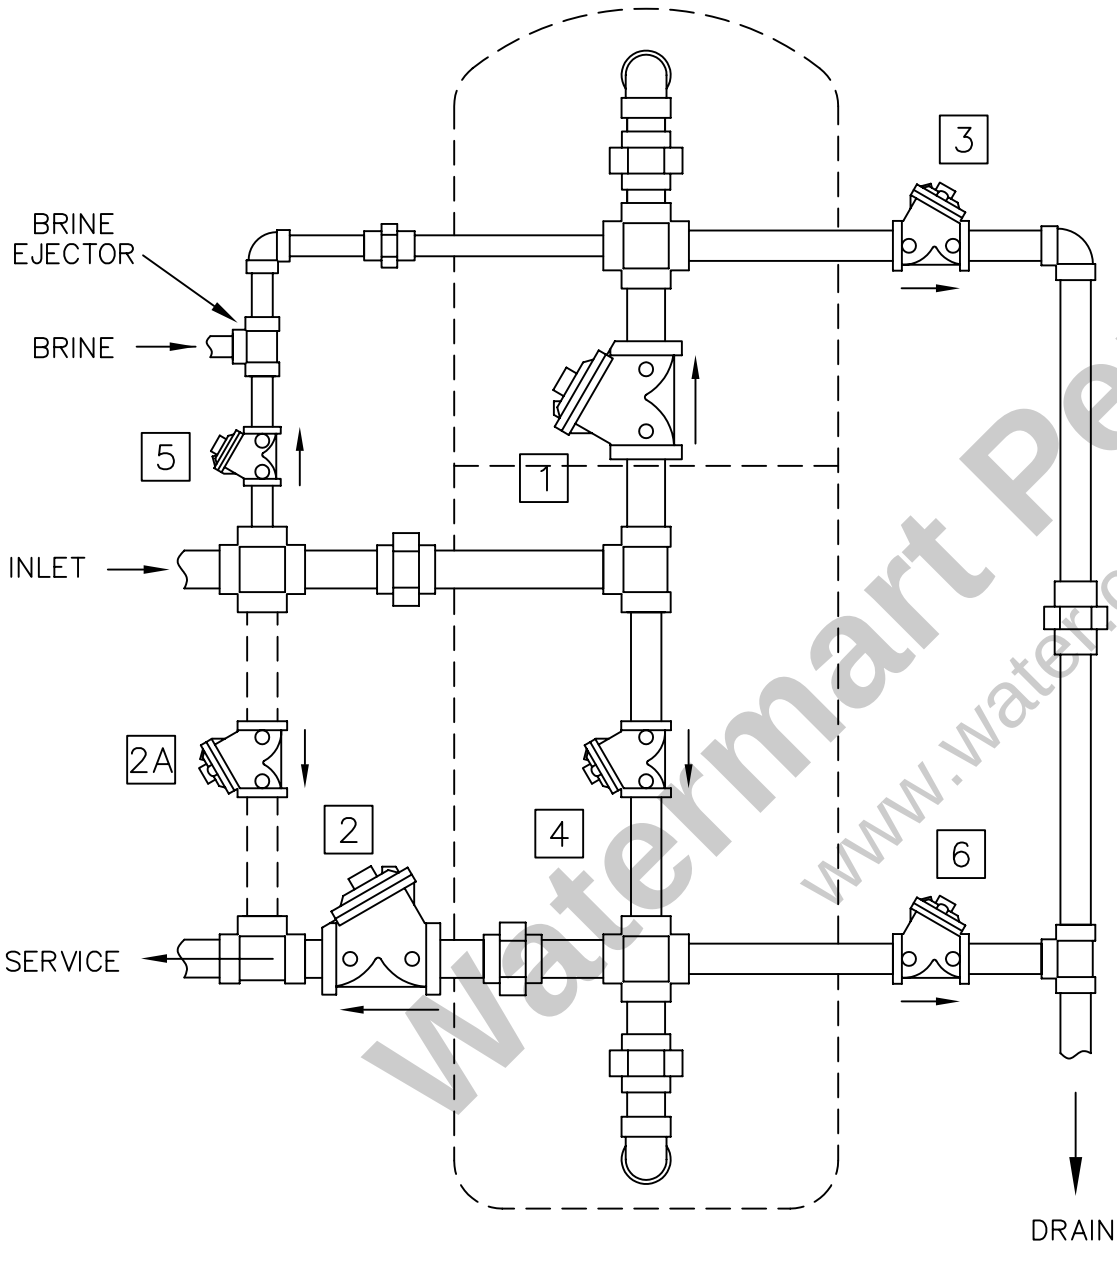

4 POSITION SOFTENER

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	4	SERVICE	1,2	1,2
B				
C	1	BACKWASH	3,4	3,4,2A
D				
E	2	BRINE	5,6	5,6,2A
F	3	RINSE	1,6	1,6,2A

SERIES 48–00 STAGER

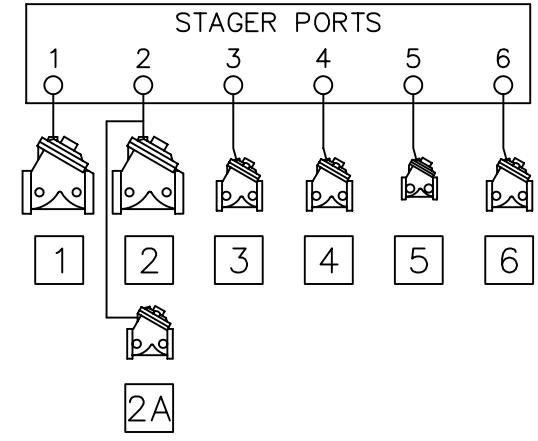

NOTE:

1. ALL OTHER PORTS PRESSURIZED.

2. ALL VALVES (EXCEPT NO. 2A) NORMALLY OPEN, PRESSURE TO CLOSE. VALVE 2A NORMALLY CLOSED.

3. VALVE 2A REQUIRED FOR RAW WATER BYPASS DURING REGENERATION.

4. BRINE VALVE AND DRAIN LINE FLOW CONTROLLER NOT SHOWN.

REV	DESCRIPTION	ECO	DWN	DATE	APVD
B	CHANGED PIPING TO VALVE 2A TO BE DOTTED	NONE	MSM	15APR03	
A	INITIAL RELEASE	NONE	JWB	31JUL01	MSM

aQmatic
16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

4 POSITION SOFTENER


SCALE | DRAWN | DATE | DWG NO

PRINTED IN U.S.A.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


3 POSITION FILTER (48-01 STAGER)

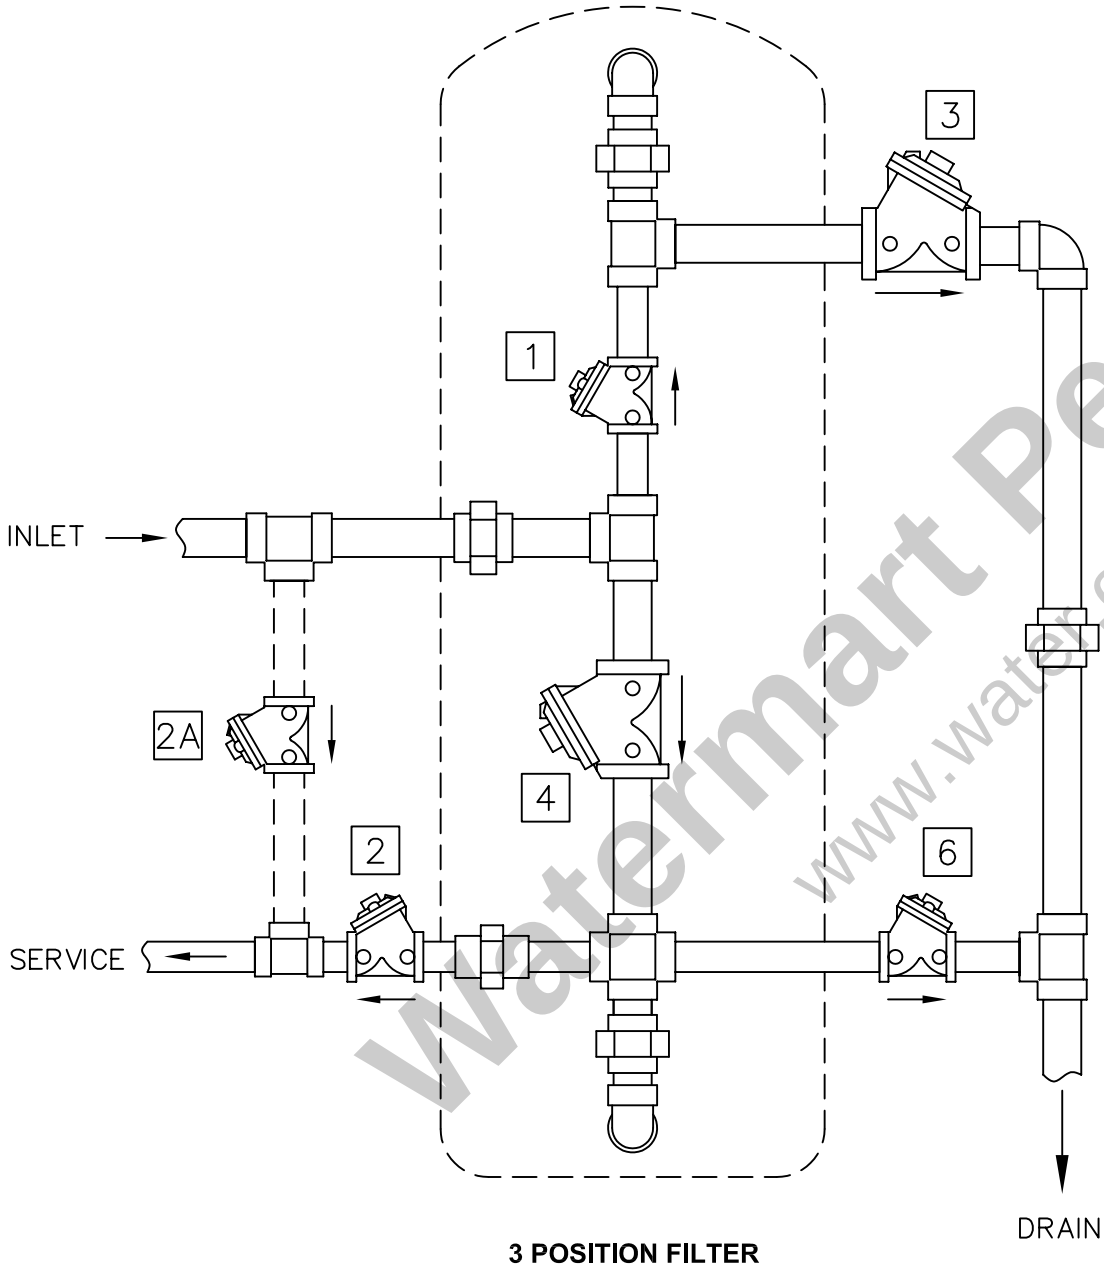

3 POSITION FILTER

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	3	SERVICE	1,2	1,2
B				
C	1	BACKWASH	3,4	3,4,2A
D				
E				
F	2	RINSE	1,6	1,6,2A

SERIES 48–01 STAGER

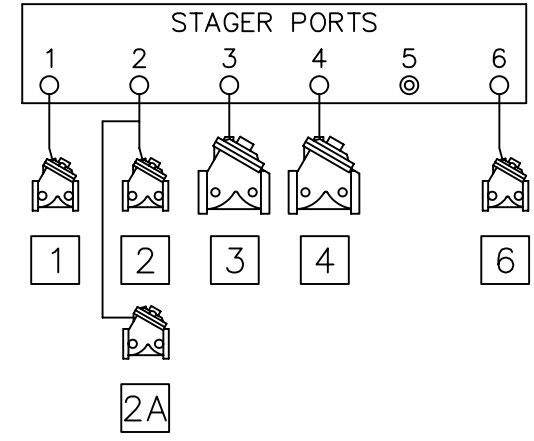

NOTE:

1. ALL OTHER PORTS PRESSURIZED.
2. ALL VALVES (EXCEPT NO. 2A) NORMALLY OPEN, PRESSURE TO CLOSE. VALVE 2A NORMALLY CLOSED.
3. VALVE 2A REQUIRED FOR RAW WATER BYPASS DURING REGENERATION.
4. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

REV	DESCRIPTION	ECO	DWN	DATE	APVD
B	CHANGED PIPING TO VALVE 2A TO BE DOTTED	NONE	MSM	15APR03	
A	INITIAL RELEASE	NONE	JWB	31JUL01	MSM

aQMatic
16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

3 POSITION FILTER


SCALE	DRAWN	DATE	DWG. NO.

PRINTED IN U.S.A.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


2 POSITION FILTER (48-04 STAGER)

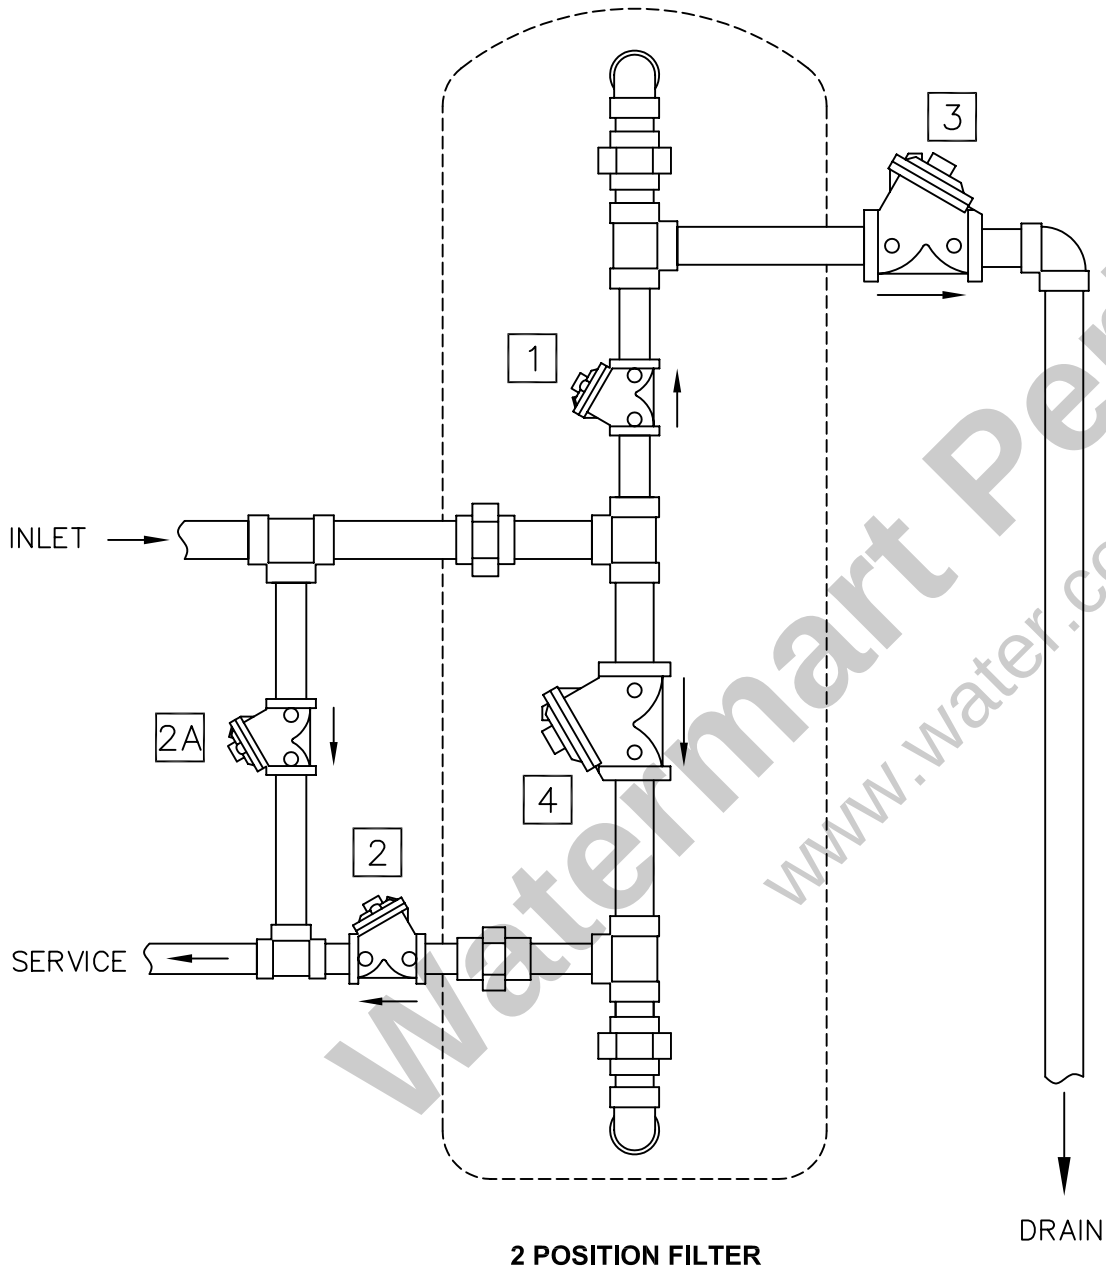

2 POSITION FILTER

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	2	SERVICE	1,2	1,2
B				
C	1	BACKWASH	3,4	3,4,2A
D				
E				
F				

SERIES 48–04 STAGER

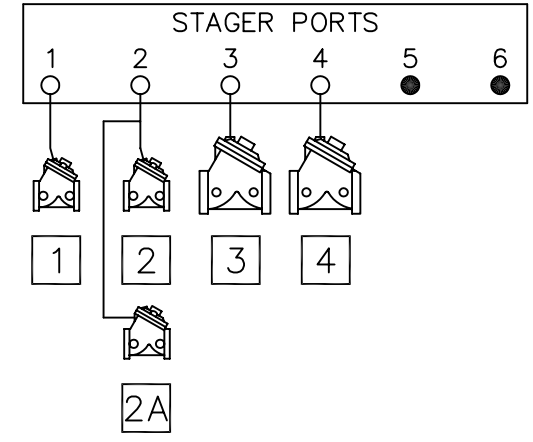

NOTE:

1. ALL OTHER PORTS PRESSURIZED.

2. ALL VALVES (EXCEPT NO. 2A) NORMALLY OPEN, PRESSURE TO CLOSE. VALVE 2A NORMALLY CLOSED.

3. VALVE 2A REQUIRED FOR RAW WATER BYPASS DURING REGENERATION.

4. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

REV	DESCRIPTION	ECO	DWN	DATE	APVD
A	INITIAL RELEASE	NONE	JWB	31JUL01	

AQ Matic
16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

2 POSITION FILTER


SCALE	DRAWN	DATE	DWG NO

PRINTED IN U.S.A.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


4 POS. SOFTENER COUNTER CURRENT REGEN. (48-12 STAGE

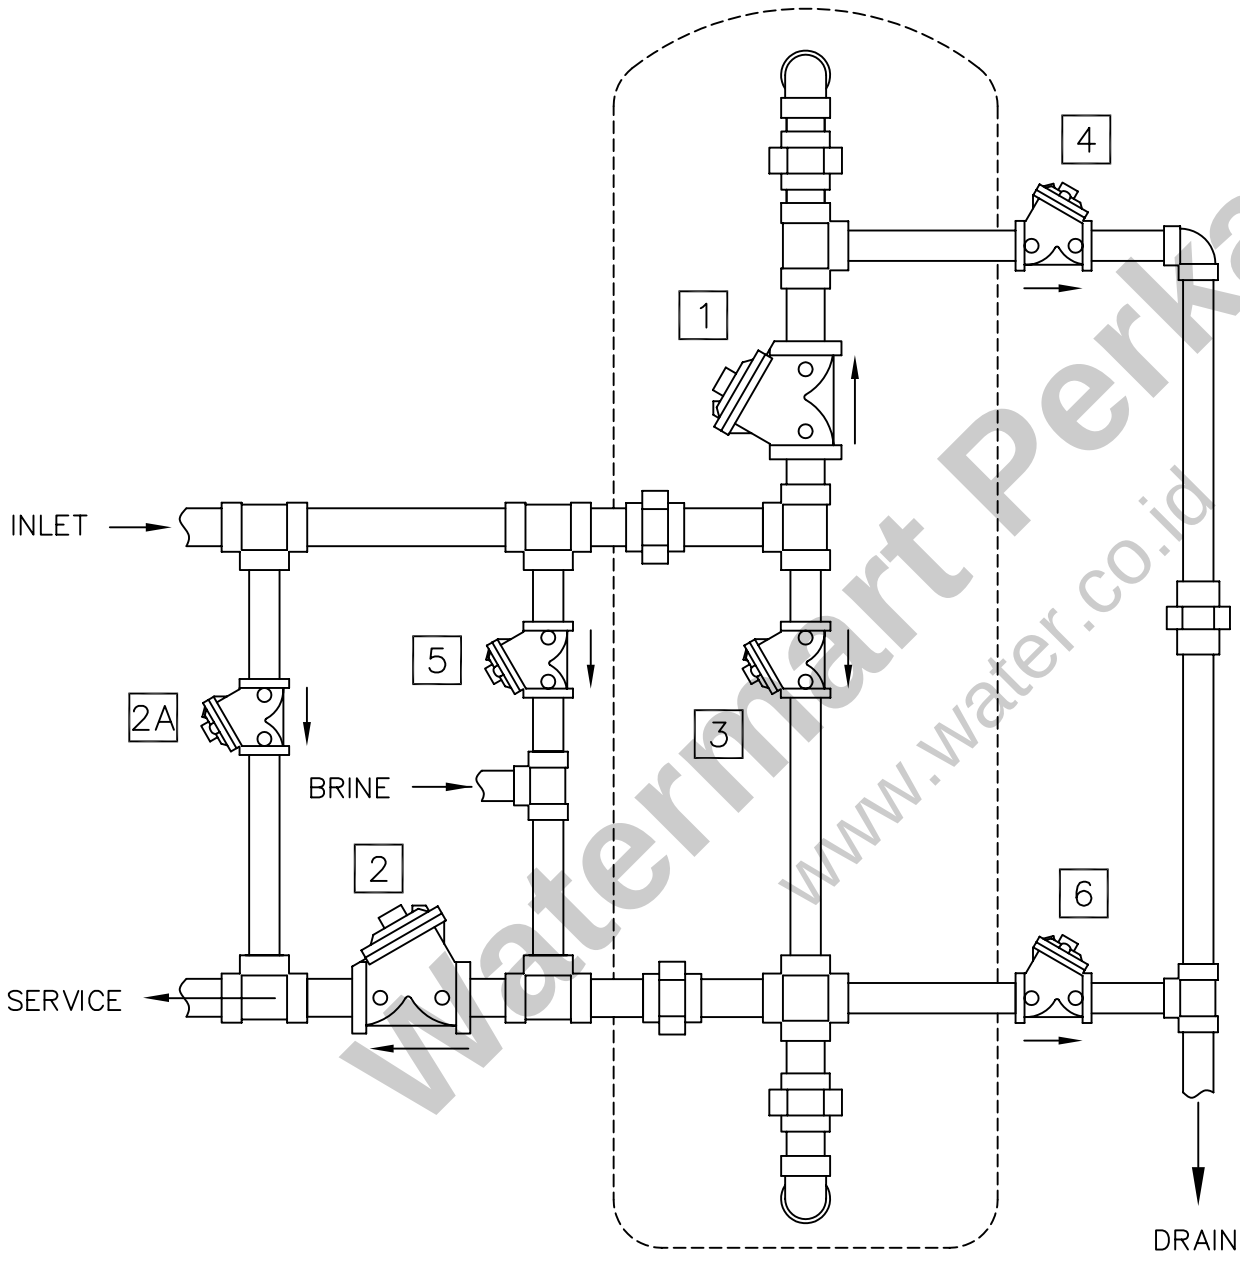

4 POSITION SOFTENER COUNTER CURRENT REGENERATION

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	4	SERVICE	1,2	1,2
B				
C	1	BACKWASH	3,4	3,4,2A
D	2	BRINE	4,5	4,5,2A
E				
F	3	RINSE	1,6	1,6,2A

SERIES 48–12 STAGER

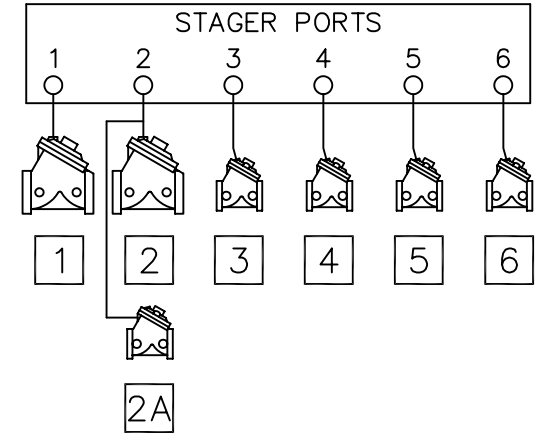

NOTE:

1. ALL OTHER PORTS PRESSURIZED.
2. ALL VALVES (EXCEPT NO. 2A) NORMALLY OPEN, PRESSURE TO CLOSE. VALVE 2A NORMALLY CLOSED.
3. VALVE 2A REQUIRED FOR RAW WATER BYPASS DURING REGENERATION.
4. BRINE VALVE AND DRAIN LINE FLOW CONTROLLER NOT SHOWN.

REV	DESCRIPTION	ECO	DWN	DATE	APVD
A	INITIAL RELEASE	NONE	JWB	31JUL01	

AQMatic
16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

4 POSITION SOFTENER COUNTER CURRENT REGENERATION


SCALE | DRAWN | DATE | DWG. NO.

PRINTED IN U.S.A.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


4 POSITION FILTER W/ AIR SCOUR (48-12 STAGER)

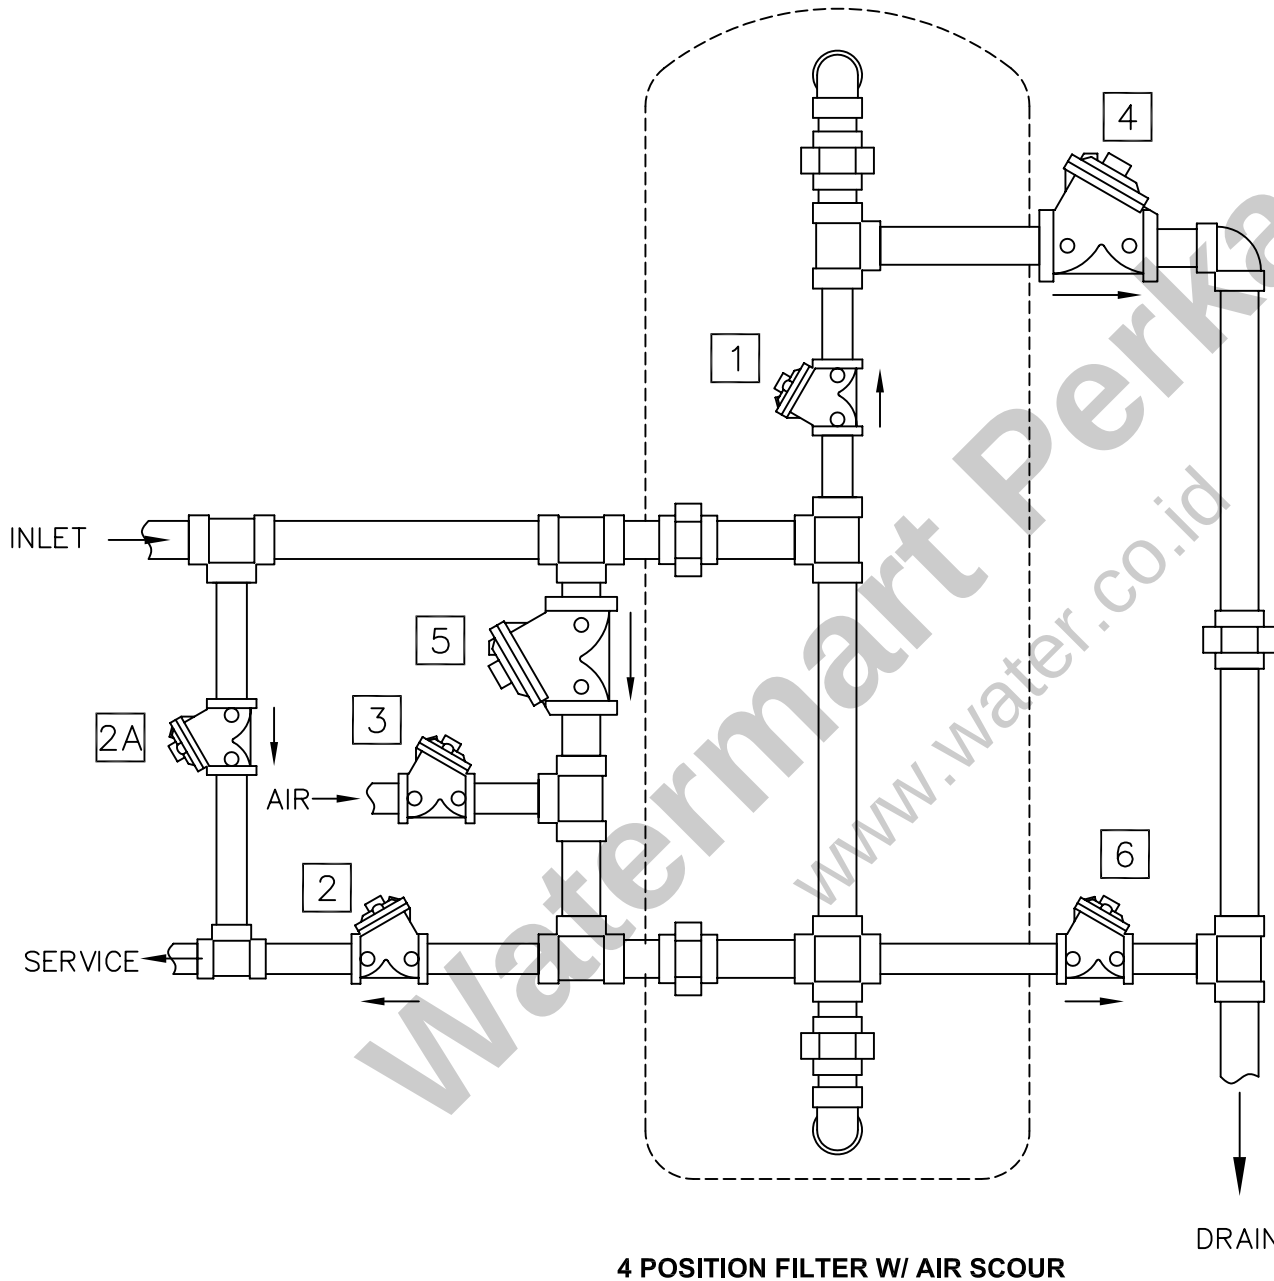

4 POSITION FILTER W/ AIR SCOUR

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	4	SERVICE	1,2	1,2
B				
C	1	AIR SCOUR	3,4	3,4,2A
D	2	BACKWASH	4,5	4,5,2A
E				
F	3	RINSE	1,6	1,6,2A

SERIES 48–12 STAGER

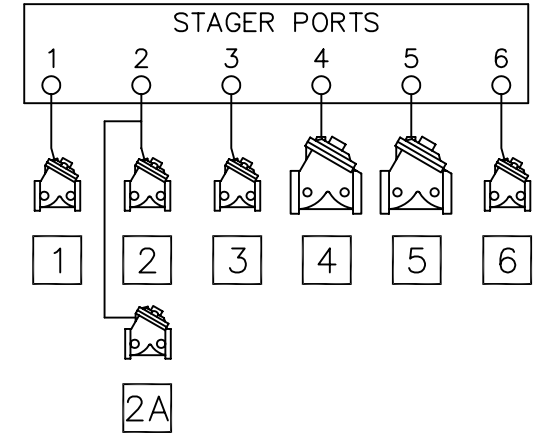

NOTE:

1. ALL OTHER PORTS PRESSURIZED.
2. ALL VALVES (EXCEPT NO. 2A) NORMALLY OPEN, PRESSURE TO CLOSE. VALVE 2A NORMALLY CLOSED.
3. VALVE 2A REQUIRED FOR RAW WATER BYPASS DURING REGENERATION.
4. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

REV	DESCRIPTION	ECO	DWN	DATE	APVD
A	INITIAL RELEASE	NONE	JWB	31JUL01	

AQMatic
16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

4 POSITION FILTER W/ AIR SCOUR

SCALE | DRAWN | DATE | DWG NO


PRINTED IN U.S.A.

Watermart Perkasa
www.water.co.id


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

3 TANK SEQUENTIAL FILTER (48-83 STAGER

3 TANK SEQUENTIAL FILTER BACKWASH ONLY

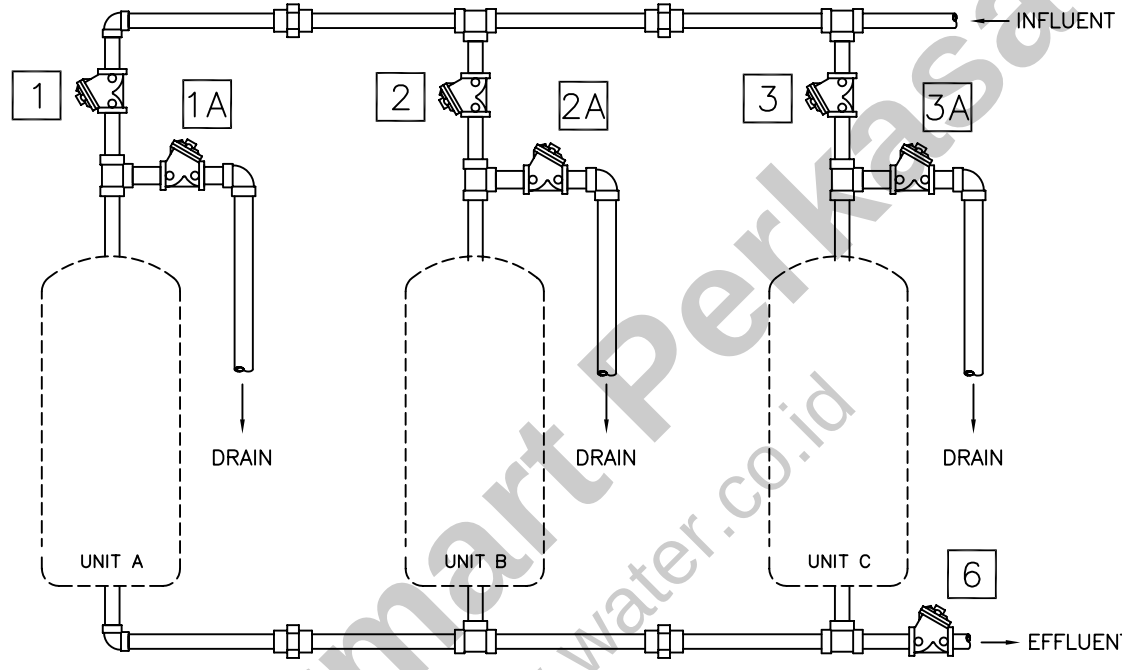

SERIES 48–83 STAGER

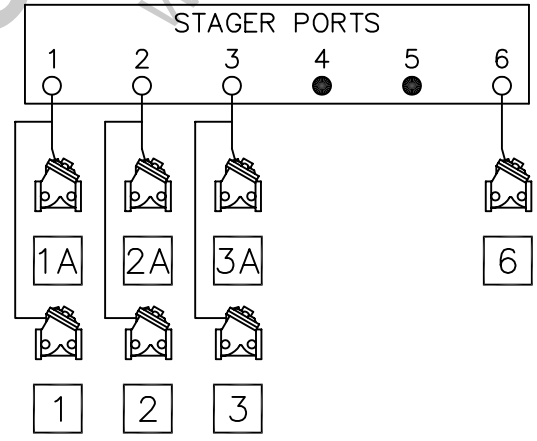

NOTE:

1. ALL OTHER PORTS PRESSURIZED.
2. VALVES 1A,2A,3A,6 ARE NORMALLY OPEN PRESSURE TO CLOSE.
3. VALVES 1,2,3 ARE NORMALLY CLOSED, PRESSURE TO OPEN.

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	2	BACKWASH UNIT B	2	1,2A,3
B	3	BACKWASH UNIT C	3	1,2,3A
C				
D				
E	4	SERVICE	6	1,2,3,6
F	1	BACKWASH UNIT A	1	1A,2,3

PRINTED IN U.S.A.

REV	DESCRIPTION	ECO	DWN	DATE	APVD
A	INITIAL RELEASE	NONE	MSM	31JUL01	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

3 TANK SEQUENTIAL FILTER BACKWASH ONLY


SCALE | DRAWN | DATE | DWG. NO.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


4 TANK SEQUENTIAL FILTER (48-84 STAGER

4 TANK SEQUENTIAL FILTER BACKWASH ONLY

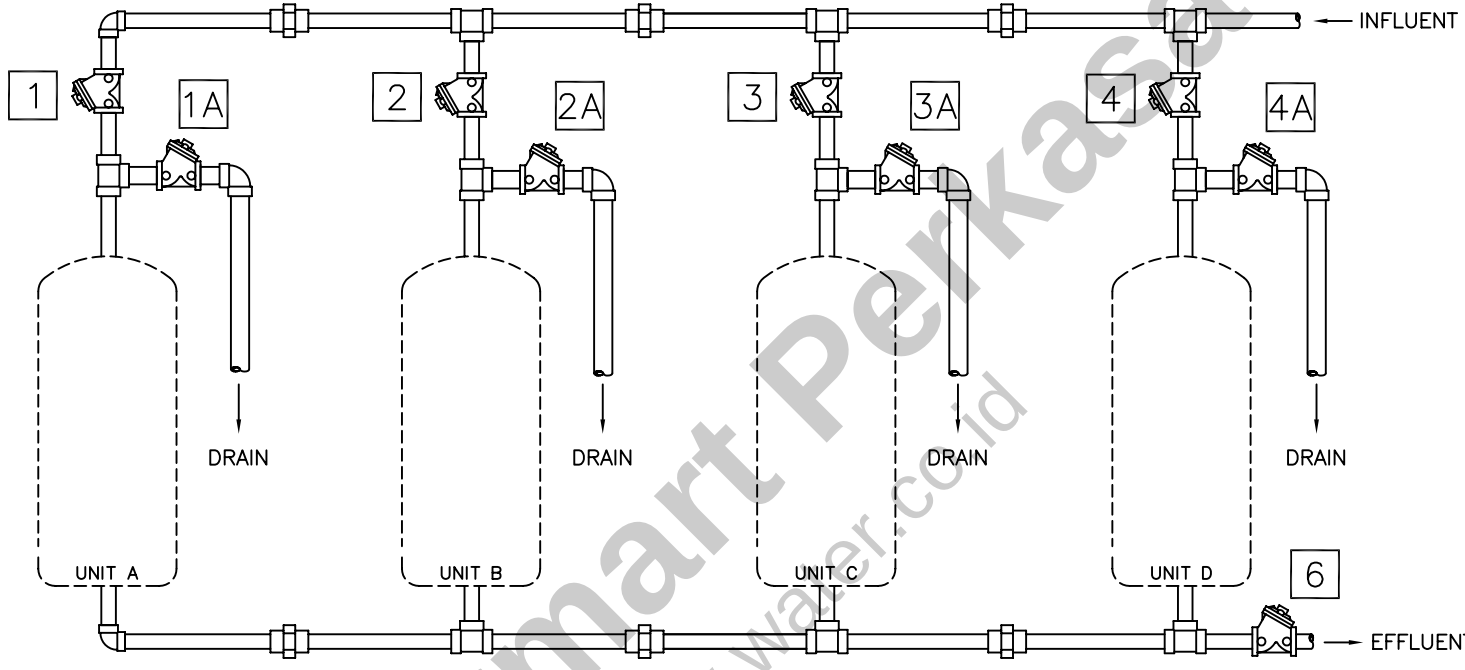

Watermart Perkasa
www.water.co.id

SERIES 48–84 STAGER

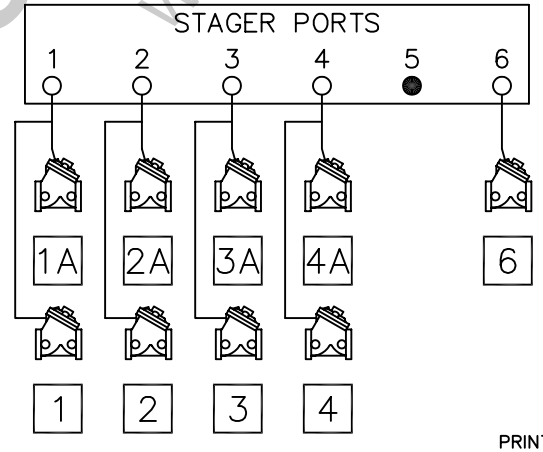

NOTE:

1. ALL OTHER PORTS PRESSURIZED.
2. VALVES 1A,2A,3A,4A,6 ARE NORMALLY OPEN PRESSURE TO CLOSE.
3. VALVES 1,2,3,4 ARE NORMALLY CLOSED, PRESSURE TO OPEN.

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	2	BACKWASH UNIT B	2	1,2A,3,4
B	3	BACKWASH UNIT C	3	1,2,3A,4
C	4	BACKWASH UNIT D	4	1,2,3,4A
D				
E	5	SERVICE	6	1,2,3,4,6
F	1	BACKWASH UNIT A	1	1A,2,3,4

REV	DESCRIPTION	ECO	DWN	DATE	APVD
A	INITIAL RELEASE	NONE	MSM	31JUL01	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

4 TANK SEQUENTIAL FILTER BACKWASH ONLY


SCALE | DRAWN | DATE | DWG NO

PRINTED IN U.S.A.

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

5 TANK SEQUENTIAL FILTER (48-85 STAGER)

5 TANK SEQUENTIAL FILTER BACKWASH ONLY

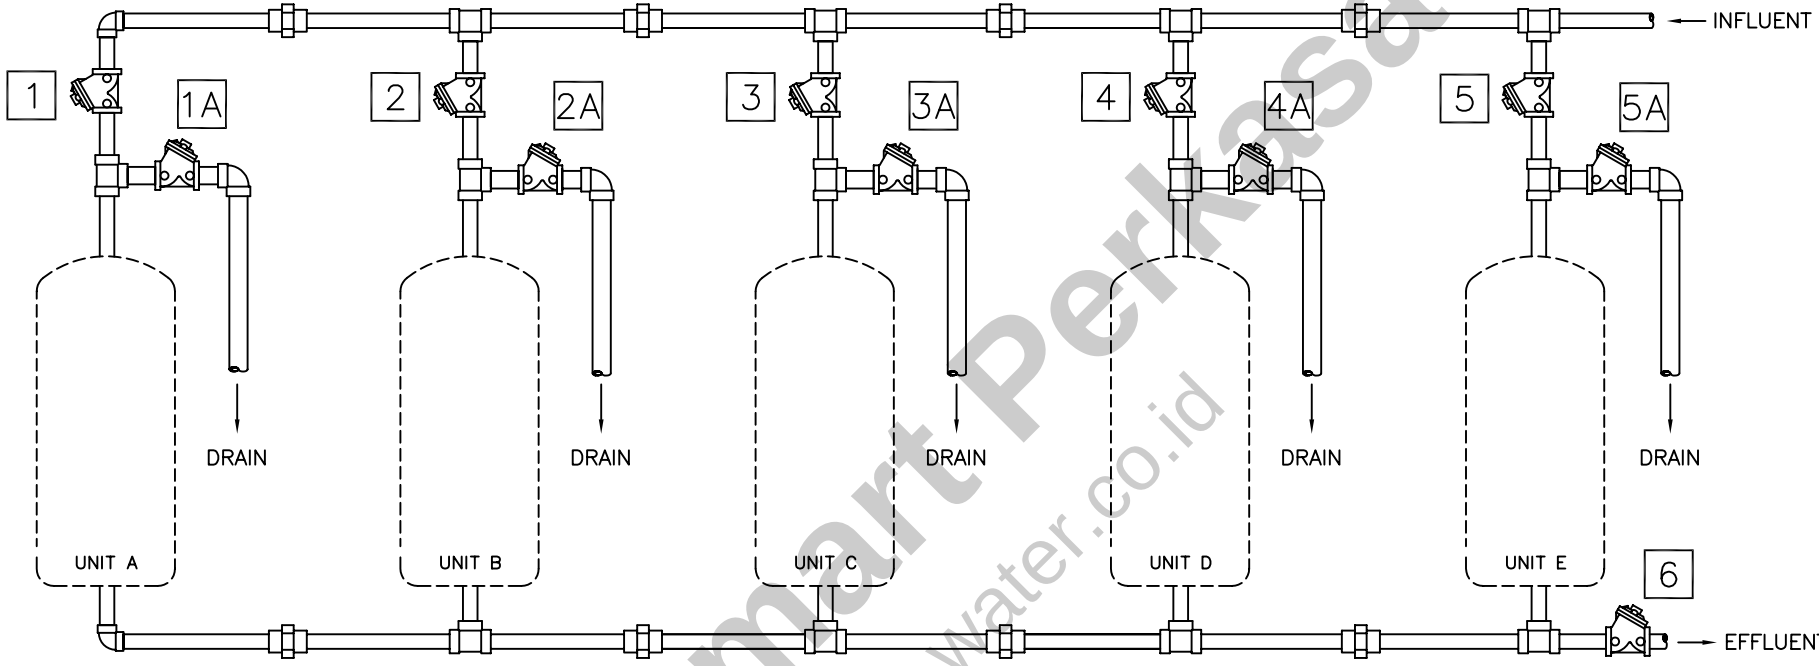


NOTE:

1. ALL OTHER PORTS PRESSURIZED.
2. VALVES 1A,2A,3A,4A,5A,6 ARE NORMALLY OPEN PRESSURE TO CLOSE.
3. VALVES 1,2,3,4,5 ARE NORMALLY CLOSED, PRESSURE TO OPEN.

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	2	BACKWASH UNIT B	2	1,2A,3,4,5
B	3	BACKWASH UNIT C	3	1,2,3A,4,5
C	4	BACKWASH UNIT D	4	1,2,3,4A,5
D	5	BACKWASH UNIT E	5	1,2,3,4,5A
E	6	SERVICE	6	1,2,3,4,5,6
F	1	BACKWASH UNIT A	1	1A,2A,3,4,5

SERIES 48–85 STAGER

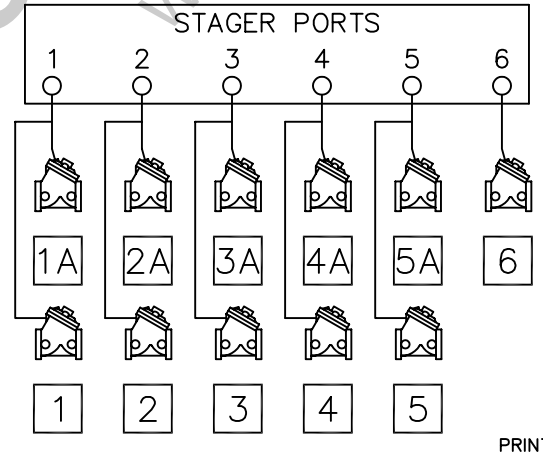

PRINTED IN U.S.A.

REV	DESCRIPTION	ECO	DWN	DATE	APVD
A	INITIAL RELEASE	NONE	JWB	31JUL01	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com


5 TANK SEQUENTIAL FILTER BACKWASH ONLY

SCALE | DRAWN | DATE | DWG NO

Watermart Perkasa
www.water.co.id


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

6 POS. SOFTENER W/ TIMED BRINE & REFILL (51-06 STAGER

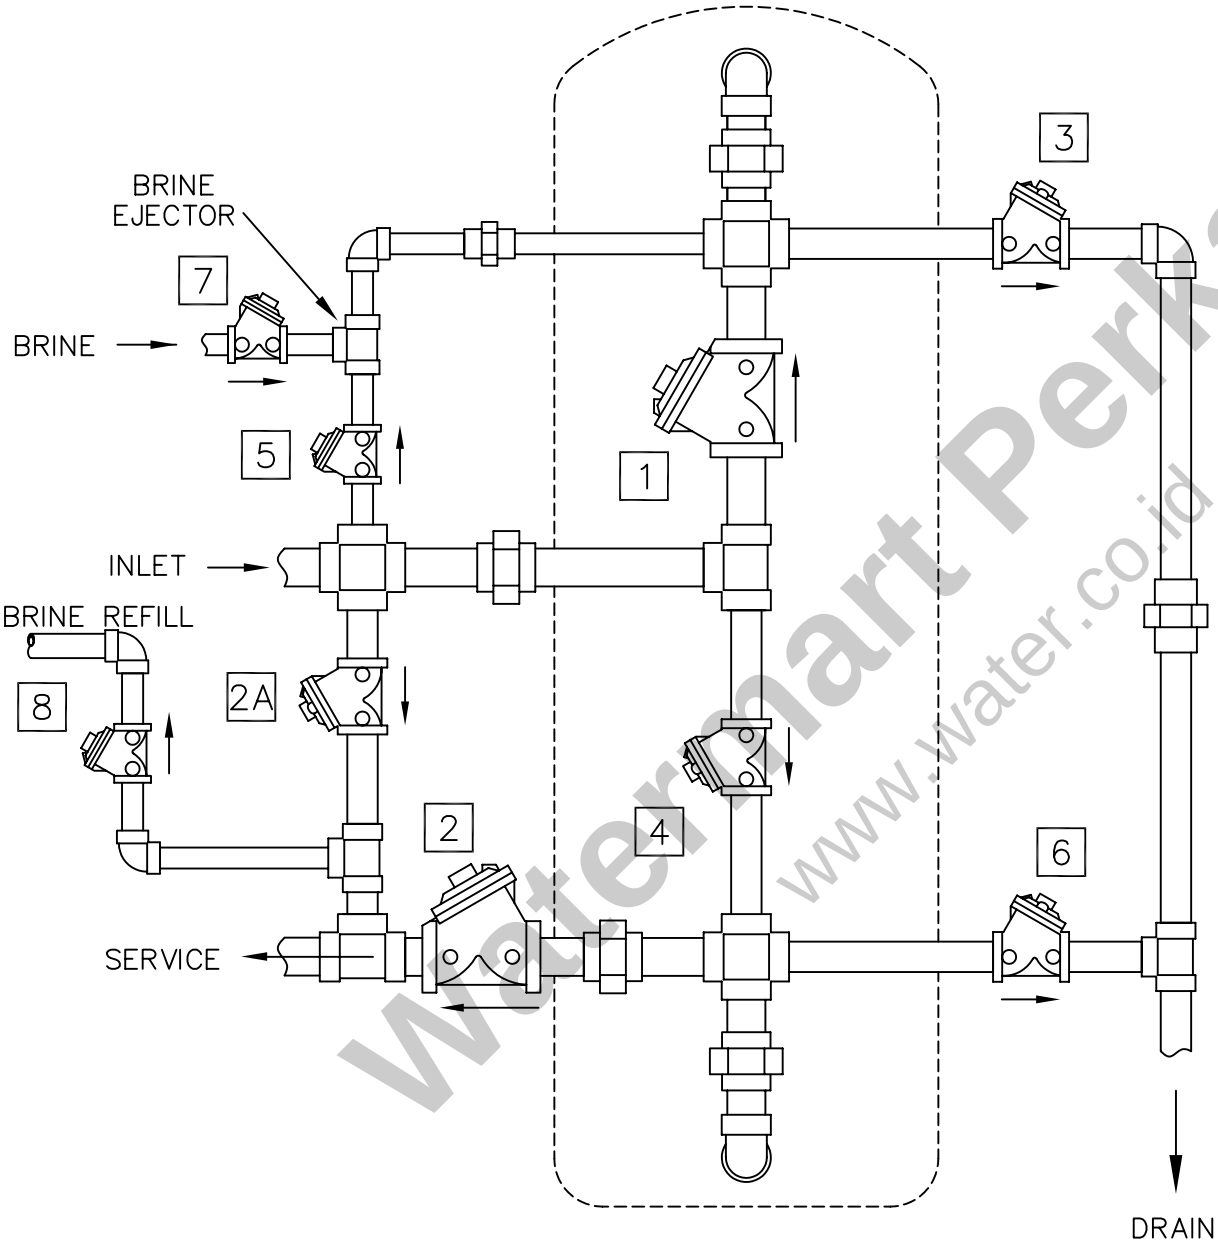

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	0	SERVICE	1,2	1,2
B				
C	1	BACKWASH	4	3,4,2A
D				
E	2	BRINE	5,6,7	5,6,7,2A
F	3	SLOW RINSE	6,7	5,6,2A
G	4	FAST RINSE	1,7	1,6,2A
H	5	BRINE REFILL	1,2,8	1,2,8

SERIES 51-06 STAGER

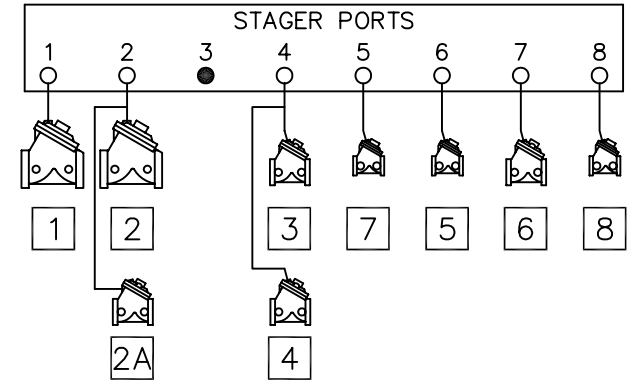

NOTE:

1. ALL OTHER PORTS PRESSURIZED.
2. ALL VALVES (EXCEPT NO. 2A) NORMALLY OPEN, PRESSURE TO CLOSE. VALVE 2A NORMALLY CLOSED.
3. VALVE 2A REQUIRED FOR RAW WATER BYPASS DURING REGENERATION.
4. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

REV	DESCRIPTION	ECO	DWN	DATE	APVD
A	INITIAL RELEASE	NONE	JWB	31JUL01	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

6 POSITION SOFTENER W/ TIMED BRINE & REFILL

SCALE | DRAWN | DATE | DWG. NO.


6 POSITION SOFTENER W/ TIMED BRINE & REFILL

PRINTED IN U.S.A.

Watermart Perkasa
www.water.co.id


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

5 POS. SOFTENER W/ TIMED BRINE DRAW (51-07 STAGER

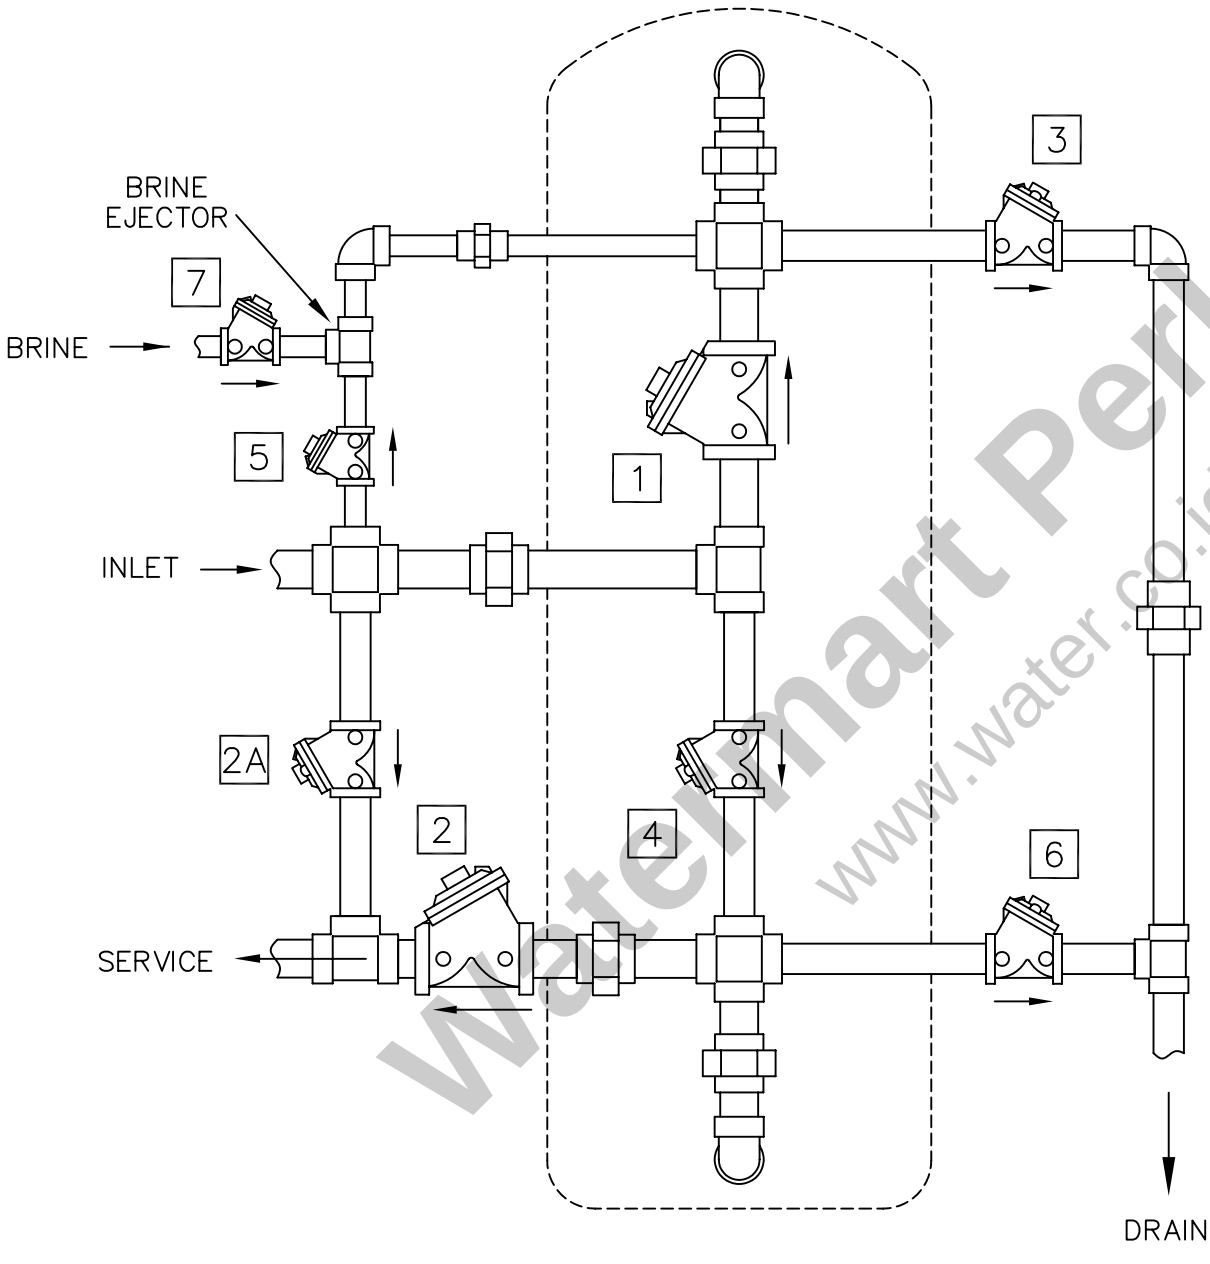

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	0	SERVICE	1,2	1,2
B				
C	1	BACKWASH	4	3,4,2A
D				
E	2	BRINE	5,6,7	5,6,7,2A
F	3	SLOW RINSE	6,7	5,6,2A
G	4	FAST RINSE	1,7	1,6,2A
H				

SERIES 51-07 STAGER

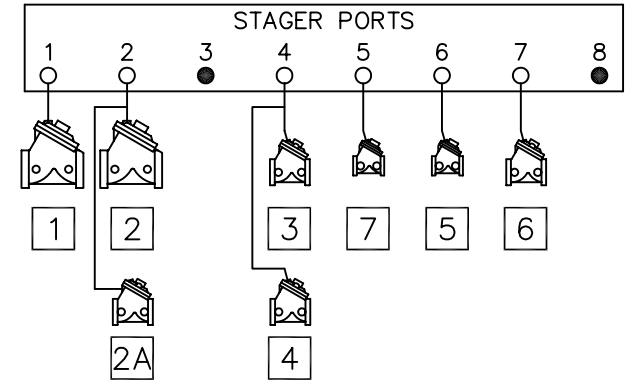

NOTE:

1. ALL OTHER PORTS PRESSURIZED.
2. ALL VALVES (EXCEPT NO. 2A) NORMALLY OPEN, PRESSURE TO CLOSE. VALVE 2A NORMALLY CLOSED.
3. VALVE 2A REQUIRED FOR RAW WATER BYPASS DURING REGENERATION.
4. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

REV	DESCRIPTION	ECO	DWN	DATE	APVD
A	INITIAL RELEASE	NONE	MSM	31JUL01	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

5 POSITION SOFTENER W/ TIMED BRINE DRAW

SCALE | DRAWN | DATE | DWG. NO.


5 POSITION SOFTENER W/ TIMED BRINE DRAW

PRINTED IN U.S.A.

Watermart Perkasa
www.water.co.id


PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

5 POS. SOFTENER W/ TIMED BRINE REFILL (51-09 STAGER

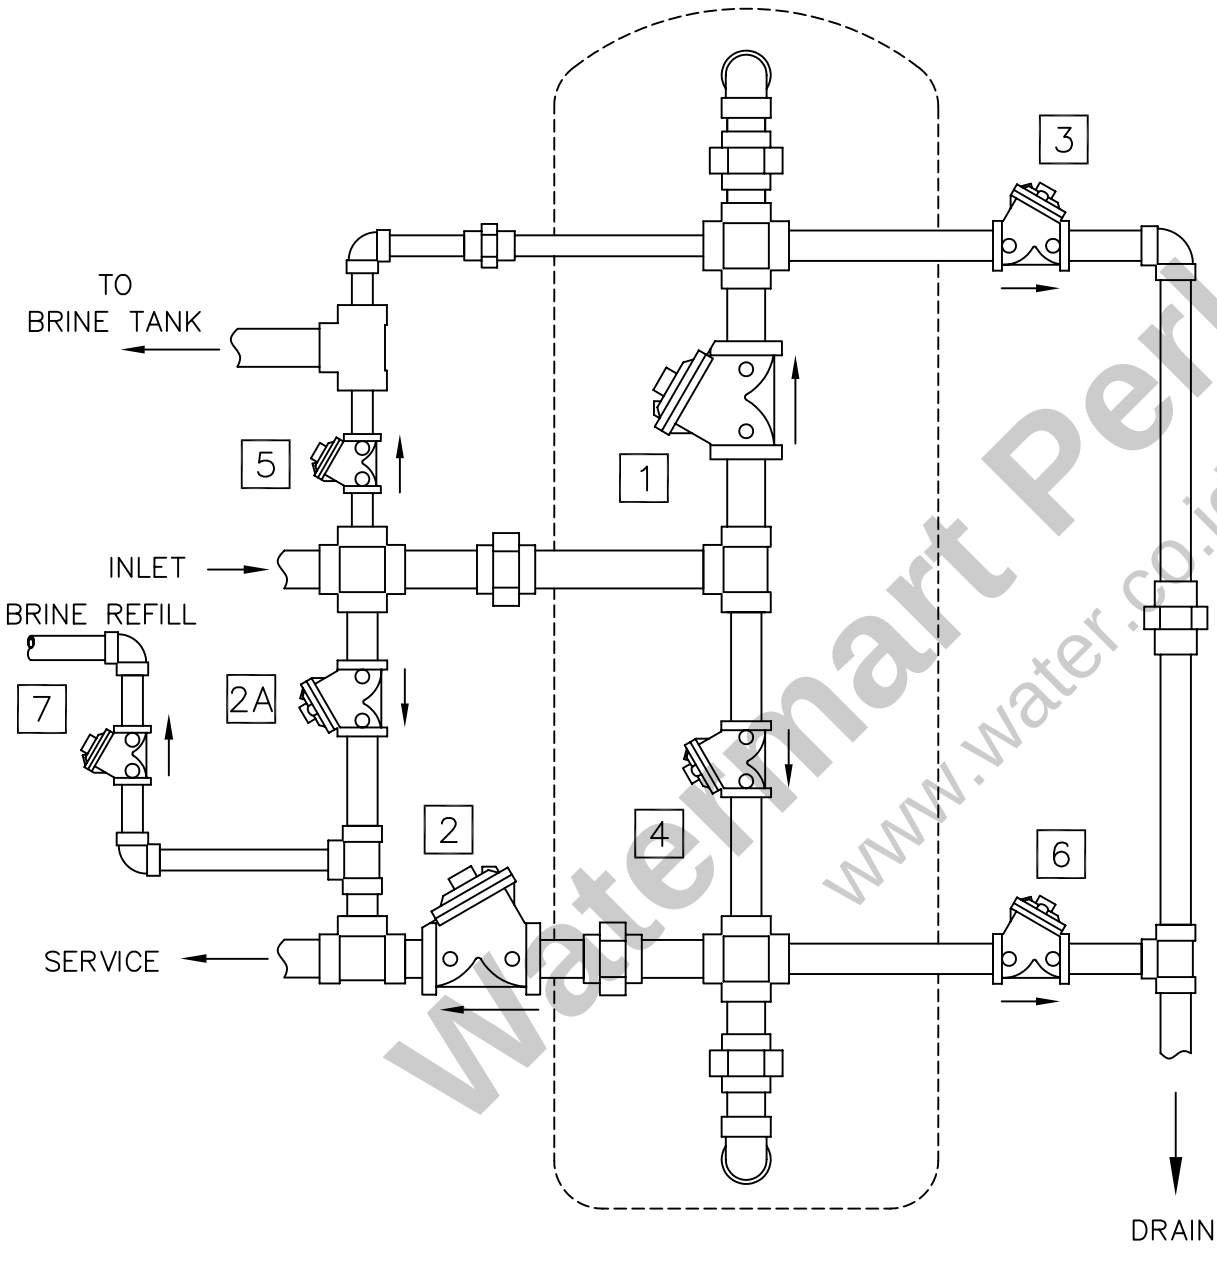

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	0	SERVICE	1,2	1,2
B				
C				
D	1	BACKWASH	4	3,4,2A
E	2	BRINE/SLOW RINSE	5,7	5,6,2A
F				
G	3	FAST RINSE	1,7	1,6,2A
H	4	BRINE REFILL	1,2,8	1,2,7

SERIES 51-09 STAGER

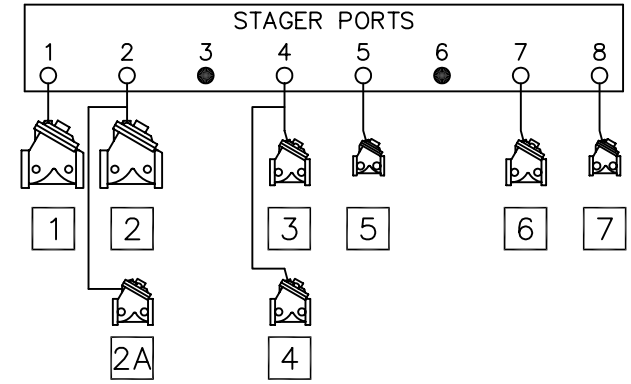

NOTE:

1. ALL OTHER PORTS PRESSURIZED.

2. ALL VALVES (EXCEPT NO. 2A) NORMALLY OPEN, PRESSURE TO CLOSE. VALVE 2A NORMALLY CLOSED.

3. VALVE 2A REQUIRED FOR RAW WATER BYPASS DURING REGENERATION.

4. BRINE VALVE AND DRAIN LINE FLOW CONTROLLER NOT SHOWN.

REV	DESCRIPTION	ECO	DWN	DATE	APVD
B	CORRECTED STAGER	NONE	MSM	17JAN03	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

5 POSITION SOFTENER W/ TIMED BRINE REFILL

SCALE | DRAWN | DATE | DWG. NO.


5 POSITION SOFTENER W/ TIMED BRINE REFILL

PRINTED IN U.S.A.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

2 TANK SEQUENTIAL FILTER

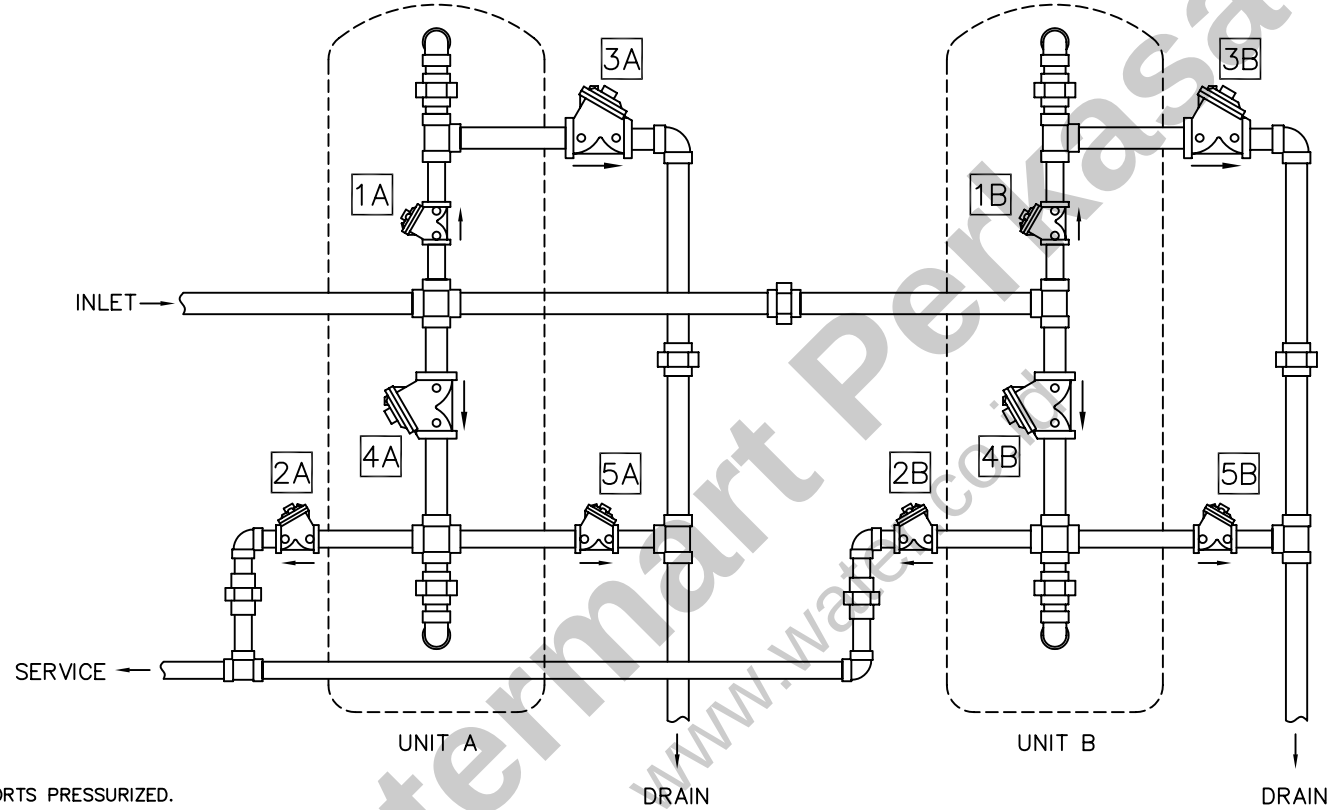


NOTE:

1. ALL OTHER PORTS PRESSURIZED.
2. ALL VALVES NORMALLY OPEN, PRESSURE TO CLOSE.
3. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	0	SERVICE	1,2,5,6	1A,2A,1B,2B
B				
C	1	BACKWASH UNIT A	5,6,7	1B,2B,3A,4A
D	2	RINSE UNIT A	1,5,6,8	1A,1B,2B,5A
E				
F				
G	3	BACKWASH UNIT B	1,2,3	1A,2A,3B,4B
H	4	RINSE UNIT B	1,2,4,5	1A,2A,5B,1B

SERIES 51-10 STAGER

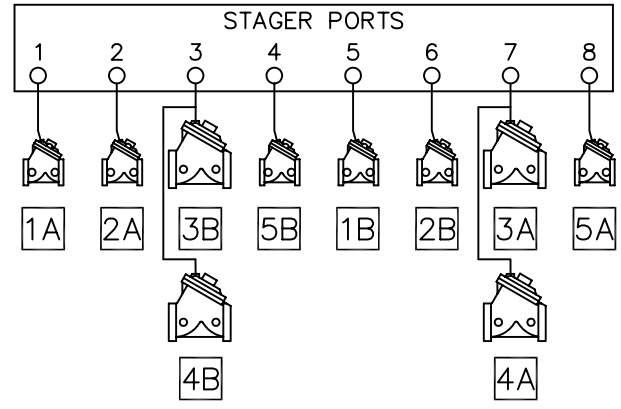

PRINTED IN U.S.A.

REV	DESCRIPTION	ECO	DWN	DATE	APVD
A	INITIAL RELEASE	NONE	JWB	31JUL01	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

2 TANK SEQUENTIAL FILTER


SCALE | DRAWN | DATE | DWG NO

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

2 TANK SEQUENTIAL FILTER (51-10 STAGER

2 TANK SEQUENTIAL FILTER
SEPARATE SOURCE FOR BACKWASH & RINSE SUPPLY

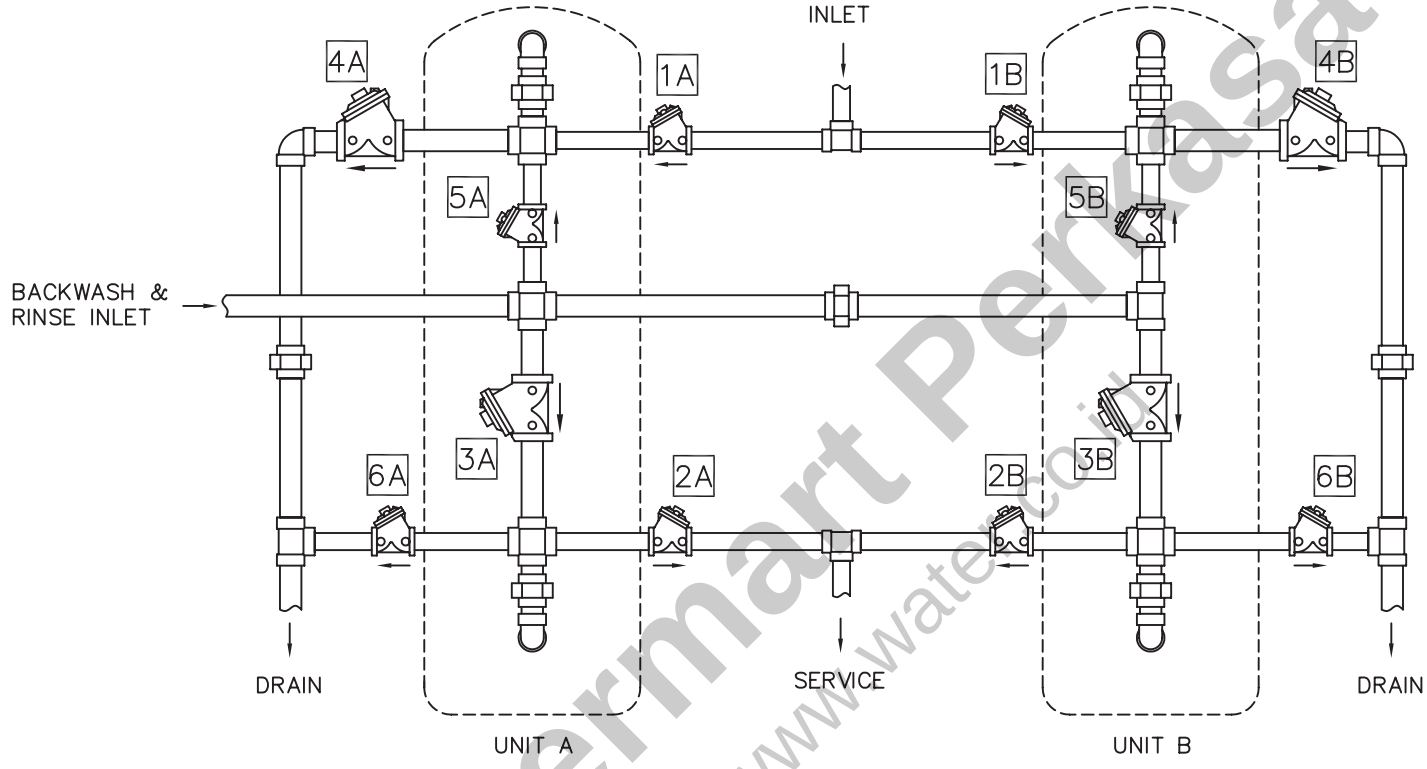


NOTE:

1. ALL OTHER PORTS PRESSURIZED.
2. ALL VALVES NORMALLY OPEN, PRESSURE TO CLOSE.
3. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	0	SERVICE	2,6	1A,2A,1B,2B
B				
C	1	BACKWASH UNIT A	6,7	1B,2B,3A,4A
D	2	RINSE UNIT A	6,8	1B,2B,5A,6A
E				
F				
G	3	BACKWASH UNIT B	2,3	1A,2A,3B,4B
H	4	RINSE UNIT B	2,4	1A,2A,5B,6B

SERIES 51-10 STAGER

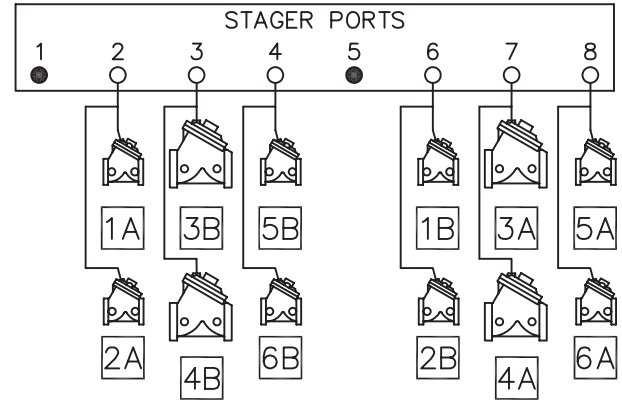

PRINTED IN U.S.A.

REV	DESCRIPTION	ECO	DWN	DATE	APVD
B	VALVE 5B WAS CALLED 1B	NONE	MSM	23NOV04	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

2 TANK SEQUENTIAL FILTER WITH SEPARATE SOURCE FOR BACKWASH & RINSE


SCALE | DRAWN | DATE | DWG NO

2 TANK SEQUENTIAL FILTER W/ SEPARATE SOURCE FOR BACKWASH & RINSE (51-10 STAGER)

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

2 TANK SEQUENTIAL FILTER
SEPERATE BACKWASH SOURCE

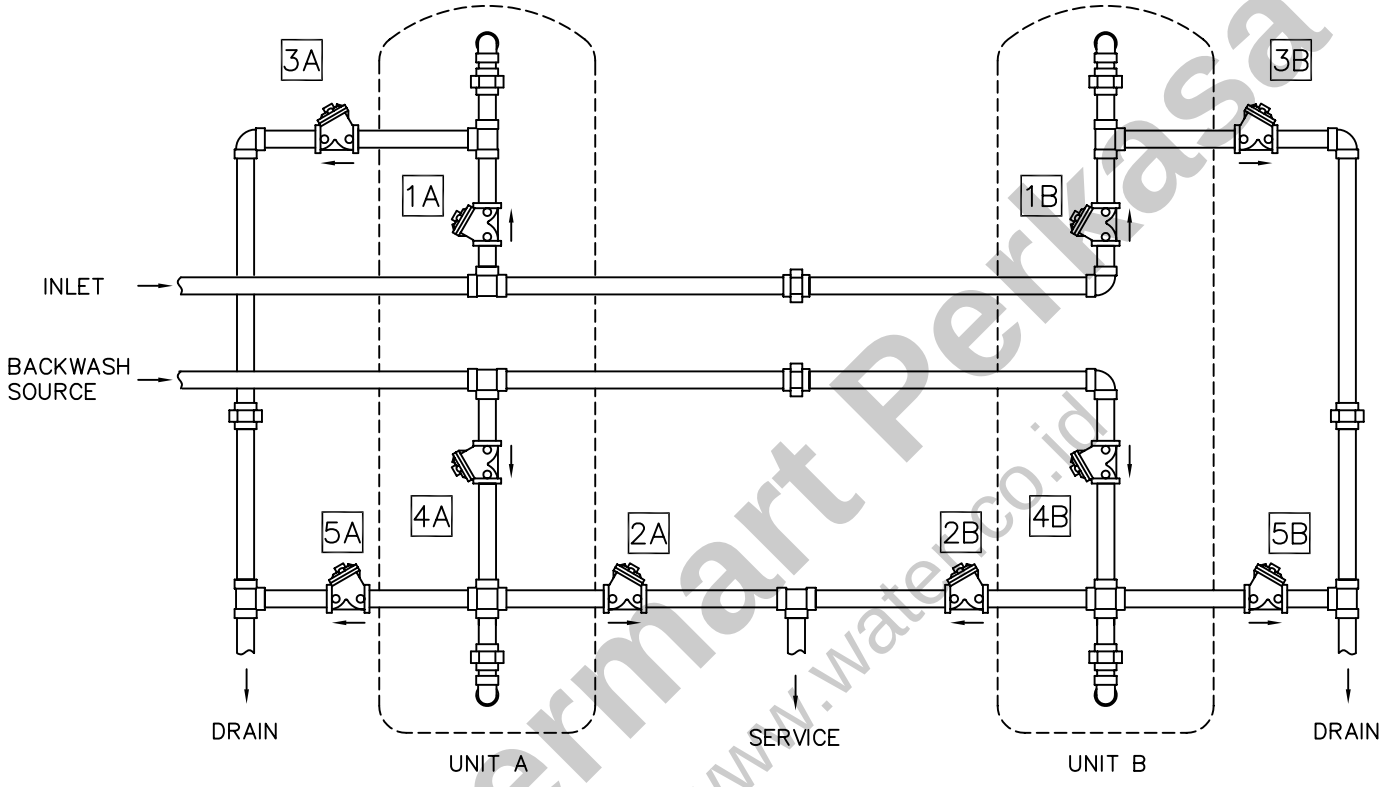


NOTE:

1. ALL OTHER PORTS PRESSURIZED.
2. ALL VALVES NORMALLY OPEN, PRESSURE TO CLOSE.
3. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	0	SERVICE	1,2,5,6	1A,2A,1B,2B
B				
C	1	BACKWASH UNIT A	5,6,7	1B,2B,3A,4A
D	2	RINSE UNIT A	1,5,6,8	1A,1B,2B,5A
E				
F				
G	3	BACKWASH UNIT B	1,2,3	1A,2A,3B,4B
H	4	RINSE UNIT B	1,2,4,5	1A,2A,5B,1B

SERIES 51-10 STAGER

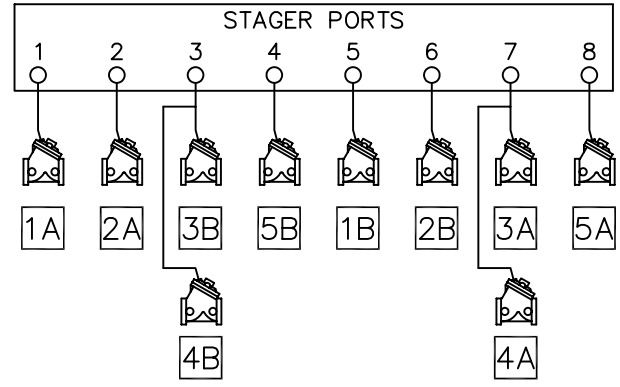

PRINTED IN U.S.A.

REV	DESCRIPTION	ECO	DWN	DATE	APVD
B	ON PIPING DRAWING, VALVE 1A WAS SHOWN AS VALVE 5A	NONE	MSM	04JUN03	
A	INITIAL RELEASE	NONE	JWB	31JUL01	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

2 TANK SEQUENTIAL FILTER W/ SEPARATE BACKWASH SOURCE


SCALE | DRAWN | DATE | DWG. NO.

2 TANK SEQ. FILTER W/SEP. BACKWASH SOURCE (51-10 STAGE

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id


SOFTENER W/ BRINE RECLAIM (51-12 STAGER)

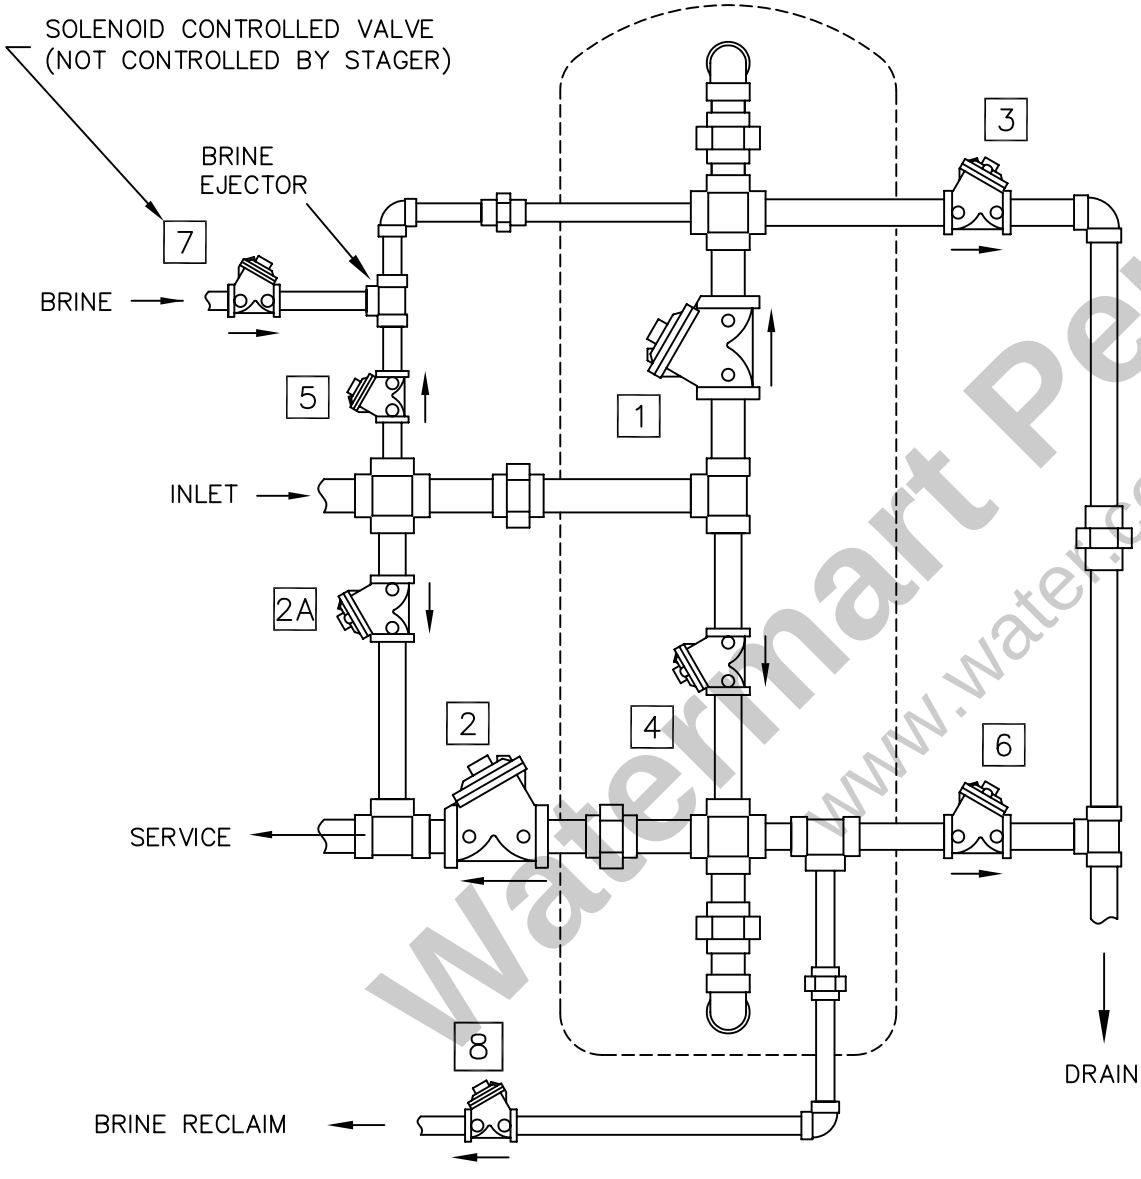

SOFTENER W/ BRINE RECLAIM

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	0	SERVICE	1,8	1,2
B	1	BACKWASH	2	3,4,2A
C				
D	2	BRINE	4,5	5,6,2A,(7)
E	3	DISPLACE	4,5	5,6,2A
F	4	RECLAIM BRINE	5,6	5,8,2A
G	5	FAST RINSE	4,8	1,6,2A
H				

SERIES 51–12 STAGER

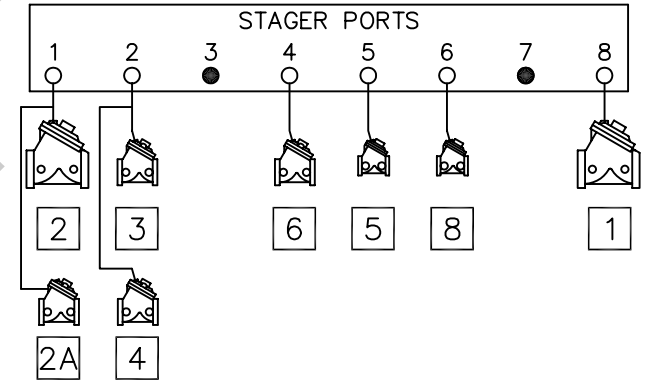

NOTE:

1. ALL OTHER PORTS PRESSURIZED.

2. ALL VALVES (EXCEPT NO. 2A) NORMALLY OPEN, PRESSURE TO CLOSE. VALVE 2A NORMALLY CLOSED.

3. VALVE 2A REQUIRED FOR RAW WATER BYPASS DURING REGENERATION.

4. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

5. VALVE NO. 7 SOLENOID CONTROLLED (NOT CONTROLLED BY STAGER).

REV	DESCRIPTION	ECO	DWN	DATE	APVD
A	INITIAL RELEASE	NONE	JWB	31JUL01	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

SOFTENER W/ BRINE RECLAIM

SCALE	DRAWN	DATE	DWG. NO.


PRINTED IN U.S.A.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

6 TANK SEQUENTIAL FILTER (51-86 STAGER)

6 TANK SEQUENTIAL FILTER BACKWASH ONLY

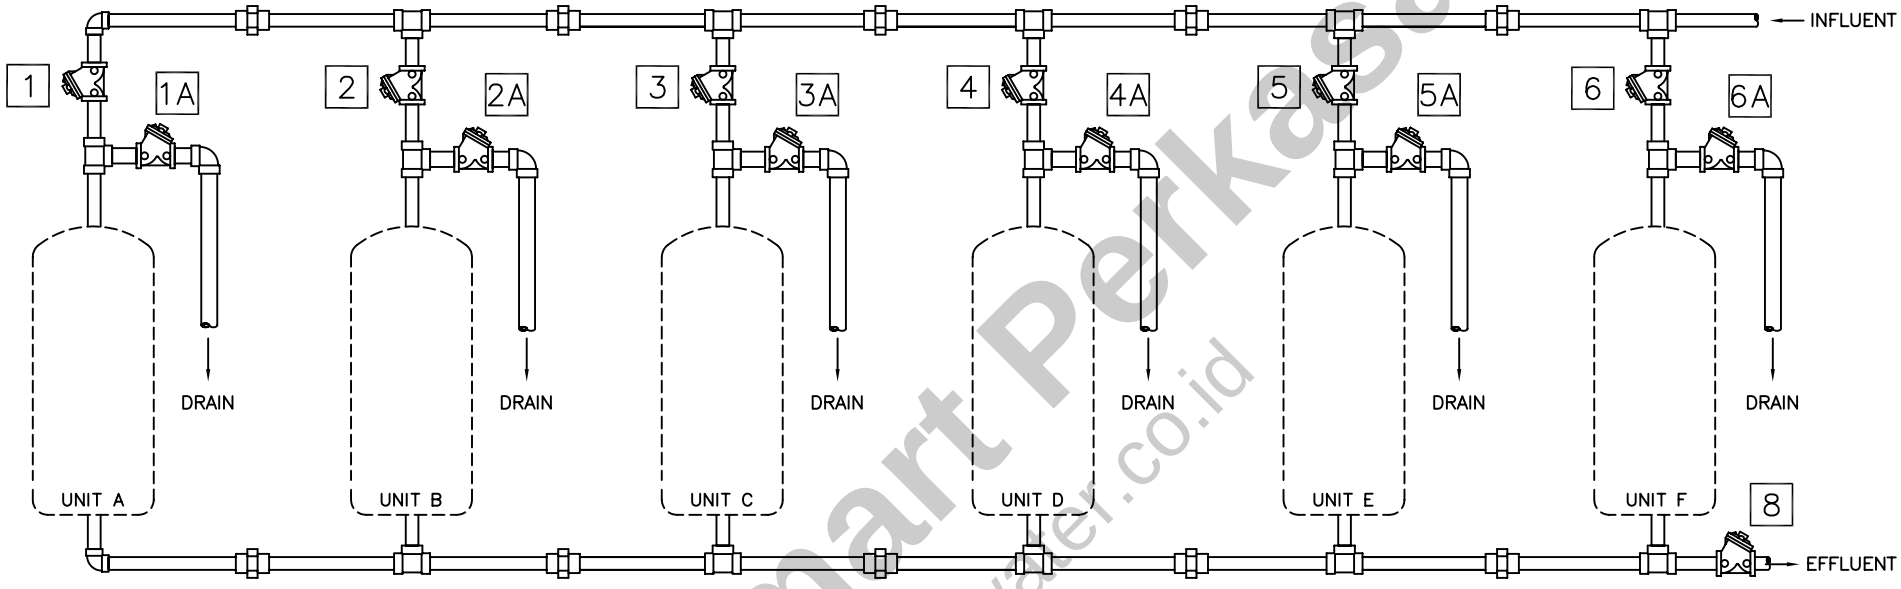

NOTE:


1. ALL OTHER PORTS PRESSURIZED.

2. VALVES 1A,2A,3A,4A,5A,6A,8 ARE NORMALLY OPEN PRESSURE TO CLOSE.

3. VALVES 1,2,3,4,5,6 ARE NORMALLY CLOSED, PRESSURE TO OPEN.

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	8	SERVICE	8	1,2,3,4,5,6,8
B	1	BACKWASH UNIT A	1	1A,2,3,4,5,6
C	2	BACKWASH UNIT B	2	1,2A,3,4,5,6
D	3	BACKWASH UNIT C	3	1,2,3A,4,5,6
E	4	BACKWASH UNIT D	4	1,2,3,4A,5,6
F	5	BACKWASH UNIT E	5	1,2,3,4,5A,6
G	6	BACKWASH UNIT F	6	1,2,3,4,5,6A
H				

SERIES 51–86 STAGER

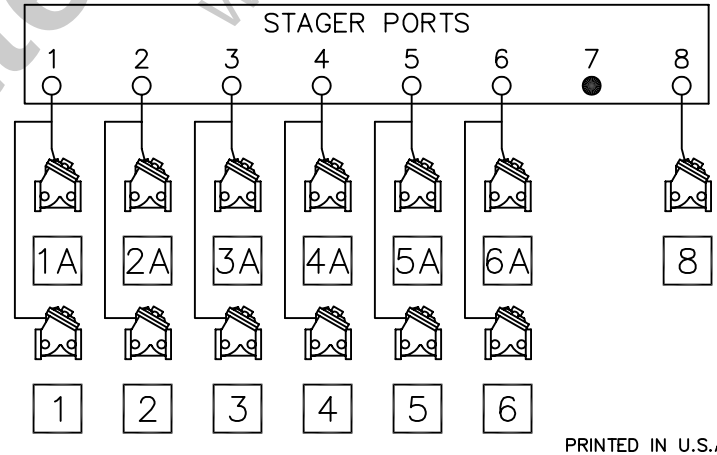

PRINTED IN U.S.A.

REV	DESCRIPTION	ECO	DWN	DATE	APVD
A	INITIAL RELEASE	NONE	JWB	31JUL01	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com


6 TANK SEQUENTIAL FILTER BACKWASH ONLY

SCALE | DRAWN | DATE | DWG. NO.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

7 TANK SEQUENTIAL FILTER BACKWASH ONLY

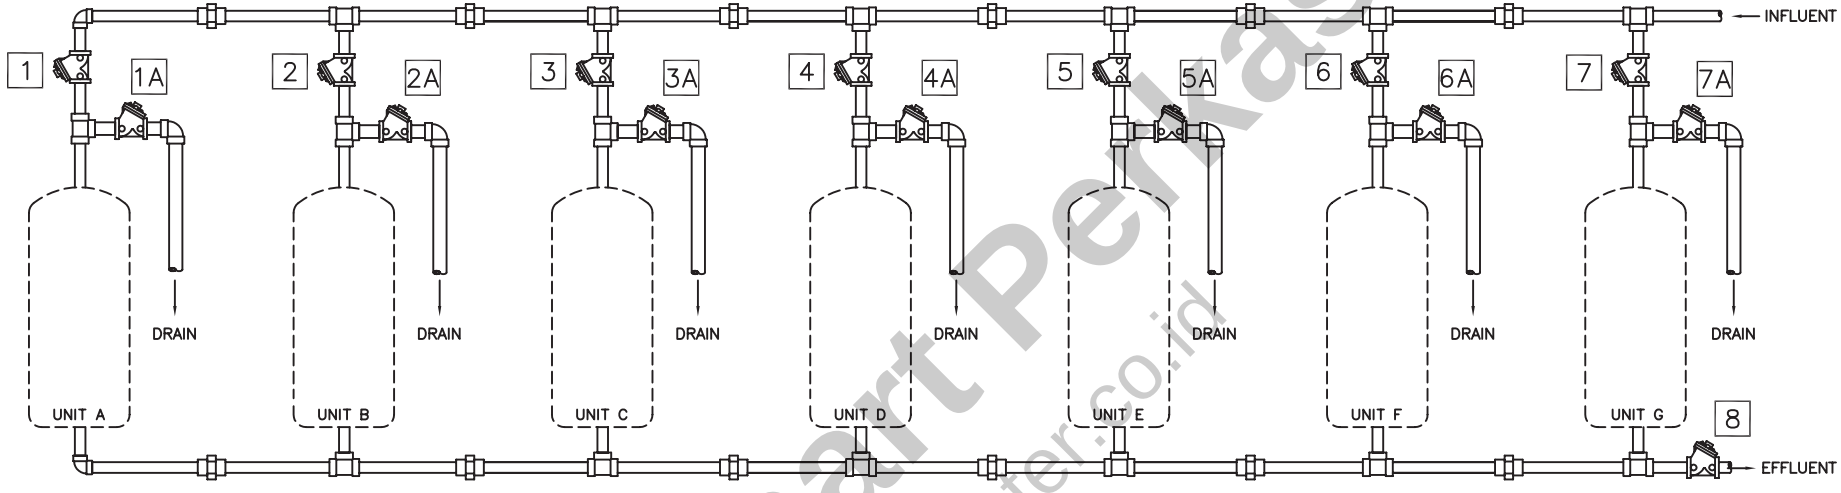

NOTE:


1. ALL OTHER PORTS PRESSURIZED.

2. VALVES 1A,2A,3A,4A,5A,6A,7A,8 ARE NORMALLY OPEN PRESSURE TO CLOSE.

3. VALVES 1,2,3,4,5,6,7 ARE NORMALLY CLOSED, PRESSURE TO OPEN.

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	8	SERVICE	8	1,2,3,4,5,6,7,8
B	1	BACKWASH UNIT A	1	1A,2,3,4,5,6,7
C	2	BACKWASH UNIT B	2	1,2A,3,4,5,6,7
D	3	BACKWASH UNIT C	3	1,2,3A,4,5,6,7
E	4	BACKWASH UNIT D	4	1,2,3,4A,5,6,7
F	5	BACKWASH UNIT E	5	1,2,3,4,5A,6,7
G	6	BACKWASH UNIT F	6	1,2,3,4,5,6A,7
H	7	BACKWASH UNIT G	7	1,2,3,4,5,6,7A

SERIES 51–87 STAGER

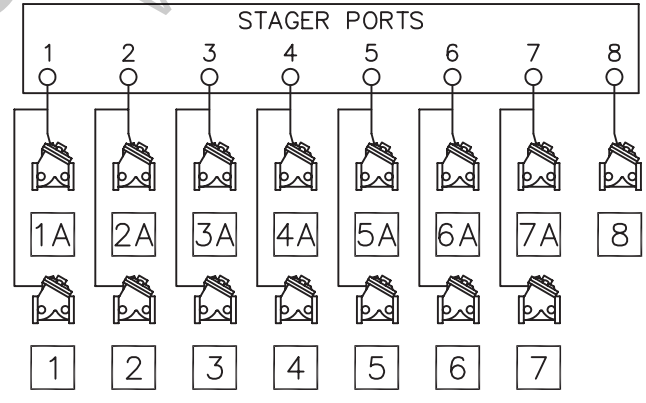

PRINTED IN U.S.A.

REV	DESCRIPTION	ECO	DWN	DATE	APVD
B	MOVED SVC POS. TO NOTCH "A"	NONE	MSM	07SEP04	
A	INITIAL RELEASE	NONE	JWB	31JUL01	VKP

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

7 TANK SEQUENTIAL FILTER BACKWASH ONLY

SCALE | DRAWN | DATE | DWG. NO.


7 TANK SEQUENTIAL FILTER (51-87 STAGER

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

3 TANK SEQUENTIAL FILTER (58-03)

3 TANK SEQUENTIAL FILTER

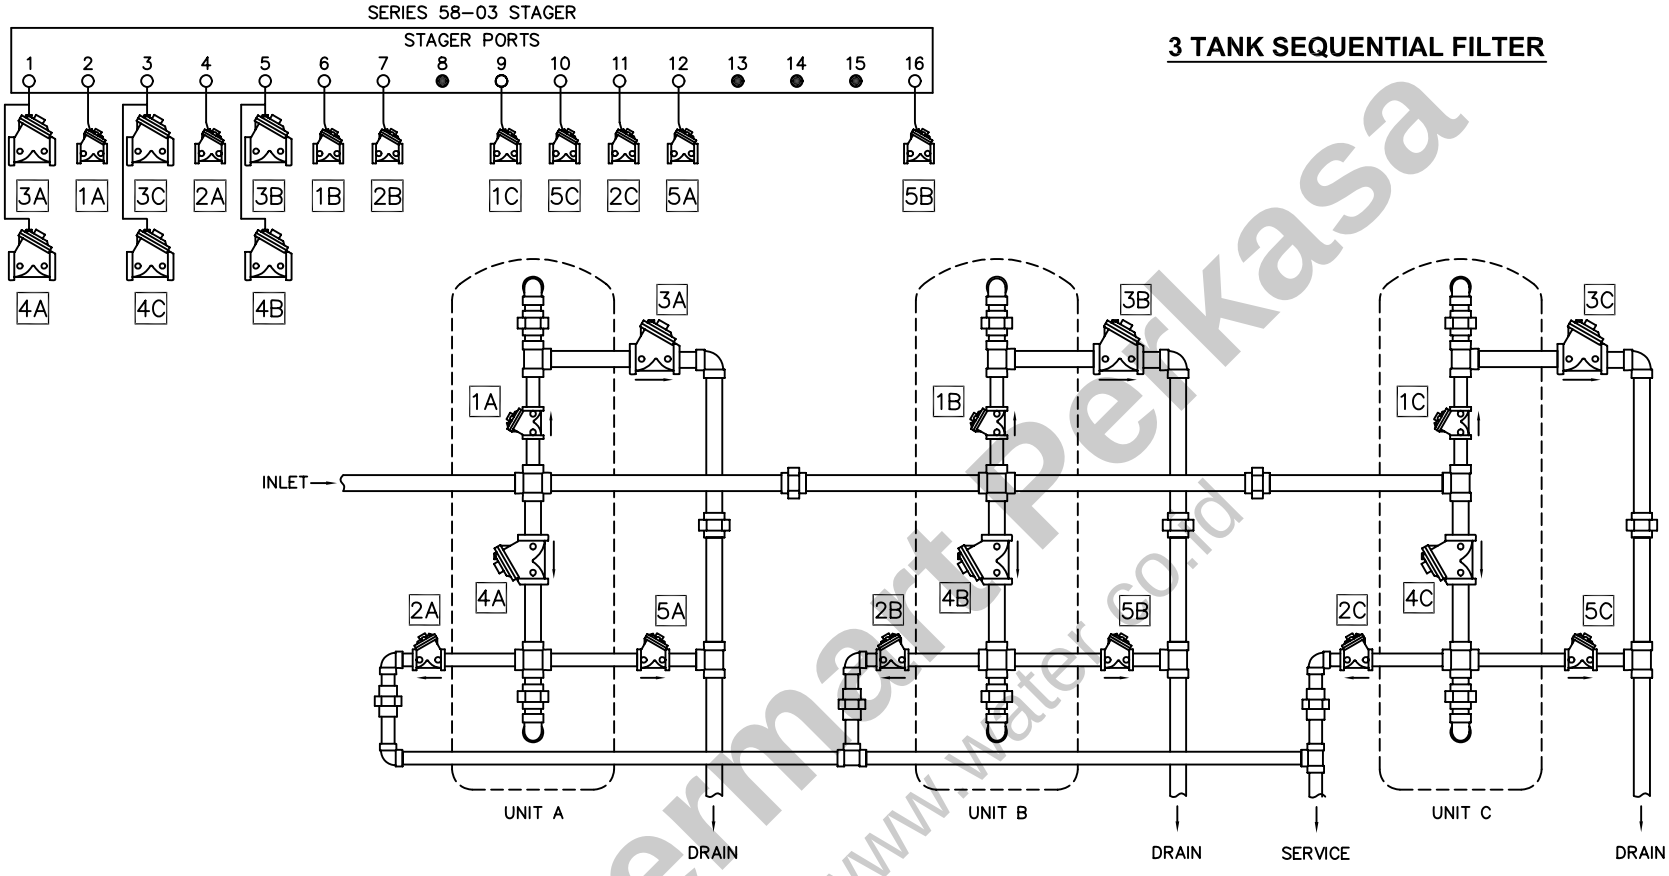

NOTE:

1. ALL OTHER PORTS PRESSURIZED.
2. ALL VALVES NORMALLY OPEN, PRESSURE TO CLOSE.
3. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

PRINTED IN U.S.A.

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN	NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	0	SERVICE	2,4,6,7,9,11	1A,2A,1B,2B,1C,2C	J				
B					K				
C	1	BACKWASH UNIT A	1,6,7,9,11	3A,4A,1B,2B,1C,2C	L	5	BACKWASH UNIT C	2,3,4,6,7	1A,2A,1B,2B,3C,4C
D	2	RINSE UNIT A	2,6,7,9,11,12	1A,5A,1B,2B,1C,2C	M	6	RINSE UNIT C	2,4,6,7,9,10	1A,2A,1B,2B,1C,5C
E					N				
F					P				
G	3	BACKWASH UNIT B	2,4,5,9,11	1A,2A,3B,4B,1C,2C	Q				
H	4	RINSE UNIT B	2,4,6,9,11,16	1A,2A,1B,5B,1C,2C	R				

REV	DESCRIPTION	ECO	DWN	DATE	APVD
B	MOVED SVC OUTLET	NONE	MSM	17JAN03	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

3 TANK SEQUENTIAL FILTER


SCALE | DRAWN | DATE | DWG NO

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

4 TANK SEQUENTIAL FILTER (58-04 STAGER)

4 TANK SEQUENTIAL FILTER

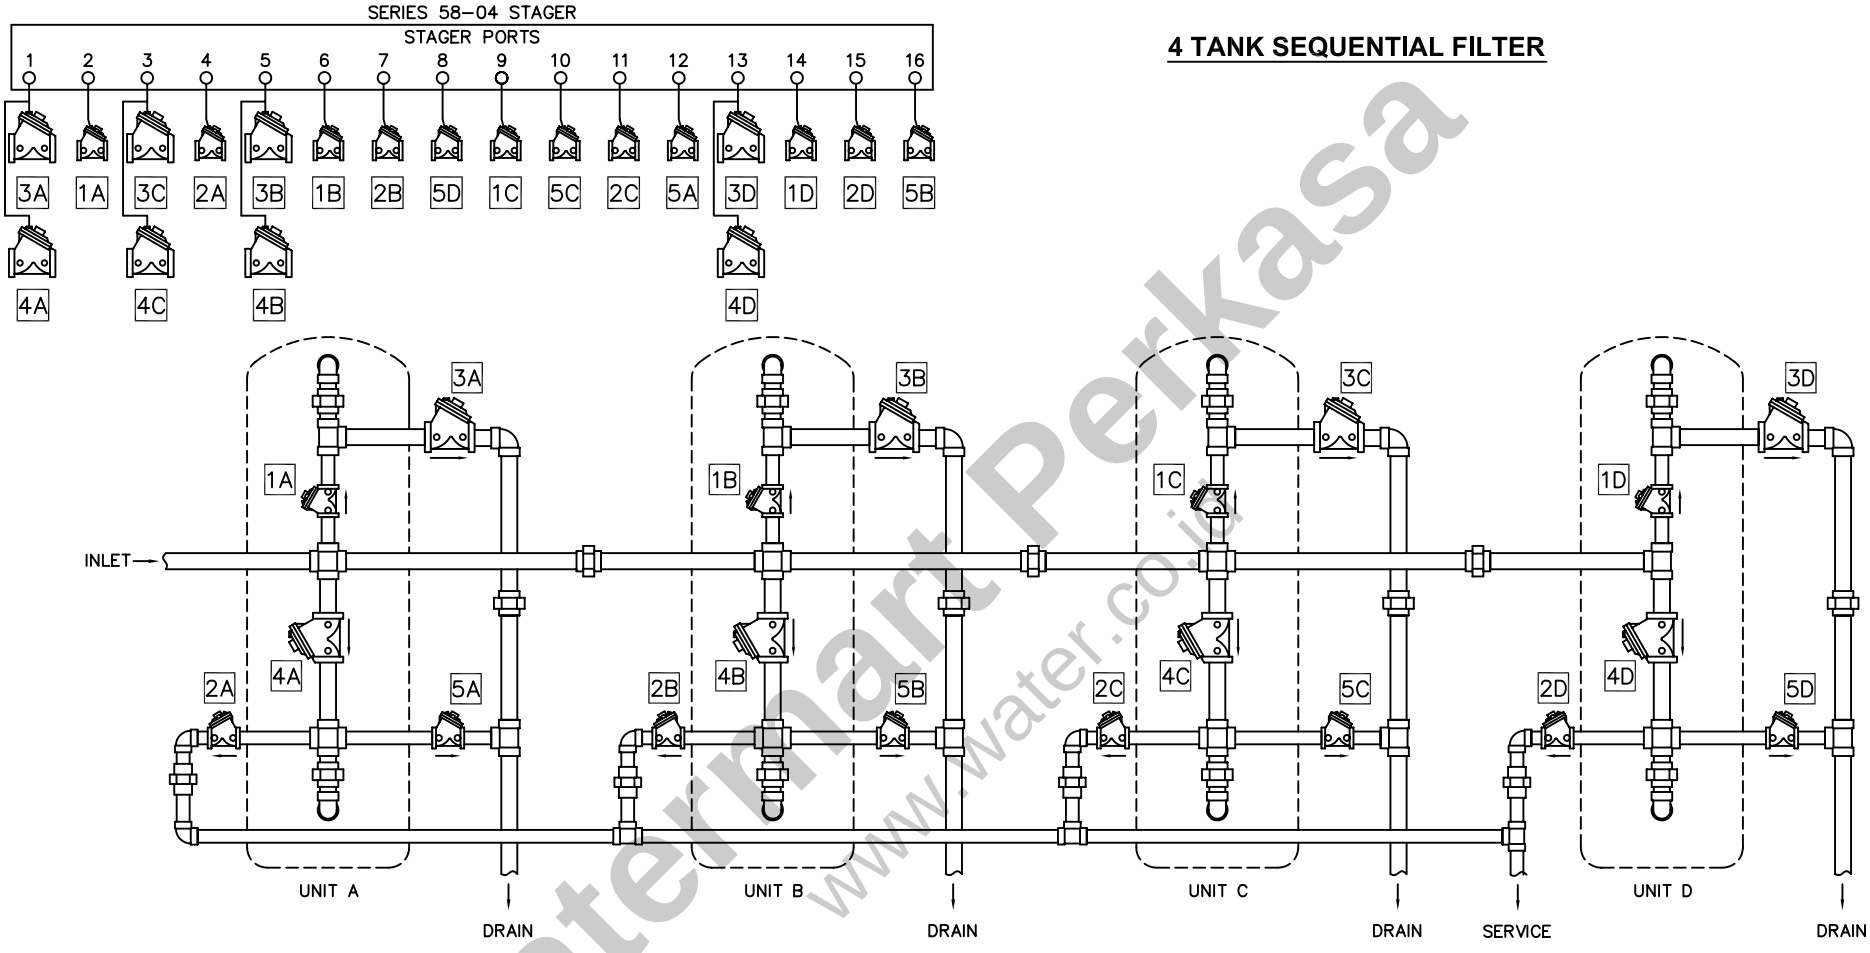

NOTE:
1. ALL OTHER PORTS PRESSURIZED.
2. ALL VALVES NORMALLY OPEN, PRESSURE TO CLOSE.
3. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

PRINTED IN U.S.A.

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN	NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	0	SERVICE	2,4,6,7,9,11	1A,2A,1B,2B,1C,2C,1D,2D	J				
B					K				
C	1	BACKWASH UNIT A	1,6,7,9,11	3A,4A,1B,2B,1C,2C,1D,2D	L	5	BACKWASH UNIT C	2,3,4,6,7	1A,3C,4C,2A,1B,2B,1D,2D
D	2	RINSE UNIT A	2,6,7,9,11,12	1A,1B,2B,1C,2C,5A,1D,2D	M	6	RINSE UNIT C	2,4,6,7,9,10	1A,2A,1B,2B,1C,5C,1D,2D
E					N				
F					P				
G	3	BACKWASH UNIT B	2,4,5,9,11	1A,2A,3B,4B,1C,2C,1D,2D	Q	7	BACKWASH UNIT D	2,4,6,7,9,11,13	1A,2A,1B,2B,1C,2C,(3D,4D)
H	4	RINSE UNIT B	2,4,6,9,11,16	1A,2A,1B,1C,2C,1D,2D,5B	R	8	RINSE UNIT D	2,4,6,7,8,9,11,14	1A,2A,1B,2B,5D,1C,2C,1D

REV	DESCRIPTION	ECO	DWN	DATE	APVD
A	INITIAL RELEASE	NONE	MSM	31JUL01	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com


4 TANK SEQUENTIAL FILTER

SCALE | DRAWN | DATE | DWG NO

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

TWO BED DE-IONIZER SYSTEM (58-00 STAGER

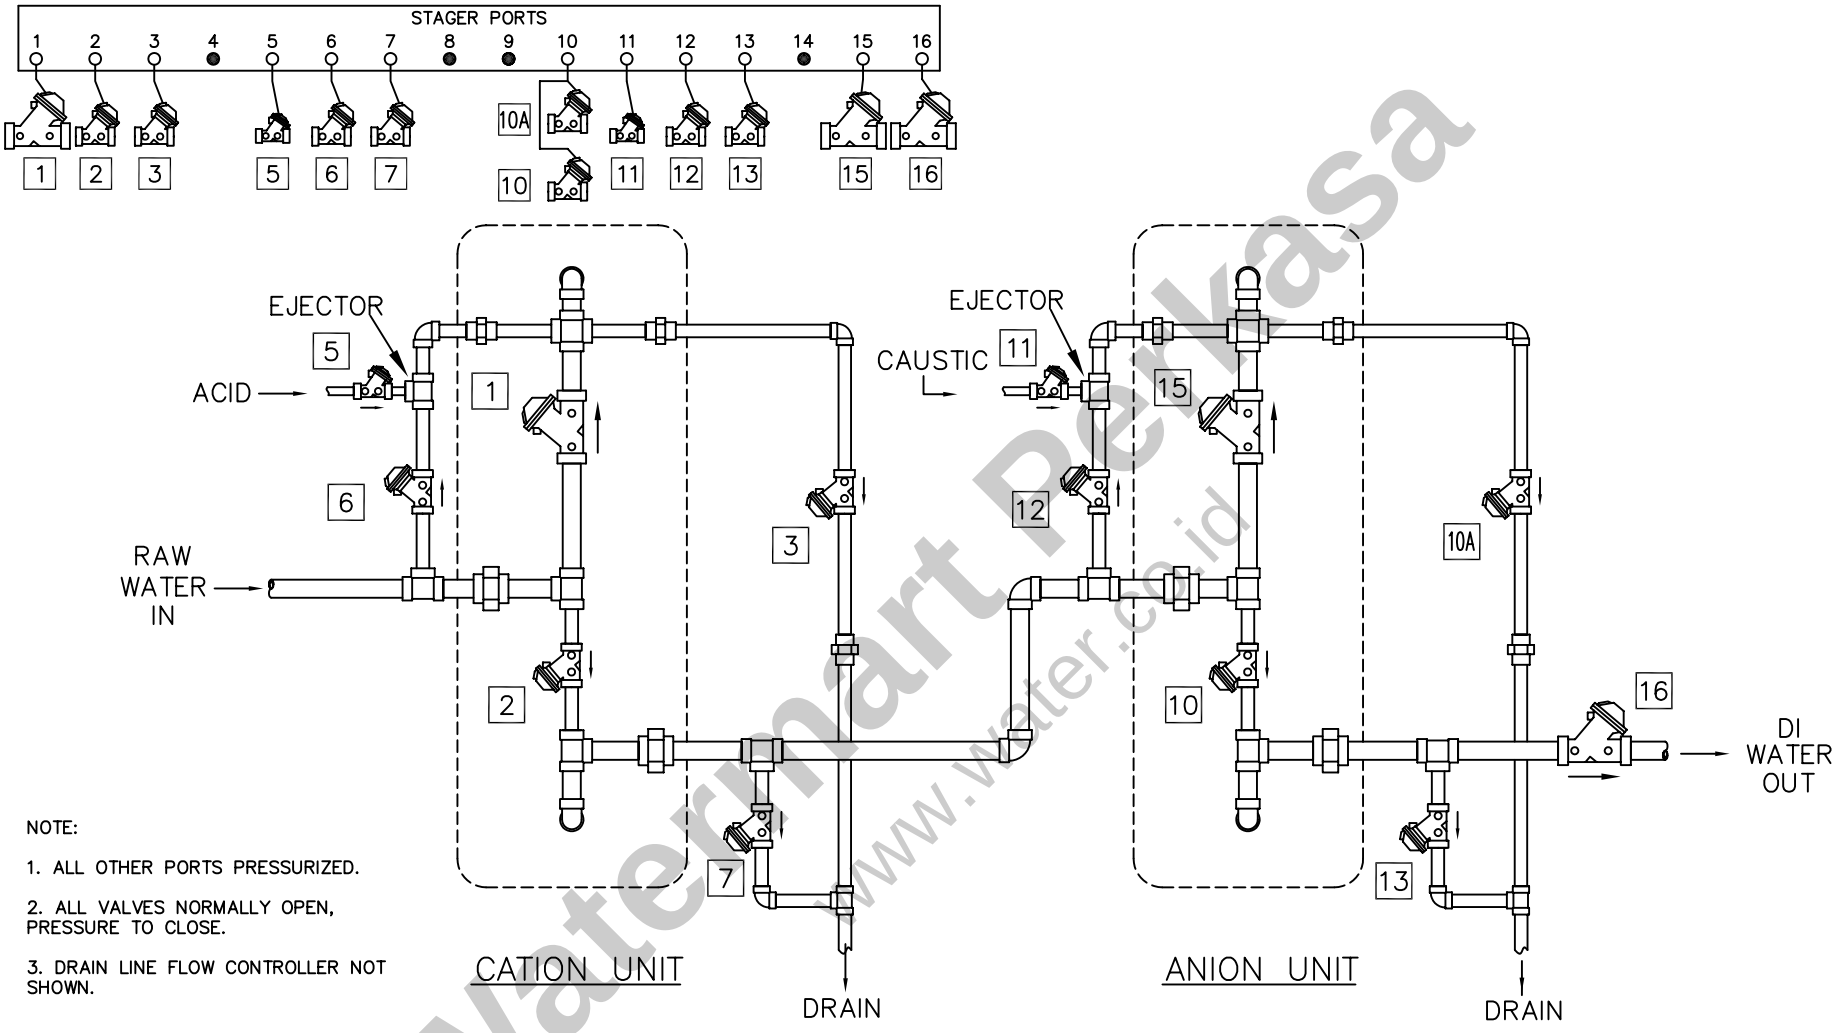

NOTE:

1. ALL OTHER PORTS PRESSURIZED.
2. ALL VALVES NORMALLY OPEN, PRESSURE TO CLOSE.
3. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

PRINTED IN U.S.A.

SERIES 58B-00 STAGER PROGRAM

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN	NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	0	SERVICE	1,15,16	1,15,16	J	4	FAST RINSE	1,7	1,7
B					K	5	ANION BACKWASH	1,10	1,10,10A
C					L				
D	1	CATION BACKWASH	2,3	2,3	M				
E					N	6	CAUSTIC INJECT	1,11,12,13	1,11,12,13
F					P	7	SLOW RINSE	1,12,13	1,12,13
G	2	ACID INJECT	5,6,7	5,6,7	Q	8	FAST RINSE	1,13,15	1,13,15
H	3	SLOW RINSE	6,7	6,7	R				

REV	DESCRIPTION	ECO	DWN	DATE	APVD
A	INITIAL RELEASE	NONE	MSM	31JUL01	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com


TWO BED DE-IONIZER SYSTEM

SCALE | DRAWN | DATE | DWG NO

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

TWO BED DE-IONIZER W/ DE-GASIFIER (58-02 STAGEF

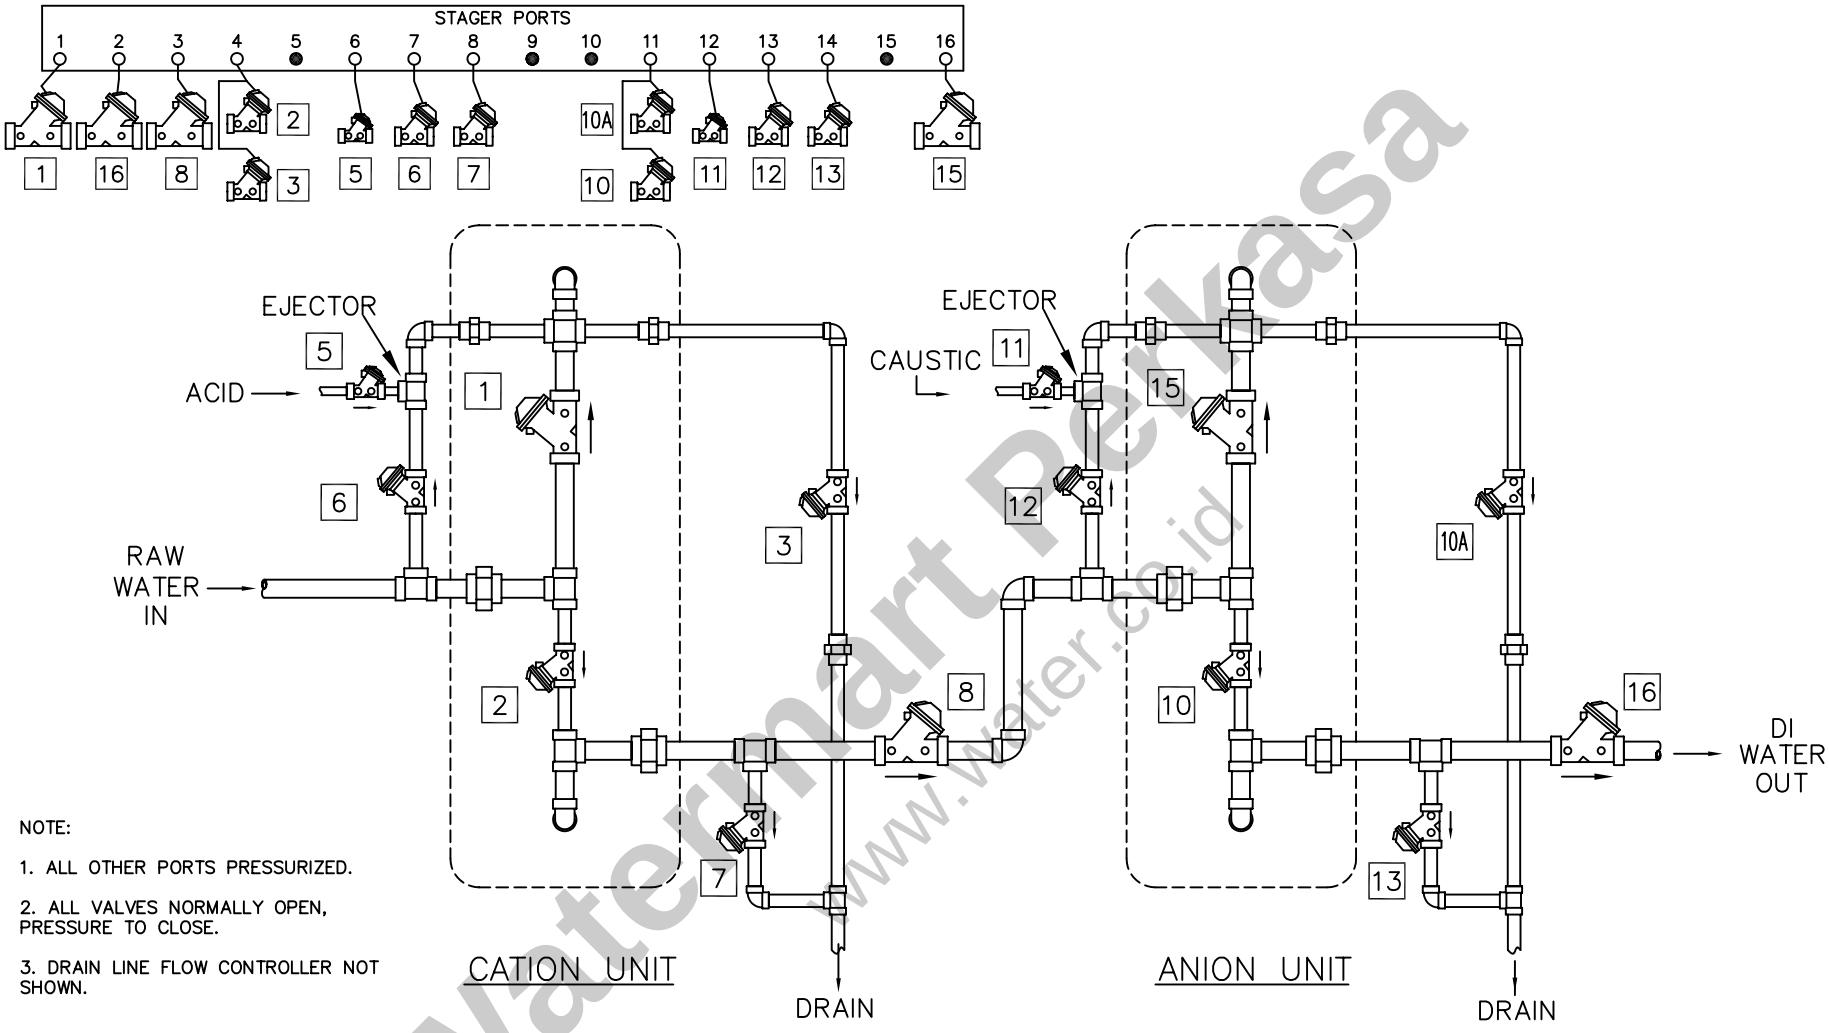

NOTE:

1. ALL OTHER PORTS PRESSURIZED.
2. ALL VALVES NORMALLY OPEN, PRESSURE TO CLOSE.
3. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

PRINTED IN U.S.A.

SERIES 58-02 STAGER PROGRAM

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN	NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	0	SERVICE	1,2,3,16	1,8,15,16	J	4	FAST RINSE	1,8	1,7
B					K	5	ANION BACKWASH	1,3,11	1,8,10,10A
C					L				
D	1	CATION BACKWASH	4	2,3	M				
E					N	6	CAUSTIC INJECT	1,3,12,13,14	1,8,11,12,13
F					P	7	SLOW RINSE	1,3,13,14	1,8,12,13
G	2	ACID INJECT	6,7,8	5,6,7	Q	8	FAST RINSE	1,3,14,16	1,8,13,15
H	3	SLOW RINSE	7,8	6,7	R				

REV	DESCRIPTION	ECO	DWN	DATE	APVD
A	INITIAL RELEASE	NONE	MSM	31JUL01	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com


TWO BED DE-IONIZER W/ DE-GASIFIER


SCALE | DRAWN | DATE | DWG NO

Watermart Perkasa
www.Water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

MIXED BED DE-IONIZER (58-10 STAGER

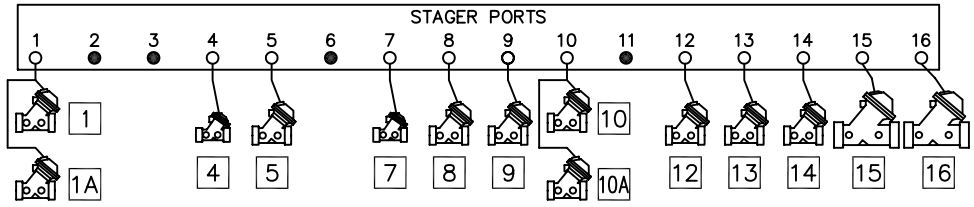

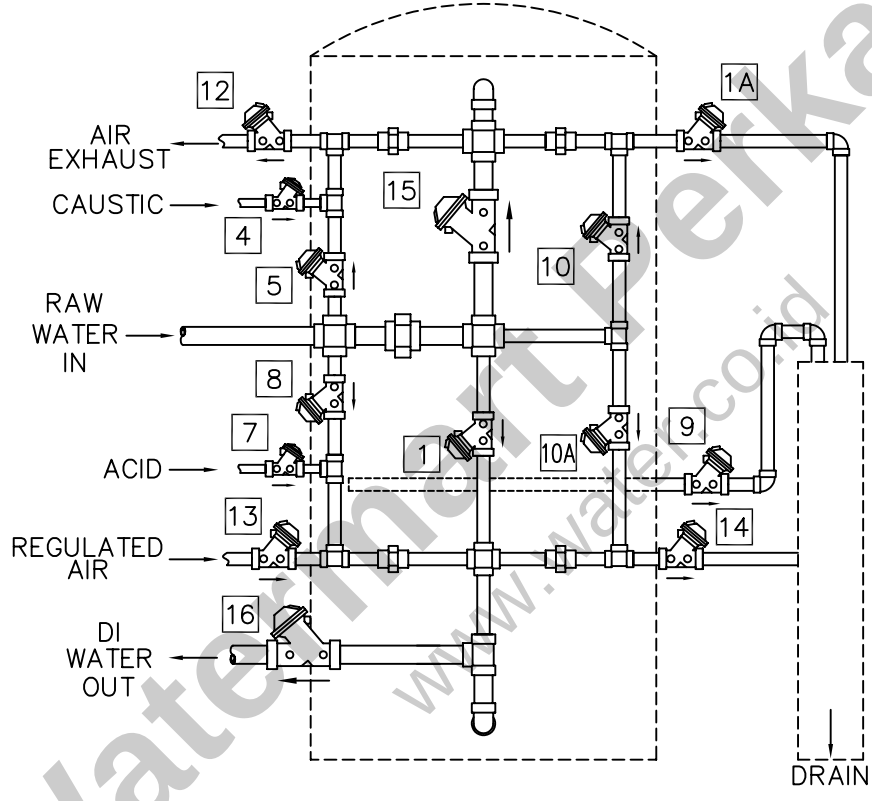

NOTE:

1. ALL OTHER PORTS PRESSURIZED.

2. ALL VALVES NORMALLY OPEN, PRESSURE TO CLOSE.

PRINTED IN U.S.A.

SERIES 58B–10 STAGER PROGRAM

NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN	NOTCH	POS.	FUNCTION	PORTS VENTED (NOTE 1)	VALVES OPEN
A	0	SERVICE	15,16	15,16	J	5	ACID INJECT	7,8,9	7,8,9
B					K	6	SLOW RINSE	8,9	8,9
C	1	BACKWASH	1	1,1A	L	7	RINSE	9,10	9,10,10A
D	2	SETTLE	NONE	NONE	M				
E					N	8	DRAIN DOWN	9,12	9,12
F	3	CAUSTIC INJECT	4,5,9	4,5,9	P	9	AIR INJECT	12,13	12,13
G	4	SLOW RINSE	5,9	5,9	Q				
H					R	10	FINAL RINSE	14,15	14,15

REV	DESCRIPTION	ECO	DWN	DATE	APVD
A	INITIAL RELEASE	NONE	MSM	31JUL01	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com


MIXED BED DE-IONIZER

SCALE	DRAWN	DATE	DWG. NO.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

TWO TANK ALTERNATING SOFTENER (58-TA STAGER)

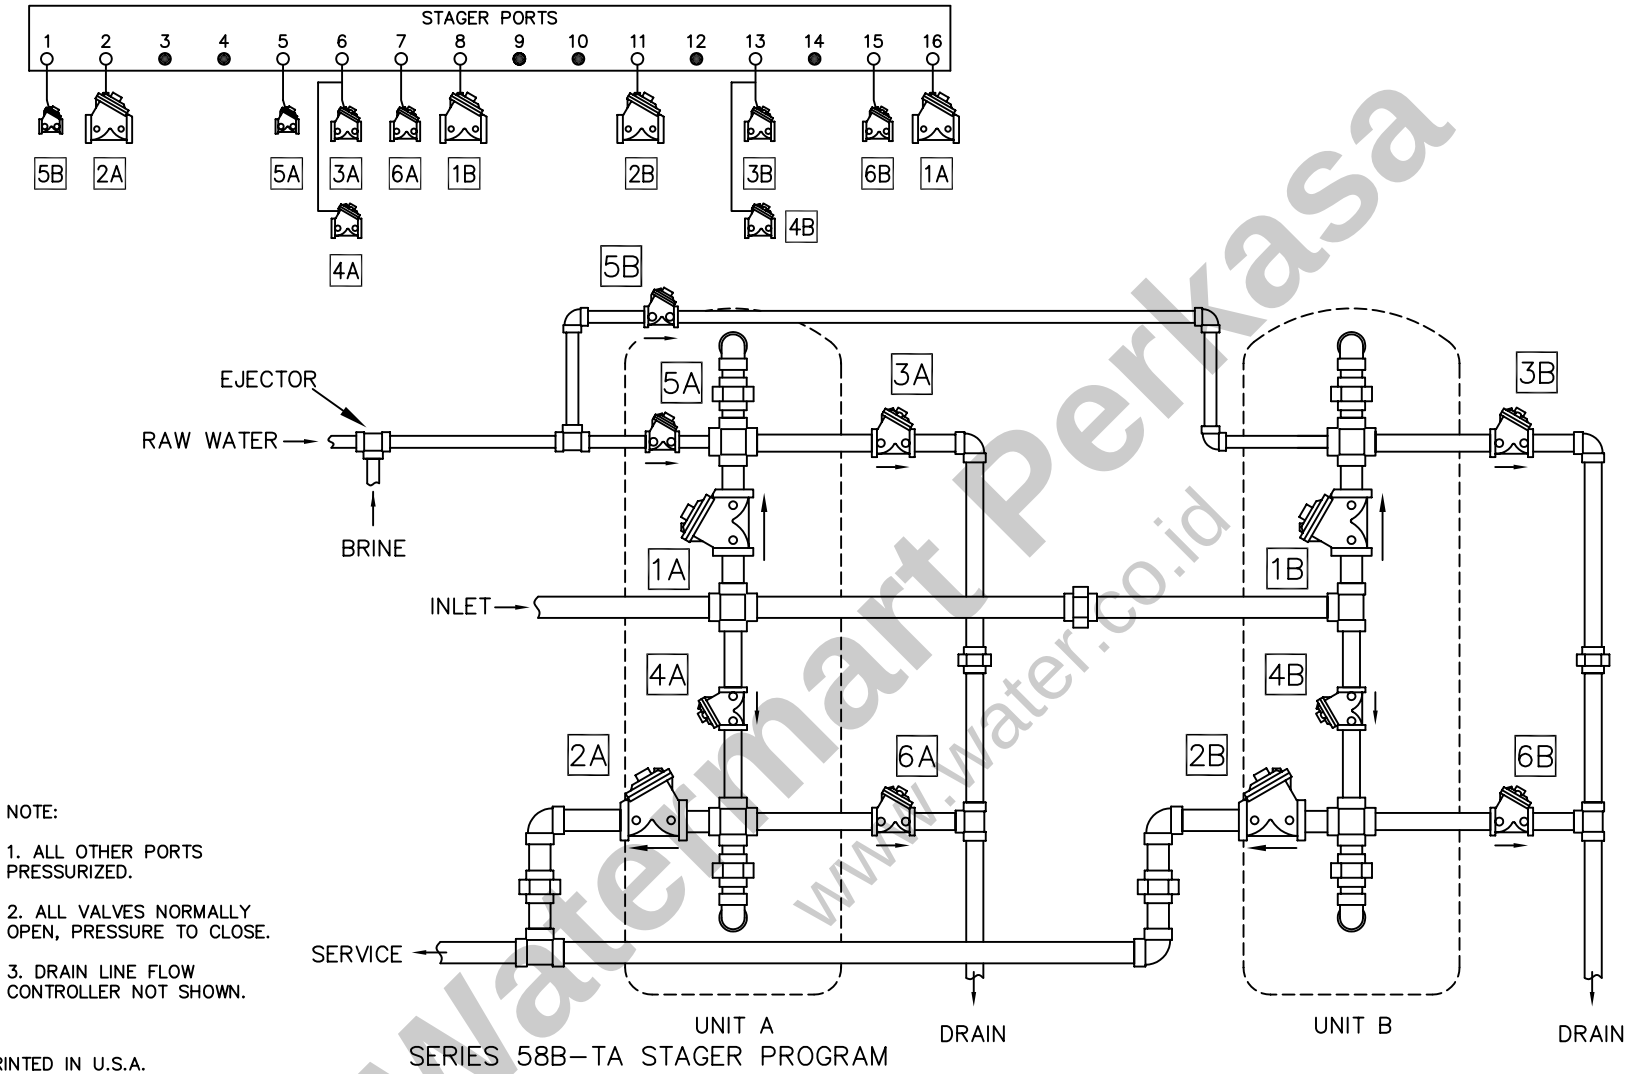

NOTE:

1. ALL OTHER PORTS PRESSURIZED.
2. ALL VALVES NORMALLY OPEN, PRESSURE TO CLOSE.
3. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

SERIES 58B-TA STAGER PROGRAM

PRINTED IN U.S.A.

NOTCH	POS.	FUNCTION		PORTS VENTED (NOTE 1)	VALVES OPEN	NOTCH	POS.	FUNCTION		PORTS VENTED (NOTE 1)	VALVES OPEN
		UNIT A	UNIT B					UNIT A	UNIT B		
A	0	SERVICE	STANDBY	1,2,8,16	5B,2A,1B,1A	J	4	STANDBY	SERVICE	8,11,16	1B,2B,1A
B						K					
C						L					
D	1	BACKWASH	SERVICE	6,8,11	3A,4A,2B,1B	M					
E	2	BRINE/SLOW RINSE	SERVICE	5,7,8,11	5A,6A,2B,1B	N					
F						P	5	SERVICE	BACKWASH	2,13,16	2A,3B,4B,1A
G						Q	6	SERVICE	BRINE/SLOW RINSE	1,2,15,16	5B,2A,6B,1A
H	3	FAST RINSE	SERVICE	7,8,11,16	6A,1B,2B,1A	R	7	SERVICE	FAST RINSE	2,8,15,16	2A,1B,6B,1A

REV	DESCRIPTION	ECO	DWN	DATE	APVD
B	CORRECTED ERROR IN STAGER POS. NOS.	NONE	MSM	21MAR03	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com


TWO UNIT ALTERNATING SOFTENER

SCALE | DRAWN | DATE | DWG NO

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

TWO TANK ALTERNATING SOFTENER W/ TIMED BRINE (58-TB STAGE

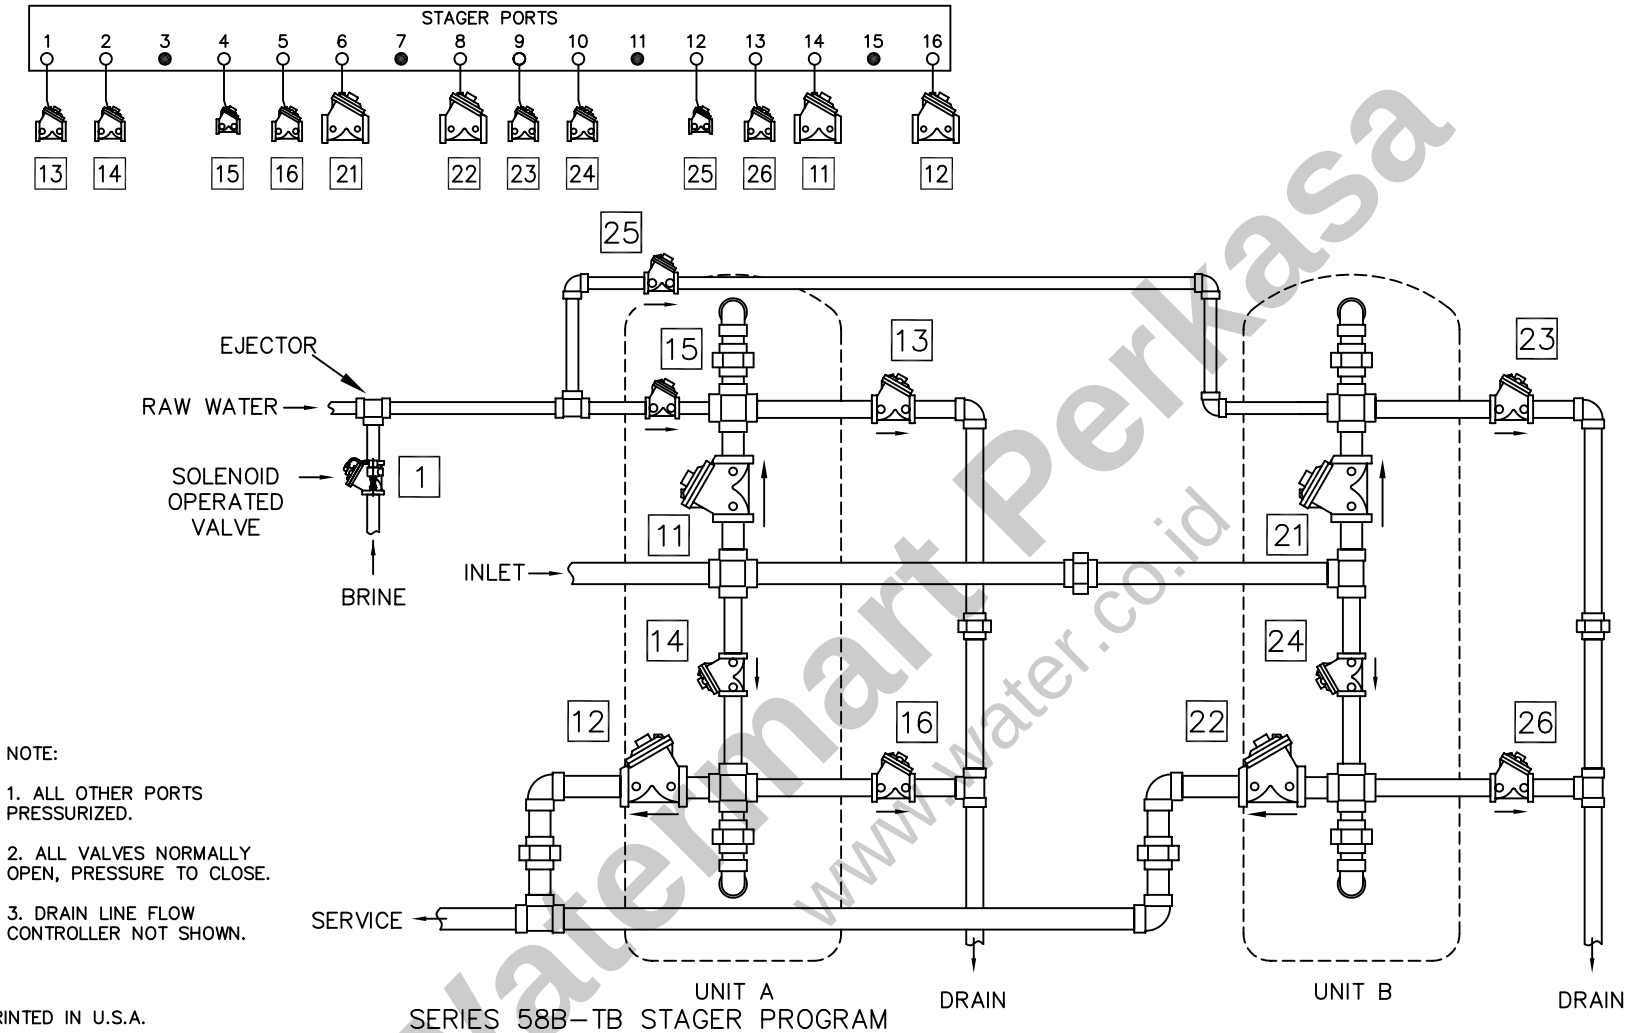

NOTE:

1. ALL OTHER PORTS PRESSURIZED.
2. ALL VALVES NORMALLY OPEN, PRESSURE TO CLOSE.
3. DRAIN LINE FLOW CONTROLLER NOT SHOWN.

PRINTED IN U.S.A.

SERIES 58B–TB STAGER PROGRAM

NOTCH	POS.	FUNCTION		PORTS VENTED (NOTE 1)	VALVES OPEN	NOTCH	POS.	FUNCTION		PORTS VENTED (NOTE 1)	VALVES OPEN
		UNIT A	UNIT B					UNIT A	UNIT B		
A	0*	SERVICE	STANDBY	6,14,16	21,11,12	J	5*	STANDBY	SERVICE	6,8,14	21,22,11
B						K					
C						L					
D	1	BACKWASH	SERVICE	1,2,6,8	13,14,21,22	M	6	SERVICE	BACKWASH	9,10,14,16	23,24,11,12
E						N					
F	2**	BRINE DRAW	SERVICE	4,5,6,8	15,16,21,22	P	7**	SERVICE	BRINE DRAW	12,13,14,16	25,26,11,12
G	3	SLOW RINSE	SERVICE	4,5,6,8	15,16,21,22	Q	8	SERVICE	SLOW RINSE	12,13,14,16	25,26,11,12
H	4	FAST RINSE	SERVICE	5,6,8,14	16,21,22,11	R	9	SERVICE	FAST RINSE	6,13,14,16	21,26,11,12

* – NOTCH LOCATION FOR 1ST AUX. CAM/SWITCH

** – NOTCH LOCATION FOR 2ND AUX. CAM/SWITCH

REV	DESCRIPTION	ECO	DWN	DATE	APVD
A	INITIAL RELEASE	NONE	JWB	31JUL01	

16605 West Victor Rd
New Berlin, WI 53151
262-326-0100
www.aq-matic.com

TWO UNIT ALTERNATING SOFTENER W/ TIMED BRINE

SCALE | DRAWN | DATE | DWG. NO.

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

AQUAMATIC®
FLUID EJECTORS

COMMERCIAL CONTROL VALVE ACCESSORIES

MADE IN THE USA
OF FOREIGN & DOMESTIC PARTS



OPERATING SPECIFICATIONS


Min Operating Pressure	20 psi (1.37)
Max Operating Pressure	125 psi (8.6 bars)
Operating Temperature	up to 140°F (60°)
Body Material	PVC

For optimum performance, ejectors should be installed with a section of straight pipe extending from the discharge side.


DIMENSIONS (NOMINAL & APPROXIMATE)

MODEL #	SIZE		DIAMETER				
	NPT	SOCKET	A	B	C	D	E
540	1/2"	-	1.37" (35 mm)	2.75" (70 mm)	-	1.31" (33 mm)	-
540S	-	1/2"	1.37" (35 mm)	2.75" (70 mm)	-	1.31" (33 mm)	0.88" (22 mm)
541	3/4"	-	1.72" (44 mm)	3.44" (88 mm)	-	1.5" (40 mm)	-
541S	-	3/4"	1.72" (44 mm)	3.44" (88 mm)	-	1.56" (40 mm)	1" (25 mm)
542	1"	-	1.72" (44 mm)	3.44" (88 mm)	-	1.81" (46 mm)	-
542S	-	1"	1.88" (48 mm)	3.75" (96 mm)	-	1.81" (46 mm)	1.13" (20 mm)
544	1-1/2"	-	2.09" (53 mm)	4.19" (106 mm)	5.25" (143 mm)	2.38" (60 mm)	-
544S	-	1-1/2"	2.38" (60 mm)	4.75" (120 mm)	5.63" (143 mm)	2.38" (60 mm)	1.38" (35 mm)
546	2"	-	2.78" (71 mm)	5.56" (168 mm)	6.63" (168 mm)	3" (76 mm)	-
546S	-	2"	2.78" (71 mm)	5.56" (168 mm)	6.63" (168 mm)	3.06" (78 mm)	1.5" (38 mm)

NPT

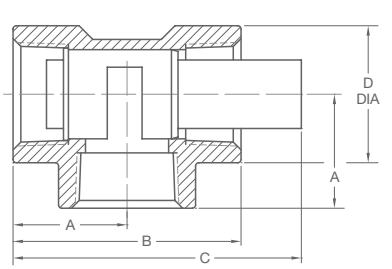

Socket Weld

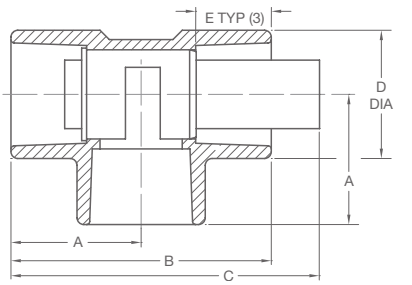

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

PERFORMANCE

INLET PRESSURE PSI (BAR)	NOZZLE FLOW RATES - GAL/MIN (L/MIN)													
	540 (1/2")						541 (3/4")				542 (1")			
	540-1 BLACK	540-2 BROWN	540-3 RED	540-4 WHITE	540-5 BLUE	DRAW FACTOR	541-1 RED	541-2 WHITE	541-3 BLUE	DRAW FACTOR	542-1 RED	542-2 WHITE	542-3 BLUE	DRAW FACTOR
20 (1.37)	0.13 (0.52)	0.18 (0.73)	0.31 (1.22)	0.62 (2.44)	0.90 (3.50)	0.80	1.07 (4.30)	1.80 (7.20)	2.90 (11.2)	1.15	4.40 (17.3)	5.80 (22.0)	8.20 (31.7)	1.04
30 (2.06)	0.16 (0.60)	0.23 (0.84)	0.38 (1.42)	0.76 (2.82)	1.10 (4.00)	0.78	1.30 (4.90)	2.10 (8.30)	3.50 (13.0)	1.20	5.40 (20.0)	7.10 (25.0)	10.0 (36.0)	0.94
40 (2.75)	0.19 (0.74)	0.26 (1.00)	0.44 (1.74)	0.88 (3.50)	1.20 (4.90)	0.82	1.50 (6.00)	2.50 (10.2)	4.00 (16.0)	1.26	6.20 (24.5)	8.20 (31.0)	11.7 (45.0)	0.95
50 (3.44)	0.21 (0.86)	0.29 (1.20)	0.49 (2.02)	0.98 (4.00)	1.40 (5.70)	0.83	1.70 (7.00)	2.80 (11.8)	4.50 (18.4)	1.25	7.00 (28.4)	9.20 (36.0)	13.0 (52.0)	0.85
60 (4.13)	0.23 (0.91)	0.32 (1.27)	.54 (2.14)	1.10 (4.20)	1.50 (6.08)	0.85	1.80 (7.40)	3.10 (12.5)	4.90 (19.5)	1.15	7.60 (30.0)	10.0 (38.0)	14.4 (55.0)	0.82
70 (4.82)	0.25 (0.96)	0.35 1.34)	0.58 (2.25)	1.20 (4.40)	1.65 (6.40)	0.88	2.00 (7.80)	3.30 (13.1)	5.30 (20.5)	1.08	8.20 (31.6)	10.8 (40.0)	15.5 (58.0)	0.80
80 (5.51)	0.27 (1.05)	0.37 (1.47)	0.62 (2.47)	1.30 (4.90)	1.80 (7.00)	0.85	2.15 (8.50)	3.60 (14.4)	5.70 (22.5)	1.00	8.70 (34.8)	11.6 (44.0)	16.6 (63.0)	0.78
100 (6.9)	0.30 (1.13)	0.42 (1.60)	0.70 (2.66)	1.40 (5.20)	2.00 (7.50)	0.83	2.40 (9.20)	4.00 (15.5)	6.40 (24.3)	0.95	9.80 (37.5)	13.0 (47.5)	18.5 (68.5)	0.75
120 (8.27)	0.33 (1.21)	0.46 (1.70)	0.76 (2.84)	1.50 (5.60)	2.20 (8.10)	0.80	2.60 (9.80)	4.30 (16.6)	7.00 (26.0)	0.90	10.7 (40.0)	14.2 (50.7)	20.0 (73.0)	0.70
Nozzle Dia. E	0.038	0.042	0.052	0.070	0.086	-	0.098	0.125	0.157	-	0.188	0.219	0.250	-
Throat Dia. F	0.076	0.086	0.104	0.140	0.172	-	0.196	0.250	0.312	-	0.375	0.438	0.500	-

INLET PRESSURE PSI (BAR)	NOZZLE FLOW RATES - GAL/MIN (L/MIN)											
	544 (1-1/2")						546 (2")					
	544-1 RED	544-2 WHITE	544-3 BLUE	544-4 YELLOW	544-5 ORANGE	DRAW FACTOR	546-1 RED	546-2 WHITE	546-3 BLUE	546-4 YELLOW	546-5 ORANGE	DRAW FACTOR
20 (1.37)	8.70 (34.2)	13.4 (52.5)	17.0 (66.0)	21.0 (83.0)	24.5 (97.6)	1.08	29.5 (116)	35.7 (140)	28.4 (152)	45.0 (178)	52.0 (207)	1.08
30 (2.06)	10.6 (39.5)	16.4 (60.0)	20.7 (76.0)	25.7 (96.0)	30.0 (112)	1.12	36.0 (134)	43.7 (162)	47.0 (176)	55.0 (205)	64.0 (240)	1.12
40 (2.75)	12.3 (48.4)	19.0 (21.2)	24.0 (93.4)	29.7 (117)	34.7 (138)	1.16	41.7 (164)	50.0 (198)	54.0 (216)	64.0 (252)	74.0 (294)	1.16
50 (3.44)	13.8 (58.0)	21.2 (86.0)	26.8 (108)	33.2 (136)	38.8 (160)	1.15	46.6 (190)	56.5 (230)	61.0 (250)	71.4 (292)	83.0 (340)	1.15
60 (4.13)	15.0 (16.3)	23.0 (91.0)	29.5 (114)	36.3 (144)	42.5 (170)	0.95	51.0 (200)	62.0 (244)	66.5 (265)	78.0 (310)	91.0 (360)	0.95
70 (4.82)	16.3 (62.0)	25.0 (96.0)	31.8 (120)	39.3 (152)	46.0 (178)	0.90	55.0 (212)	67.0 (256)	71.0 (278)	84.5 (325)	98.0 (380)	0.90
80 (5.51)	17.4 (68.0)	27.0 (105)	34.0 (132)	42.0 (166)	49.0 (195)	0.80	59.0 (232)	71.0 (280)	77.0 (306)	90.0 (357)	106 (416)	0.80
100 (6.9)	19.5 (74.0)	30.0 (113)	38.0 (142)	47.0 (180)	55.0 (210)	0.80	66.0 (250)	80.0 (300)	86.0 (330)	100 (385)	118 (445)	0.80
120 (8.27)	21.3 (78.0)	32.8 (120)	41.5 (152)	51.5 (190)	60.0 (225)	0.75	72.0 (268)	87.0 (325)	94.0 (350)	110 (410)	130 (480)	0.75
Nozzle Dia. E	0.281	0.312	0.359	0.406	0.438	-	0.469	0.500	.0547	0.578	0.625	-
Throat Dia. F	0.562	0.625	0.719	0.812	0.875	-	0.938	1.000	1.094	1.156	1.250	-

Data based on: 1. Water media specific gravity 1.0; 2. Suction lift 3 ft. (1 meter); 3. Discharge head 0 ft. or meters; 4. Media temperature 60°F (15°C)


Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

PERFORMANCE

Fig. 1: Efficiency vs. Backpressure

At different inlet pressure. Suction lift 3 feet (1 m).

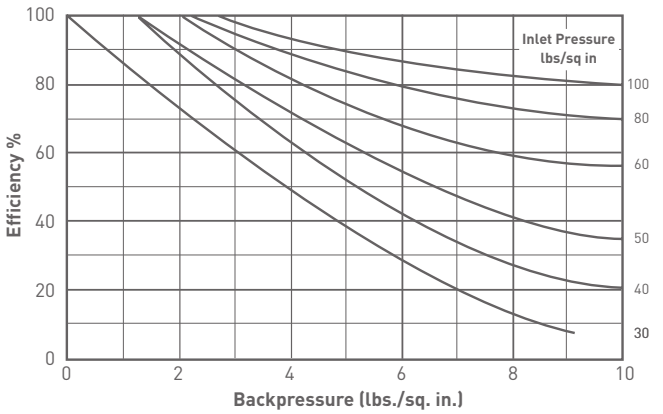

SPECIFIC GRAVITY

FLUID	SPECIFIC GRAVITY
Saturated Brine (NaCl)	1.2
Hydrocholoric Acid (30%)	1.14
Sodium Hydroxide (50%)	1.52
Sulphuric Acid (20%)	1.13
Sodium Hydroxide (25%)	1.16

DRAW RATE

TO CALCULATE DRAWRATE

A = Nozzle flowrate
B = Specific gravity
C = Draw factor
D = Efficiency factor

$$\text{Drawrate} = \frac{(A)\ (C)\ (D)}{B}$$

HOW TO ORDER

1. Select series number based on required pipe size.
2. Add "S" suffix to series number if socket weld ends desired.
3. Add nozzle size suffix as determined by supply pressure and required flow (see example).

Watermart Perkasa
www.water.co.id

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id

Watermart Perkasa
www.water.co.id

16605 West Victor Rd. New Berlin, WI 53151
P: 262–326–0100 | www.aq–matic.com | techsupport@aq–matic.com
© 2016 AQ Matic Valve and Controls Company, Inc. All rights reserved.
All AQ Matic trademarks and logos are owned by AQ Matic or its affiliates. All other registered and unregistered trademarks and logos are the property of their respective owners. Because we are continuously improving our products and services AQ Matic reserves the right to change specifications without prior notice. AQ Matic is an equal opportunity employer.
3026818 REV D MA2016

PT Watermart Perkasa
Email: sales@water.co.id Phone: +62-21-316-1671
Whatsapp (text only): +62815-8609-3500
Website: www.water.co.id